




C.E. SMITH COMPANY, INC. P.O. Box 9948 GREENSBORO, NORTH CAROLINA 27429
P: 336 273 0166 F: 336 273 0570 WWW.CESMITHCO.COM




Post Style



Pontoon Style

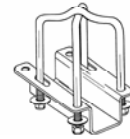

For 2" wide frame

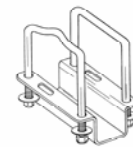

For 3" wide frame

Installing Post Style Boat Guide-On

P/N 27620 - P/N 27640 - P/N 27670

1. Place u-bolts as shown above for either 2" wide or 3" wide trailer frame
2. Use 1 flat u-bolt and 1 formed u-bolt with washers and nuts to loosely attach each u-shaped bracket under or on top of trailer frame at desired locations.
3. Insert a guide-on upright post into each of the u-brackets to the desired width. **Do not fully tighten bolts.**
4. **Make sure the upright posts are seated level in the u-brackets before completely tightening the u-bolts.** Finish tightening the u-bolt connections.

TOOLS REQUIRED =
2-- 9/16" WRENCHES

PARTS INCLUDED P/N 27620 - 40"

2 Galv. Tube Uprights	27622PG
2 White PVC Cap	11331
2 White PVC Tube, 36"	11338
2 Galv. U-brackets	27603PG
8 3/8"-16 Nylon Locknuts	10810
8 3/8" USS Flat Washers	10960
2 3/8"-16 x 3-1/2" x 5" U-bolts	15258
2 3/8"-16 x 3-1/2" x 5" Formed U-bolts	15259

PARTS INCLUDED P/N 27640 - 60"

2 Galv. Tube Uprights	27622PG
2 White PVC Cap	11331
2 White PVC Tube, 56"	11370
2 Galv. U-brackets	27603PG
8 3/8"-16 Nylon Locknuts	10810
8 3/8" USS Flat Washers	10960
2 3/8"-16 x 3-1/2" x 5" U-bolts	15258
2 3/8"-16 x 3-1/2" x 5" Formed U-bolts	15259

PARTS INCLUDED P/N 27670 - PONTON

2 Galv. Tube Uprights	27641PG
2 White PVC Cap	11331
2 White PVC Tube, 18"	11374
2 Galv. U-brackets	27603PG
8 3/8"-16 Nylon Locknuts	10810
8 3/8"-16 USS Flat Washers	10960
2 3/8"-16 x 3-1/2" x 5" U-bolts	15258
2 3/8"-16 x 3-1/2" x 5" Formed U-bolts	15259