


MALONE


CHANGING THE WAY YOU GET THERE[®]

STAX[™] PRO2

VERTICAL FOLD-DOWN CARRIER
FOR TWO KAYAKS

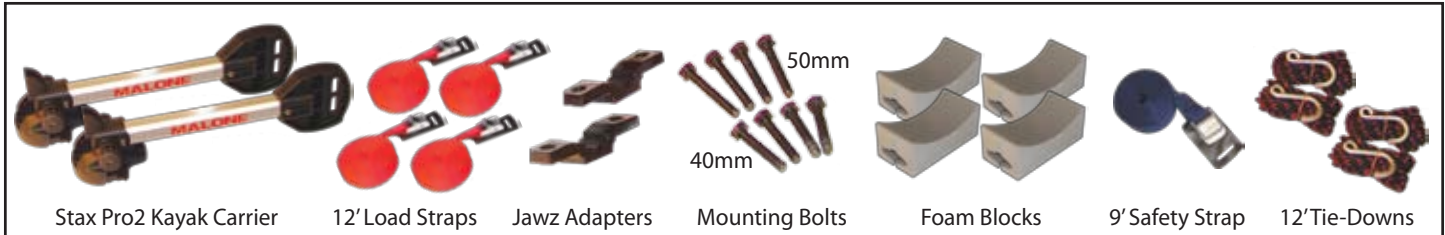

Installation & Loading Instructions - Please Read Before Beginning

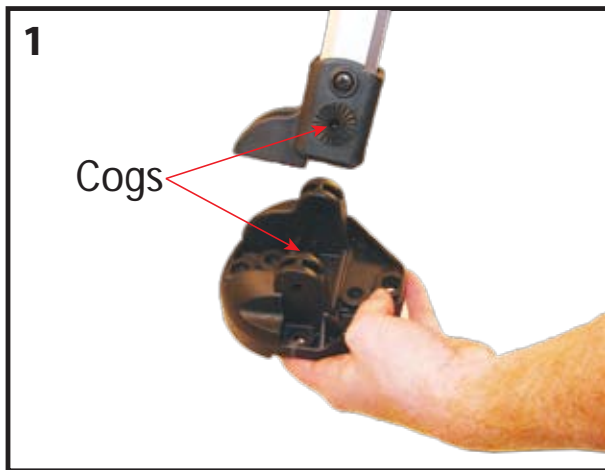

Step 1: Assembling the Stax[™] Pro2

- Insert the bottom of the post into the top of the base. Position so the cogs on the post are in contact with the cogs on the base. See image 1.

- Insert a 100mm bolt into the square hole located in the top of the base. See image 2.



- With the holes in the base and post aligned, push the bolt through the two assemblies until the end of the bolt is exposed. Note: Confirm that the head of the bolt is fully seated into the base. See image 3.

MALONE

CHANGING THE WAY YOU GET THERE[®]

Installation & Loading Instructions - MPG115MD Stax[™]Pro2



- . Install a black round tightening knob onto the exposed end of the bolt. See image 4.


Step 2: Installing Carriers to the Cross Bars

- . Loosen the tightening knob and place the carrier into the fold-down position. Insert a mounting bolt into the forward side hex hole. See image 5.



- . Insert a mounting bolt through one hole of a Jawz mounting adapter and loosely apply a t-knob. See image 6.

- . Raise the carrier into the upright position. Place the carrier onto the front cross bar with the oval side of the carrier facing the front of the vehicle. Swing the Jawz under the cross bar as shown. See image 7.

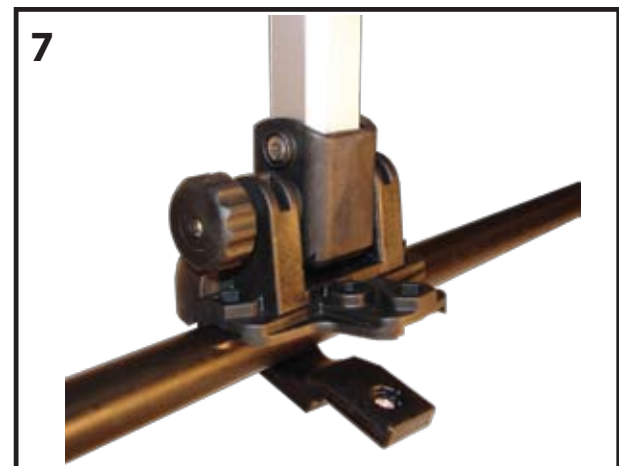


MALONE

CHANGING THE WAY YOU GET THERE[®]


Installation & Loading Instructions - MPG115MD Stax[™] Pro2



- . Insert a mounting bolt into the rear side hex hole and down through the Jawz mounting adapter. See image 8.

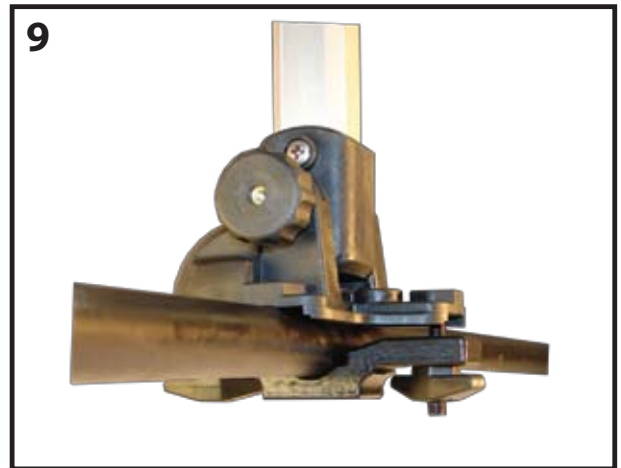

- . Apply a t-knob to the bolt and slightly tighten until the carrier is secure on the cross bar. Repeat for the second carrier and rear cross bar. See image 9.

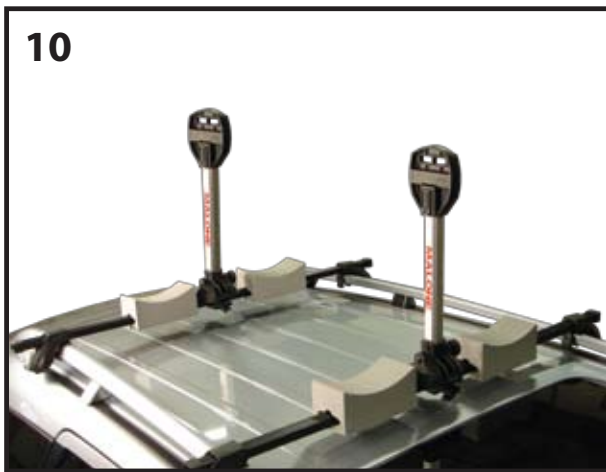

- . Raise the carriers to the up-position and confirm alignment. Tighten the t-knobs until both carriers are securely fixed to the cross bars. Place foam blocks onto the cross bars and next to the carriers. See image 10.

Note: When transporting one kayak; the carriers should be positioned so that the distance from the carriers to the cross bar towers is exactly the width of the kayak.

Step 3: Loading the Kayaks


- . Route the free end of a 12' load strap through one strap slot in the top of the carrier. Pull the free end back until there is an even loop. Repeat for the second carrier. See image 11.




MALONE

CHANGING THE WAY YOU GET THERE[®]


Installation & Loading Instructions - MPG115MD Stax[™]Pro2

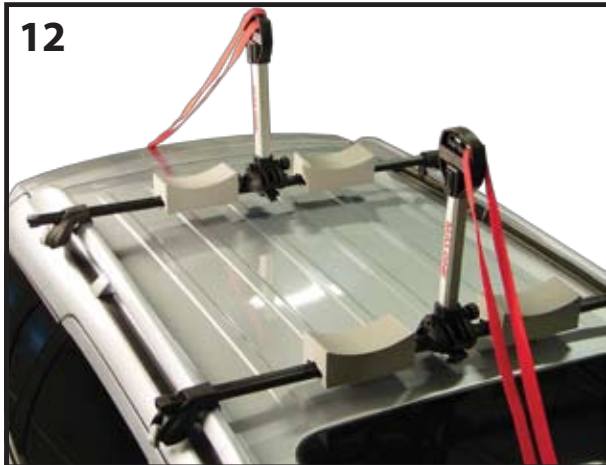

- Place the strap loops parallel to the carriers with the front strap loop on the windshield and the rear strap loop on the back of the vehicle. See image 12.

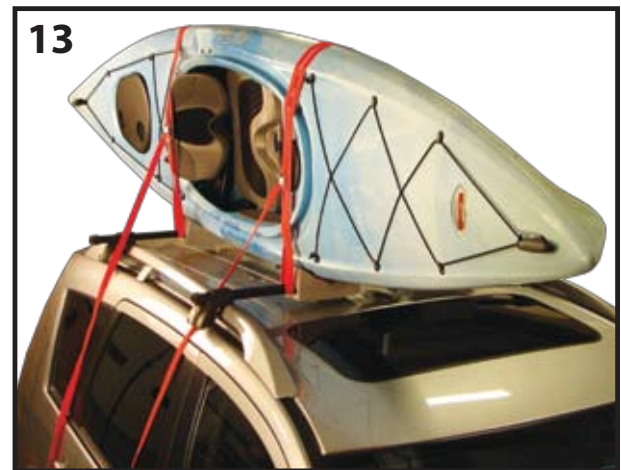

- Place the 1st kayak onto the foam blocks and against the carriers. Place the loops over the kayak. Dress the free ends of the straps under the cross bar and back up and through the buckles. Pull down to tighten. See image 13.

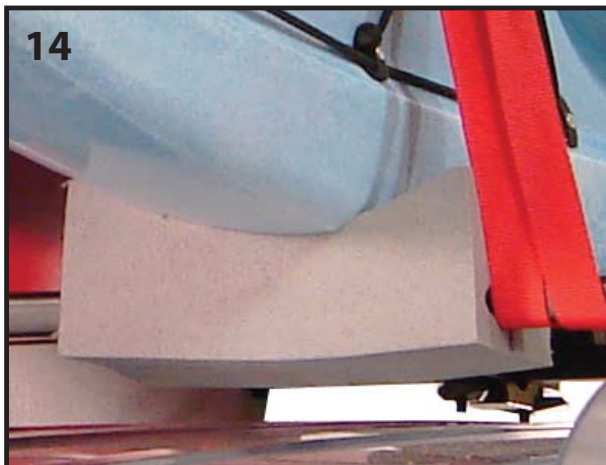

- Confirm that the kayak is evenly seated on the foam blocks and securely strapped to the carriers. See image 14.

- Repeat steps 11-14 for loading the second kayak. See image 15.



MALONE

CHANGING THE WAY YOU GET THERE®

Installation & Loading Instructions - MPG115MD Stax™ Pro2



- . Install the blue safety strap around the center of both kayaks. This is easiest done by holding the buckle and throwing the free end over the top of both kayaks. Dress the free end back under the kayaks, and, up and through the buckle. Pull down to tighten. See image 16.

- . Installation of the safety strap will cause the kayaks to slightly shift and loosen the red load straps. Re-tighten all four load straps so the kayaks are held firm. See image 17.



- . Install the bow & stern safety tie-downs per the enclosed MPG370 instructions. See image 18.

Note: The foam blocks should be stored away and the carriers placed in the down position when not transporting kayaks.

Always check mounting hardware, load straps and safety tie-down lines for proper and secure attachment before transport. Use of this product for any other application other than kayak transport voids warranty.

MALONE®

CHANGING THE WAY YOU GET THERE


MPG370 BOW & STERN LINE KIT



Attach hook to rope (steps A-D)



Thread free end of cord through hook.

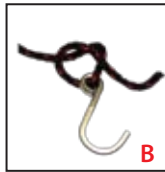

Create a "left over right" knot & tighten.



Create a "right over left" knot & tighten.



Pull to test for knot strength.


Attach and dress rope to vehicle and boat (steps E-O)



Attach S-hook to vehicle tow ring or other sturdy body part.



Keeping the rope tight and S-hook in place, thread the free end up and through a strong point on the kayak

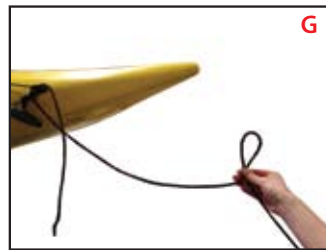

Make a loop in the rope 12" to 14" away from the kayak or canoe.



Bend the loop over leaving a large opening as shown.



Pass the loop through the opening.



Pull to create a tight knot.



Thread the free end of the rope through the loop.




Pull the free end up until the rope is sufficiently tight.



Hold the rope secure with one hand.



Form a knot with the free end and tighten. Form a second knot for safety purposes.

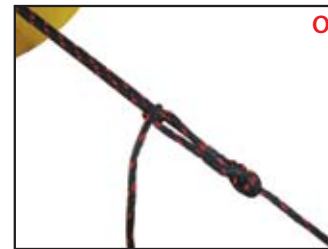

The line should be tight and secure. Repeat for second tie-down.

MALONE AUTO RACKS, 81 County Road, Westbrook, Maine 04092

Phone: 207-774-9100 Fax: 207-615-0551

Website: www.maloneautoracks.com Email: technical@maloneautoracks.com

MALONE[®]

CHANGING THE WAY YOU GET THERE

Limited Lifetime Warranty

The Malone Auto Racks (Malone) Limited Lifetime Warranty covers certain Malone-brand products that have been specifically identified for inclusion in the program and is effective for as long as the original retail purchaser owns the product. This warranty is terminated when the original retail purchaser sells or otherwise transfers the product to any other person or entity.

Subject to the limitations and exclusions described in this warranty, Malone will remedy defects in materials and/or workmanship by repairing or replacing, at its option, a defective product without charge for parts or labor. Malone may elect, at its option, not to repair or replace a defective product but rather issue to the original retail purchaser a refund equal to the purchase price paid for the product, or credit to be used toward the purchase of a replacement Malone product.

This warranty does not cover, and no warranty is given for defects or problems caused by normal wear and tear which includes but is not limited to surface (aesthetic) metal corrosion, scratches, dents, deformities, accidents, unlawful vehicle operation, or any modification of a product not performed or authorized in writing by Malone.

In addition, this warranty does not cover problems resulting from conditions beyond Malone's control including, but not limited to, theft, misuse, overloading, or failure to assemble, mount or use the product in accordance with Malone's written instructions or guidelines included with the product available to the original retail purchaser.

No warranty is given for Malone products purchased outside of the United States, Canada and Mexico.

If the product is believed to be defective, the original retail purchaser should contact the Malone dealer from whom it was purchased, who will give the original retail purchaser instructions on how to proceed. If the original retail purchaser is unable to contact the Malone dealer, or the dealer is not able to remedy the defect, the original retail purchaser should contact Malone by email at technical@maloneautoracks.com.

In the event that the product must be returned to Malone, a technician at the email address above will provide the original purchaser with return shipping instructions. The original purchaser will be responsible for the cost of mailing the product to Malone. In order to receive any remedy under this warranty, a copy of the original purchase receipt, a description of the defect and a return address must be provided.

Disclaimer of Liability

Repair or replacement of a defective product, or the issue of a refund or credit (as determined by Malone) is the original retail purchaser's exclusive remedy under this warranty. Damage to original purchaser's vehicle, cargo, or property, and/or to any other person or property is not covered by this warranty.

This warranty is expressly made in lieu of any and all other warranties, express or implied, including the warranties of merchantability and fitness for a particular purpose.

Malone's sole liability is limited to the remedy set forth above. In no event will Malone be liable for any direct, indirect, consequential, incidental, special, exemplary, or punitive damages, or, for any other damages of any kind or nature (including but not limited to, lost profits, lost income or lost sales).

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations may not be applicable. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

In addition, all vehicular transports are potentially hazardous. Any person using MALONE products are personally responsible for following the given directions for use, installation and accepts full responsibility for any and all damages or injury of any kind including death, which may result from their use.