


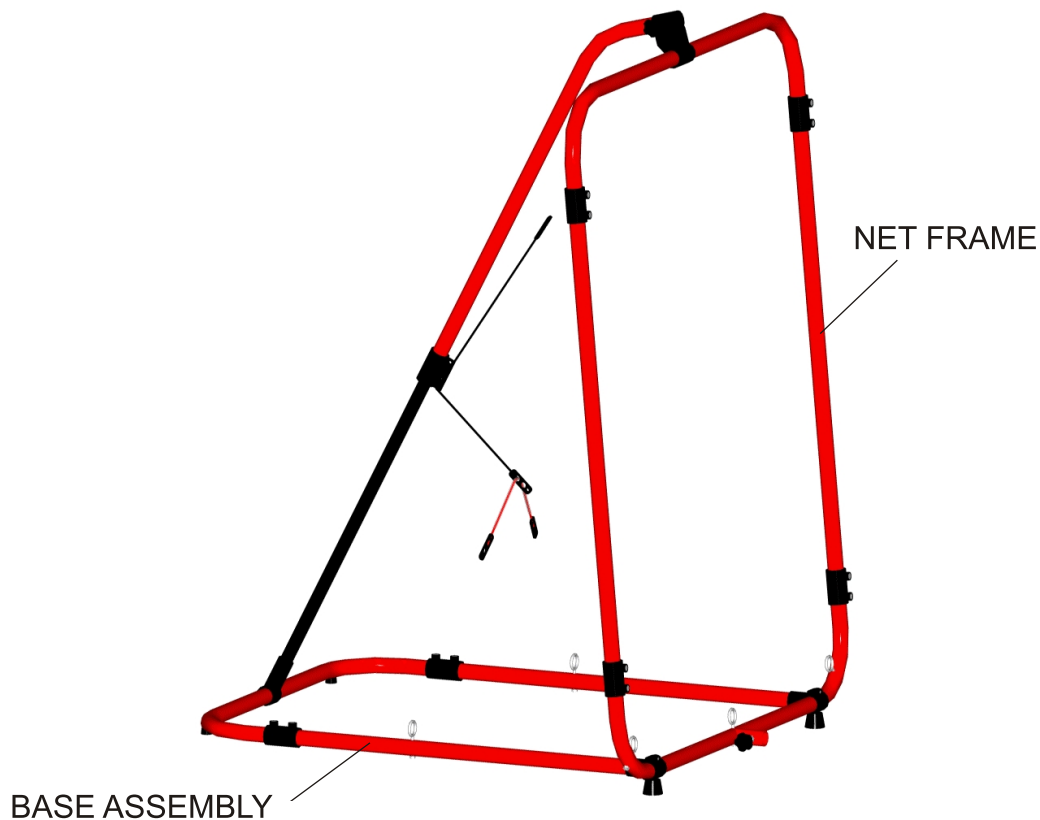


STEP 1

ASSEMBLE THE NET FRAME





GET PARTS "A", "B", AND "C". THERE ARE TWO PART "B"s, FOUR PARTS TOTAL.

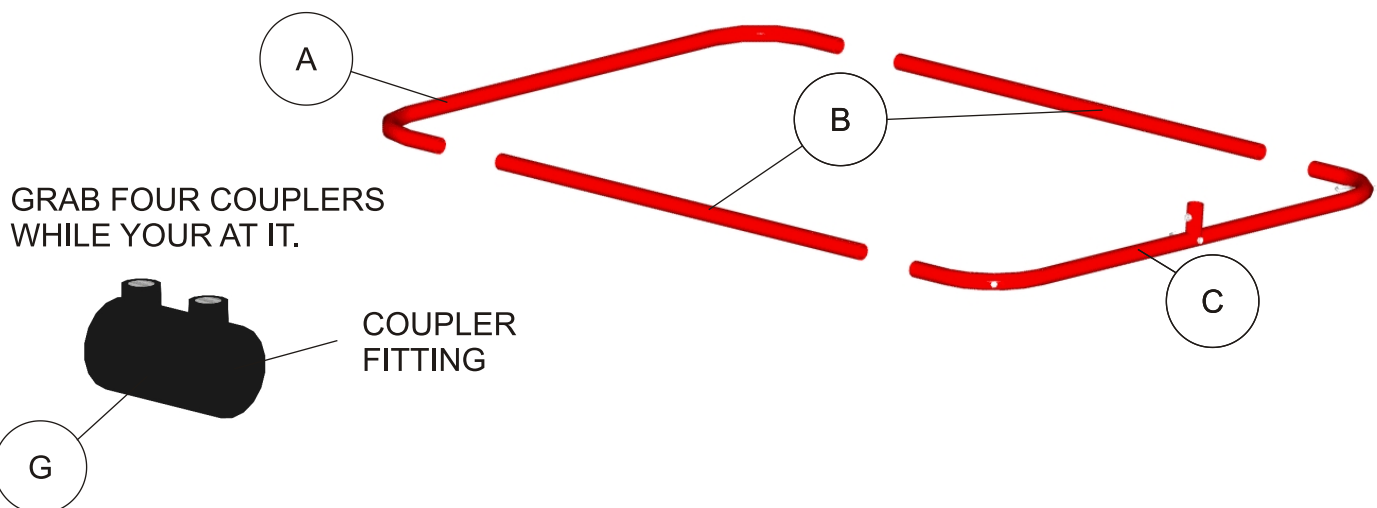



STEP 2 LAY YOUR PARTS OUT ON THE FLOOR AND ATTACH THE COUPLERS

IMPORTANT: MAKE SURE THE PIPES ARE INSERTED HALFWAY IN THE COUPLER.

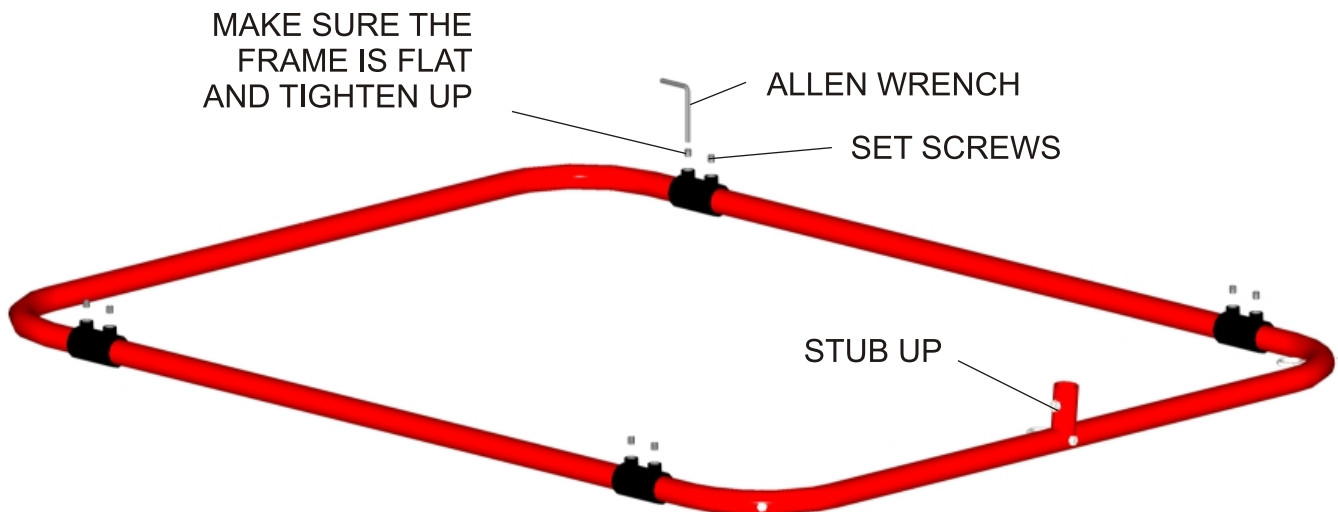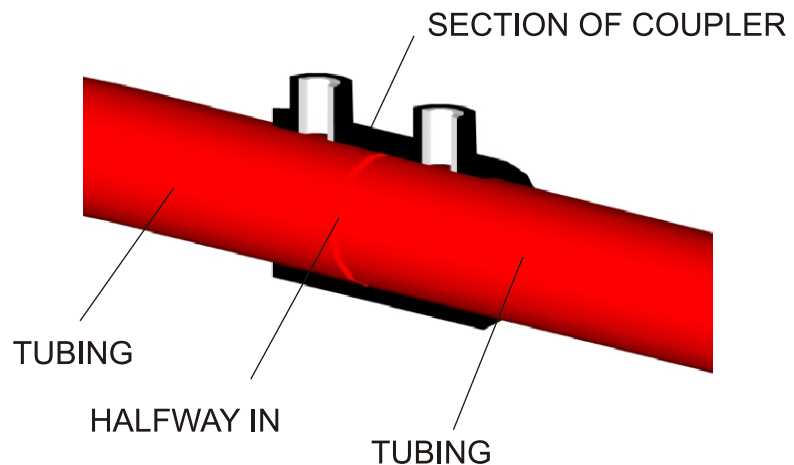




STEP 3 ATTACH BOOM SUPPORT FITTING ON THE NET FRAME

THE FITTING SPLITS TO FIT OVER THE TUBE.

IMPORTANT: THE KNOB SHOULD BE ON THE LEFT.

STUB AT THE BOTTOM OF THE FRAME IS STICKING UP

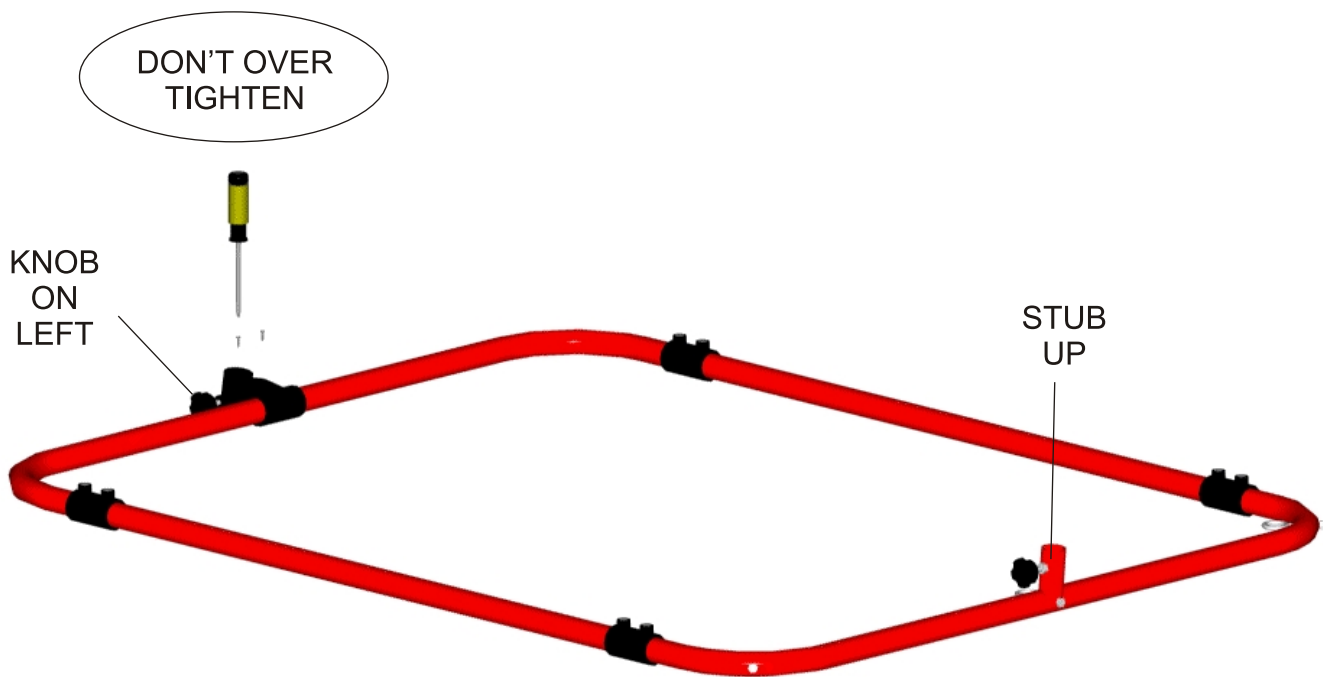

SET THIS TO THE SIDE FOR NOW




STEP 4

BASE ASSEMBLY


GET PARTS "I", AND "F". THERE ARE TWO PART "F"s, THREE PARTS TOTAL.

GRAB TWO MORE COUPLERS.

IMPORTANT: MAKE SURE PARTS "F" ARE IN THE CORRECT ORIENTATION!
EYEBOLTS UP

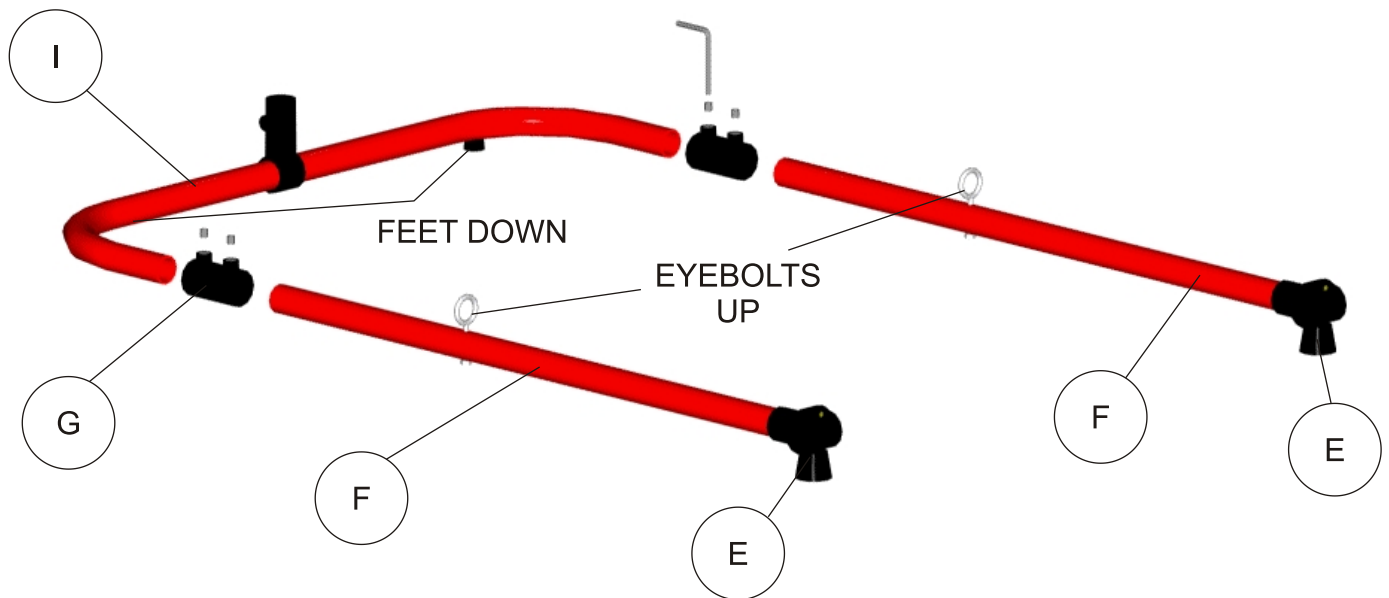

REMEMBER - HALFWAY IN

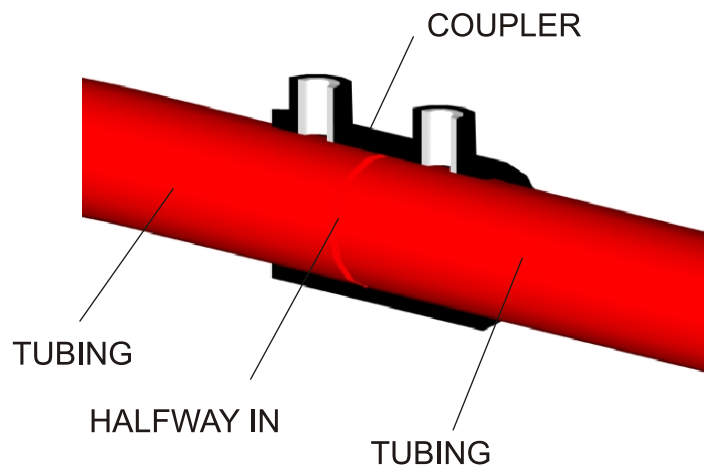




STEP 5 OPEN UP THE FOOT SPLIT FITTINGS


FIRST TAKE THE SCREWS OUT OF THE FRONT OF THE FOOT SPLIT FITTINGS AND OPEN THE FITTINGS UP.

PIVOTS OPEN LIKE A CLAM SHELL.

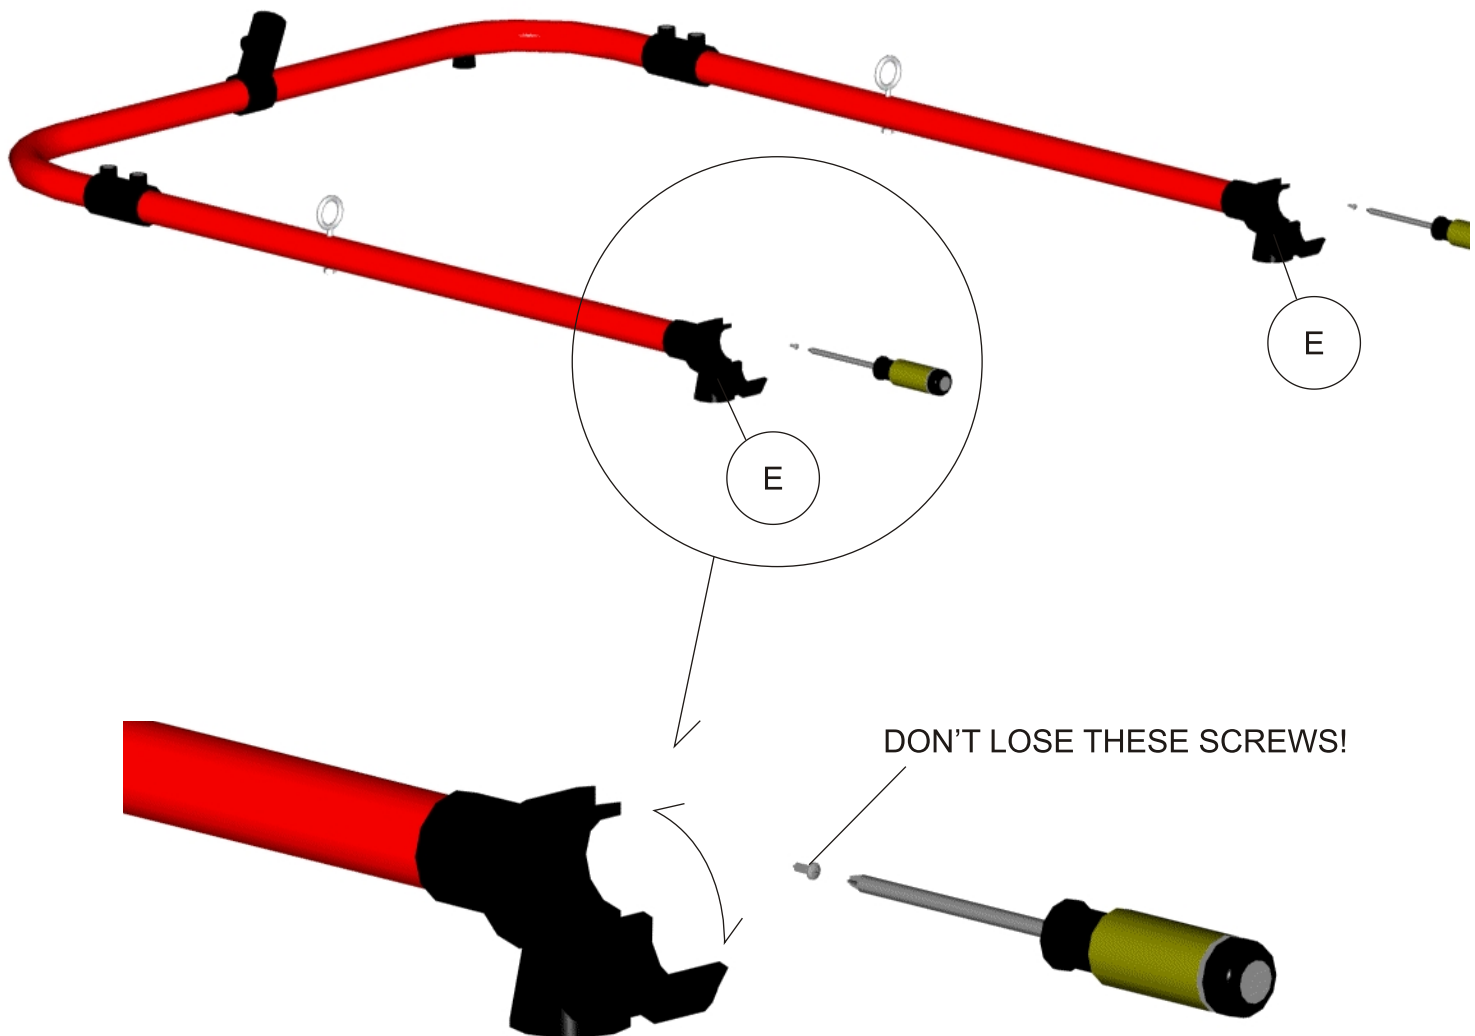




**TELESCOPES
START WITH PART M
THEN SLIDE ON PART N**

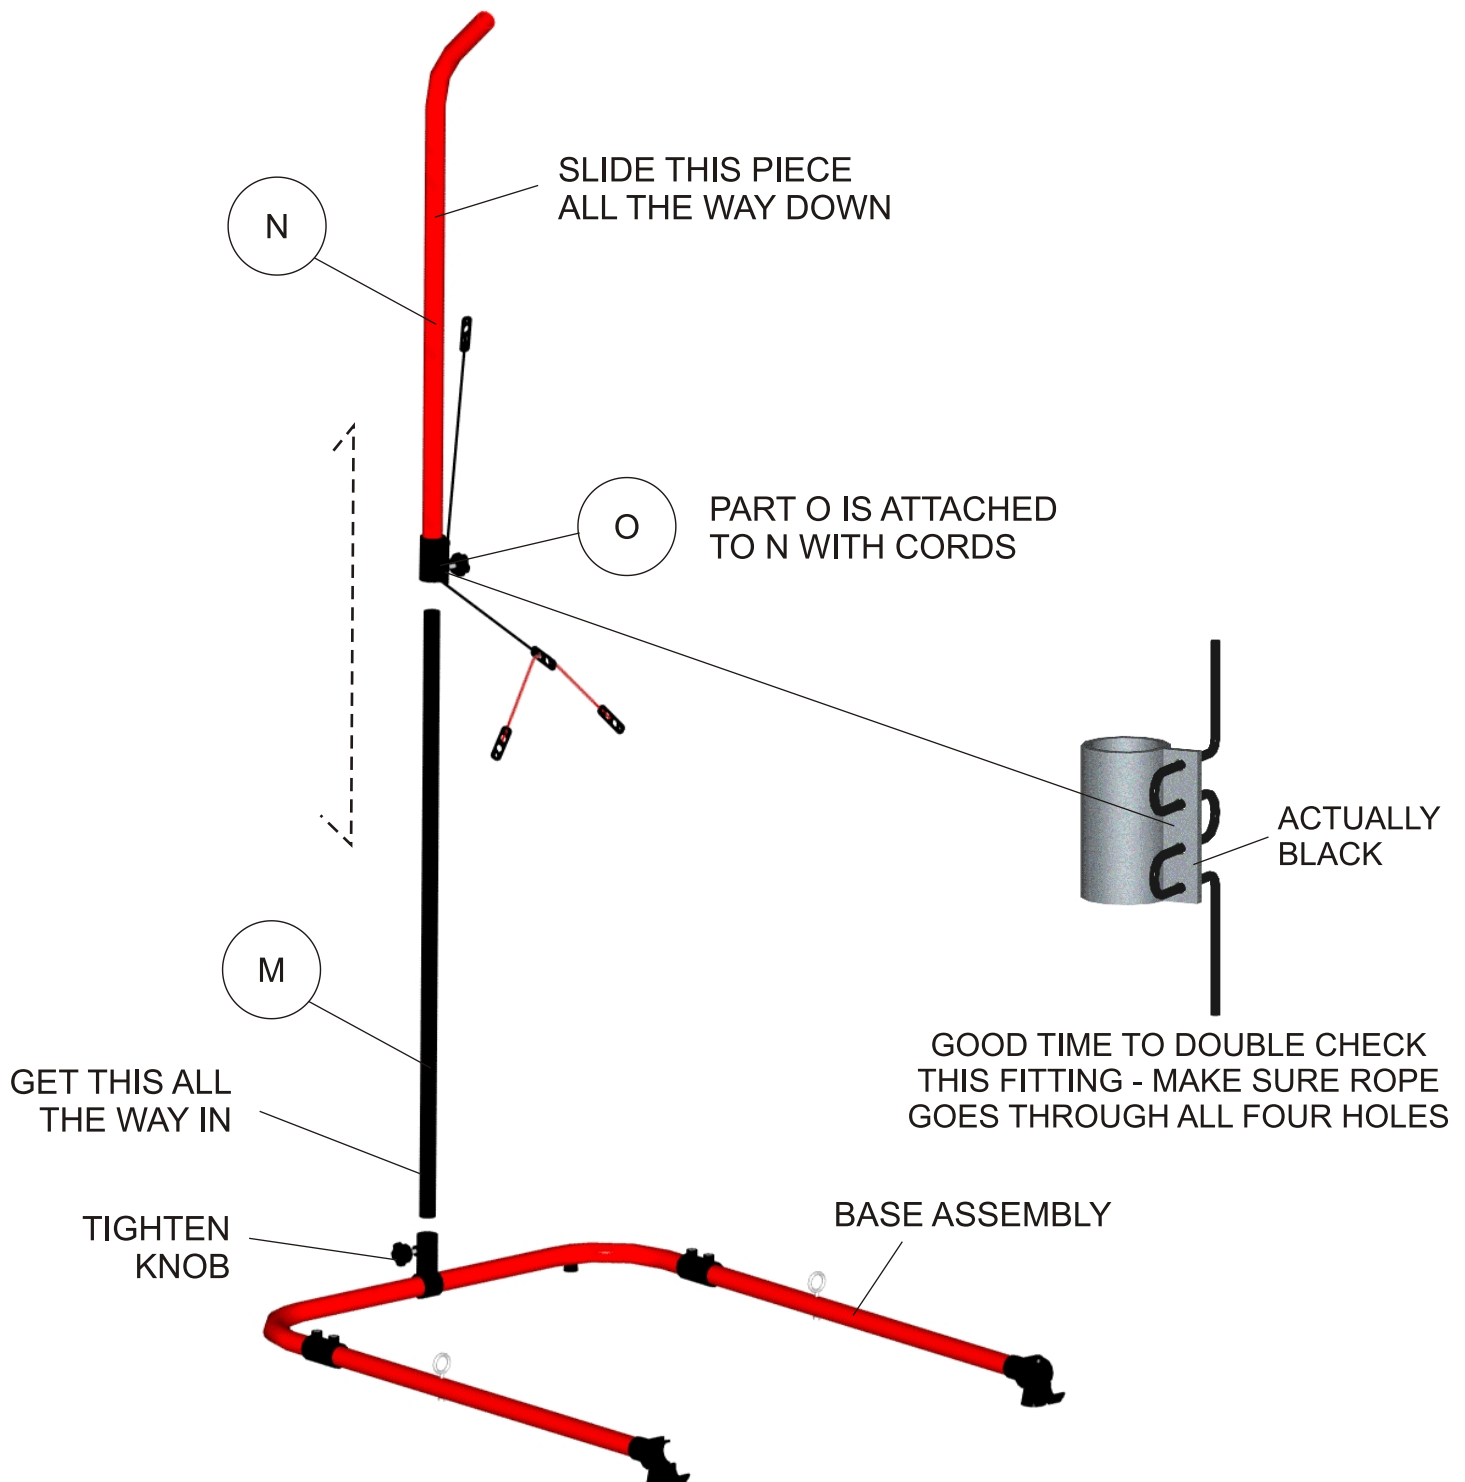



STEP 7 PUT THE NET FRAME ON THE OPEN PART OF THE FOOT SPLIT FITTINGS


AND RAISE THE TELESCOPES!

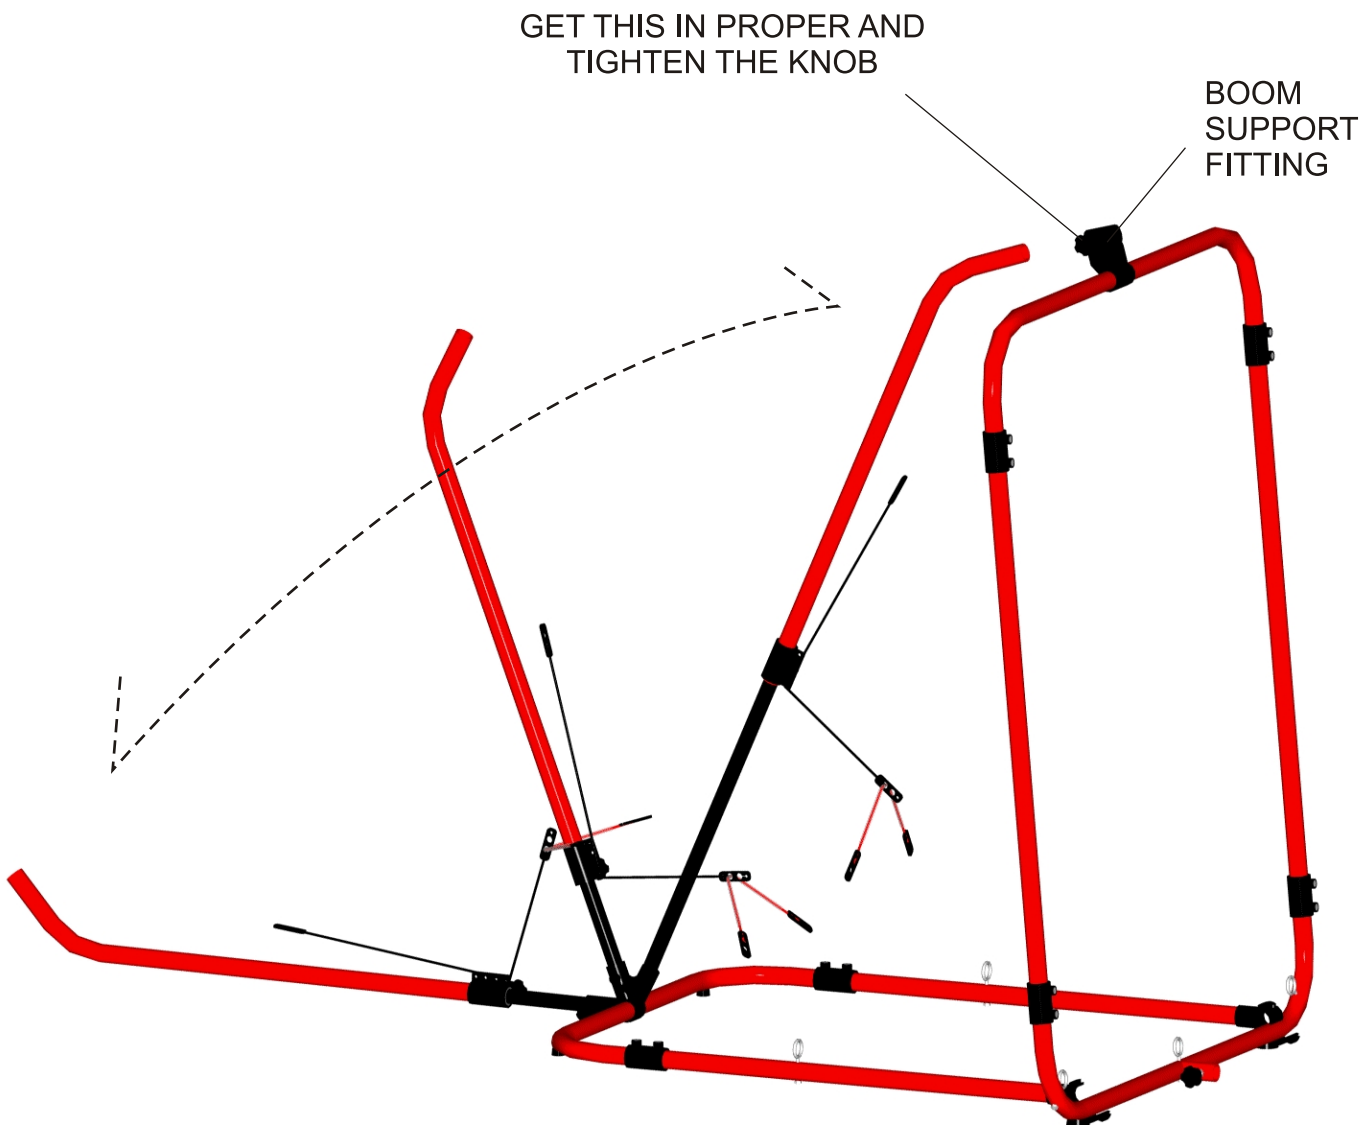



STEP 7-2

RE-ASSEMBLE FOOT SPLIT FITTINGS

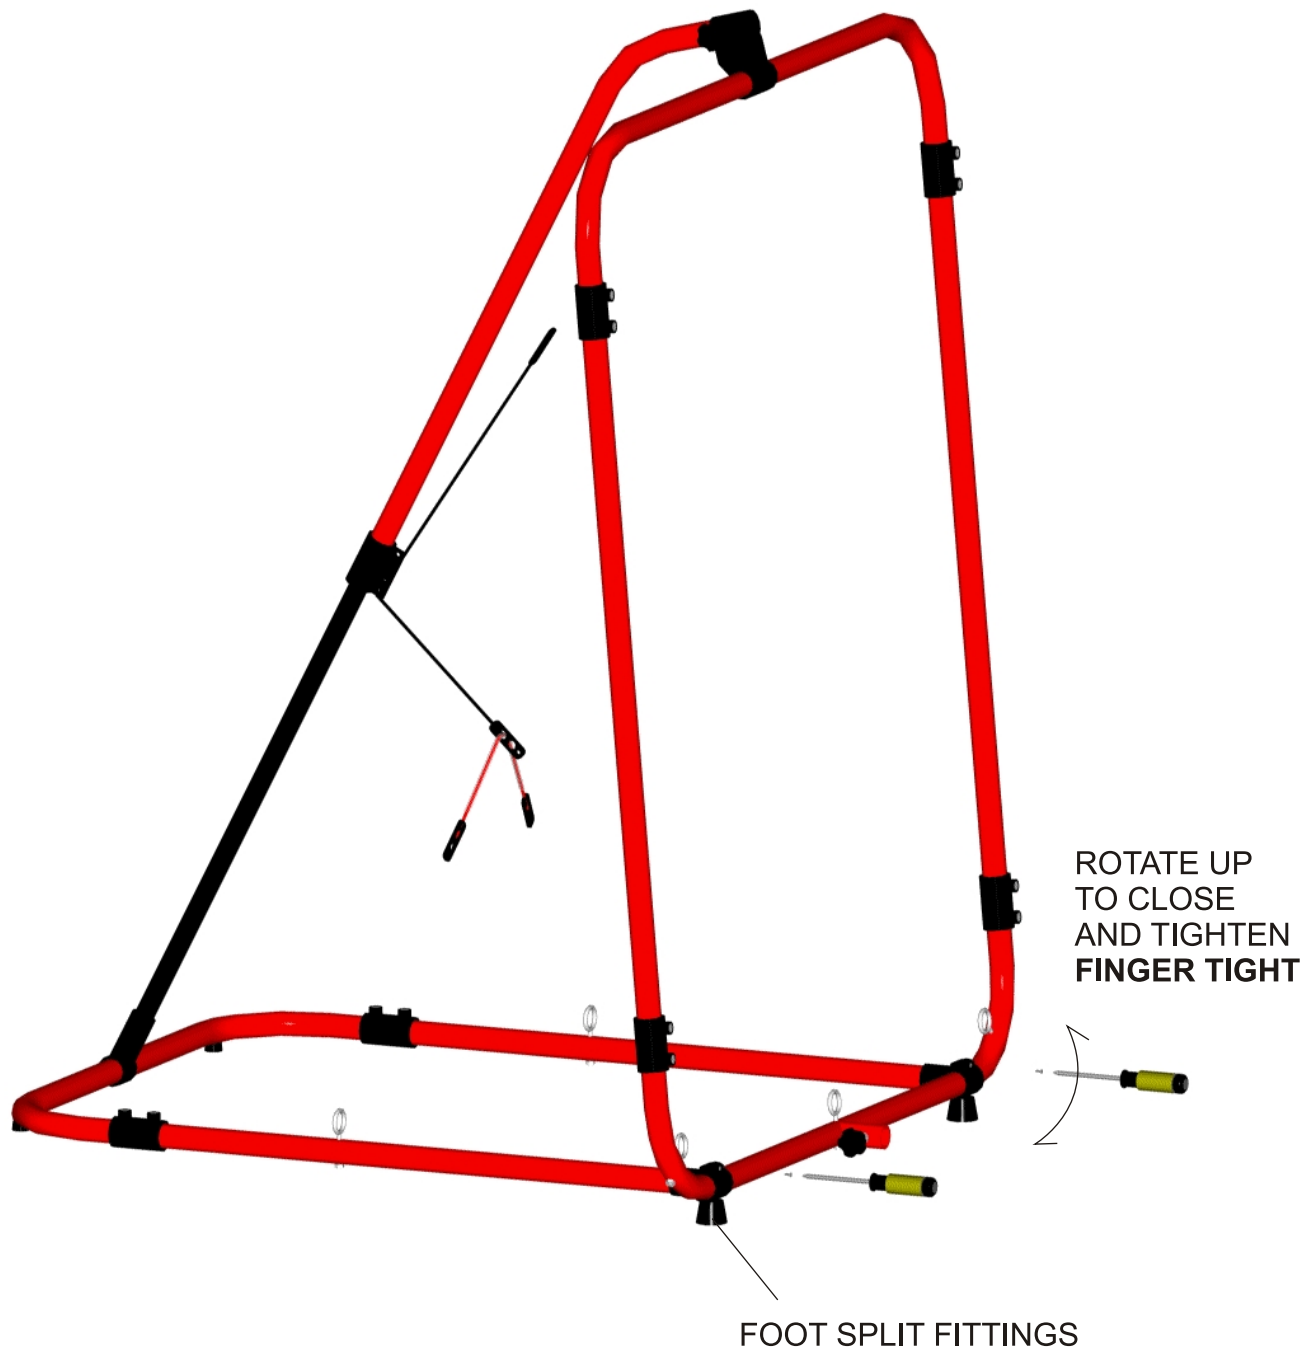




STEP 8

BOTTOM BOOM - PART L



ATTACH THE BOTTOM BOOM END PULLEY TO THE BOTTOM BOOM

THEN PUT THE BOTTOM BOOM INTO THE STUB ON THE FRONT NET FRAME.

TIGHTEN THE KNOB ON THE STUB

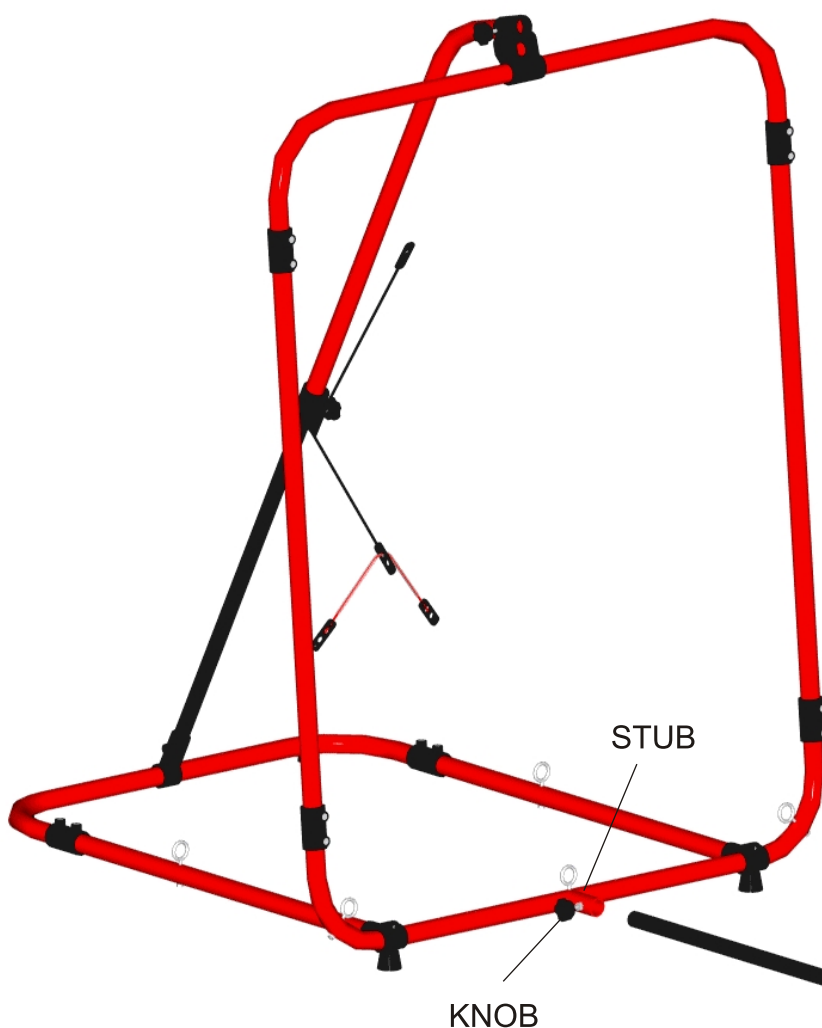

BOTTOM BOOM END PULLEY

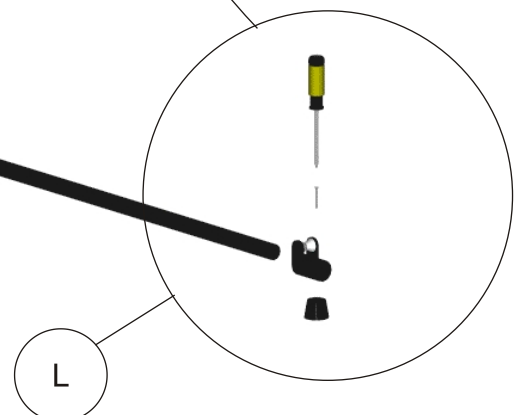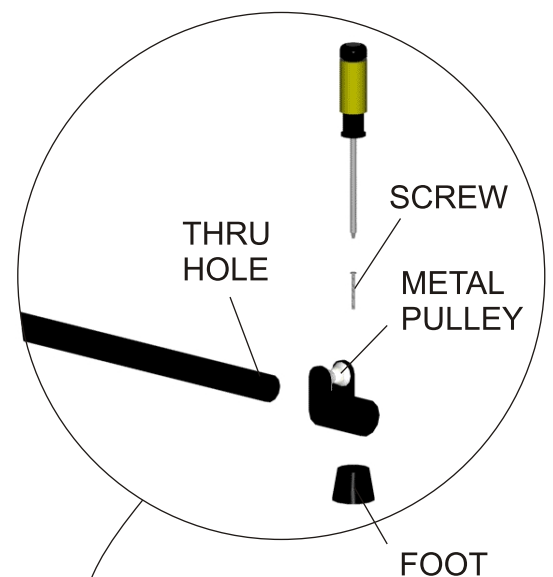




STEP 9

VERY IMPORTANT! LEVEL YOUR MACHINE OUT

WHILE ON A FLAT SURFACE, ADJUST THE FRAME BY PULLING OR PUSHING THE TELESCOPING TUBES

MAKE SURE ALL THE FEET ARE TOUCHING THE GROUND

THEN TIGHTEN THE KNOB ON THE MIDDLE TELESCOPE FITTING

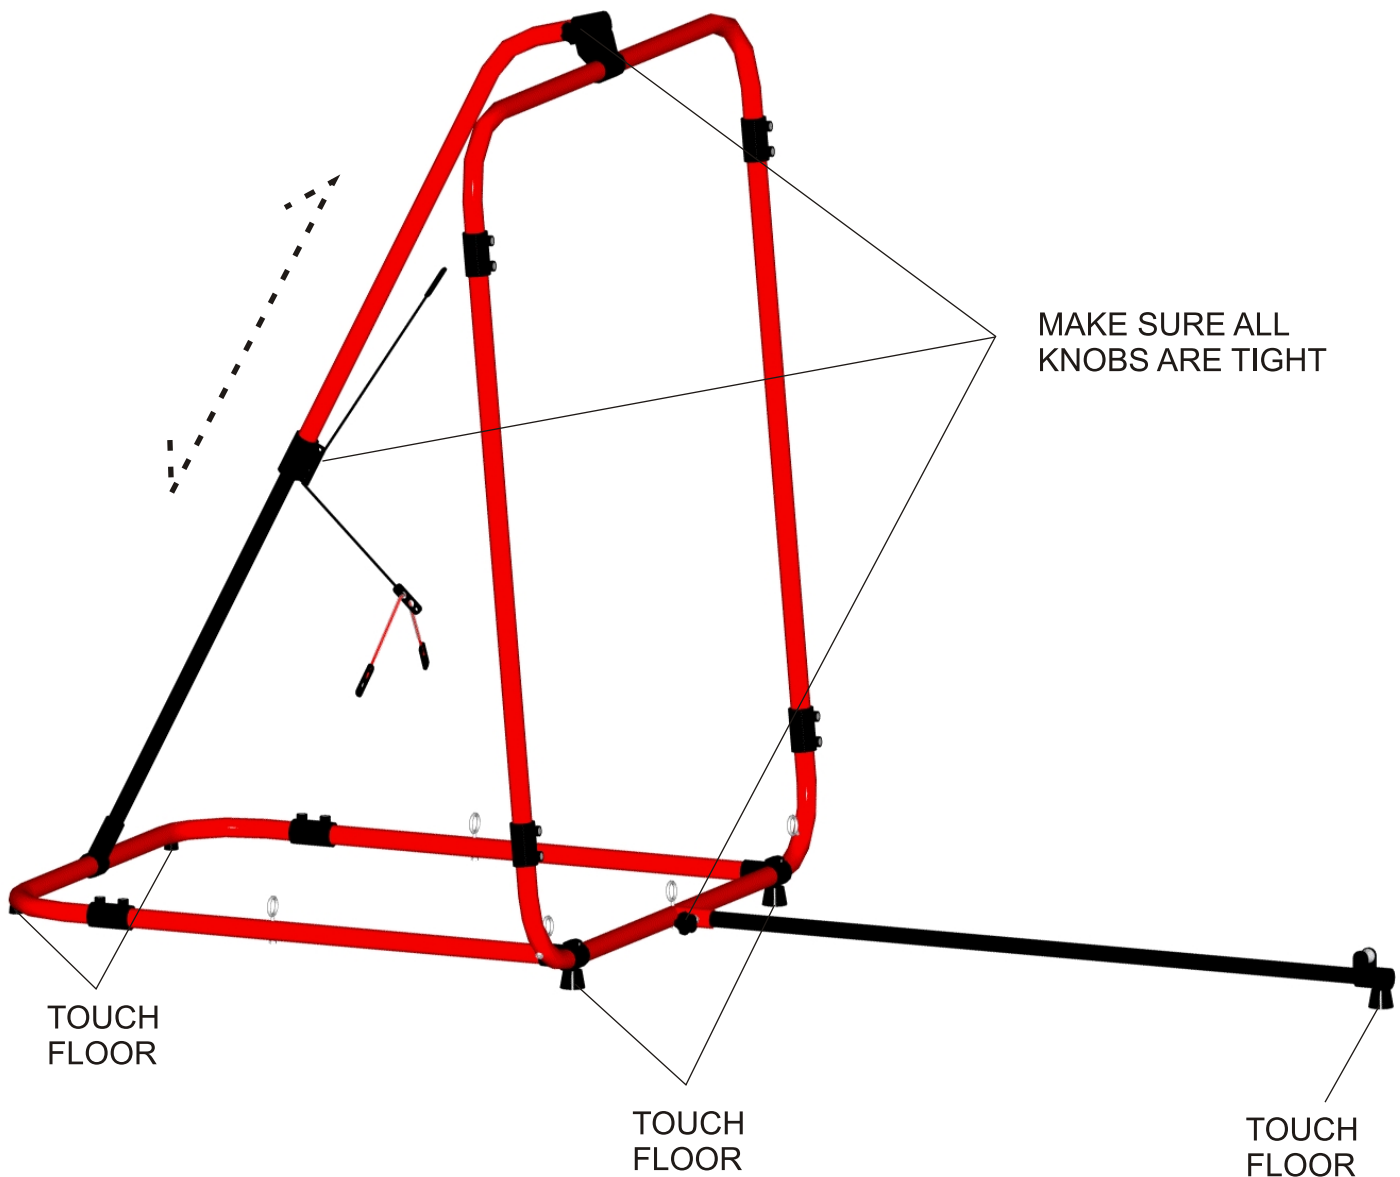





STEP 10 PUT THE TOP BOOM IN, and DO A “WALK-AROUND”

GET PART JK AND THE TOP BOOM END PULLEY - PART R (WITH THE RED PULLEY)

INSERT THE TUBING AS FAR AS IT WILL GO - ABOUT 5 INCHES

SLIDE THE END PULLEY ON

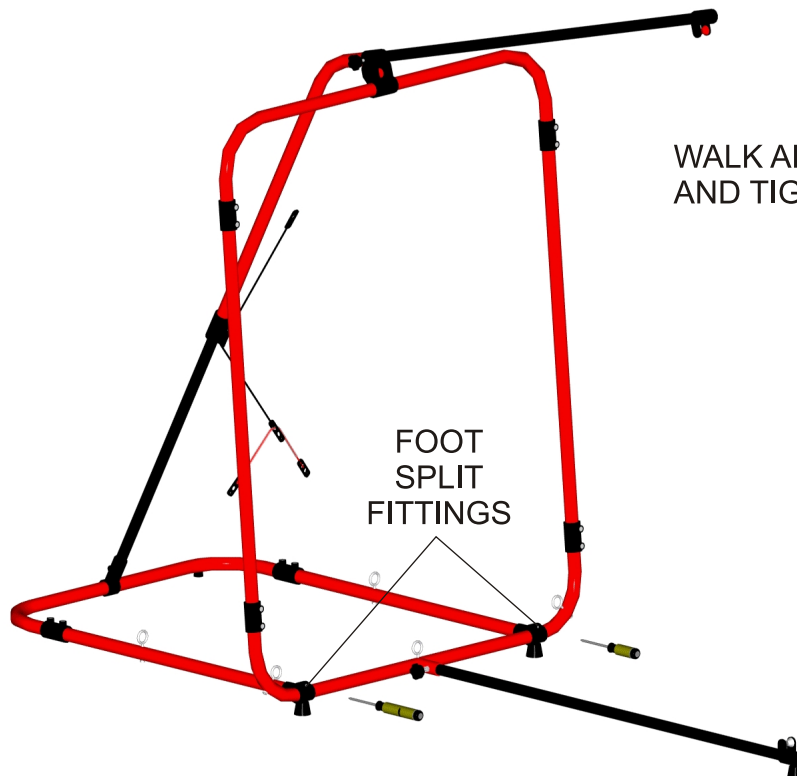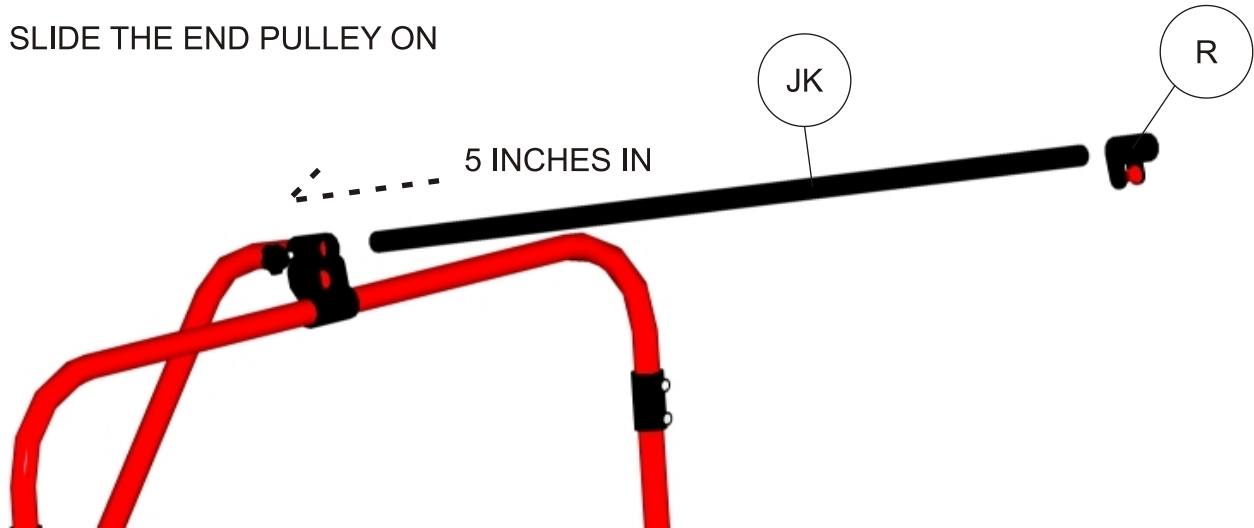


IMPORTANT:

WALK AROUND THE MACHINE
AND TIGHTEN EVERYTHING UP



STEP 11

MAKE SURE EVERY THING IS IN PLACE
AND GET READY TO ATTACH NET

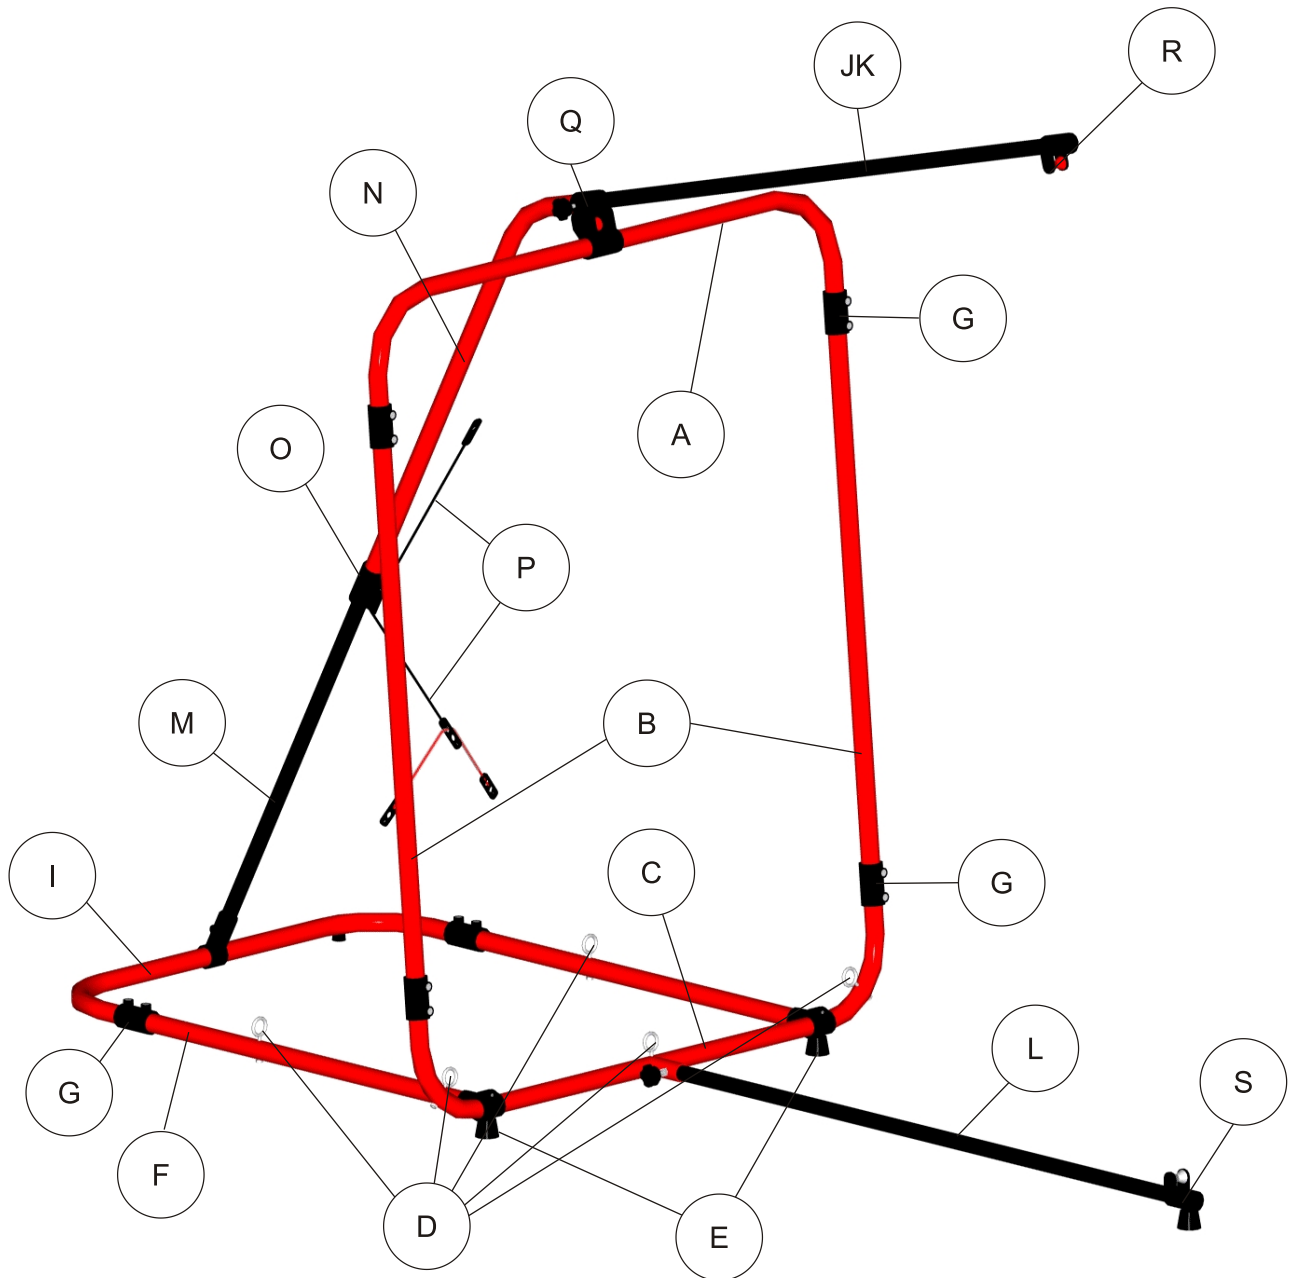



ATTACH THE NET WITH NET CLIPS PART V




CLIP EVERY
WEB DOWN
SIDES

SAME AS TOP
SKIP MIDDLE TWO WEBS



STEP 13


**INSTALL THE BUNGEEES
PART W - TWO BUNGEEES
THEY ARE BOTH THE SAME LENGTH**

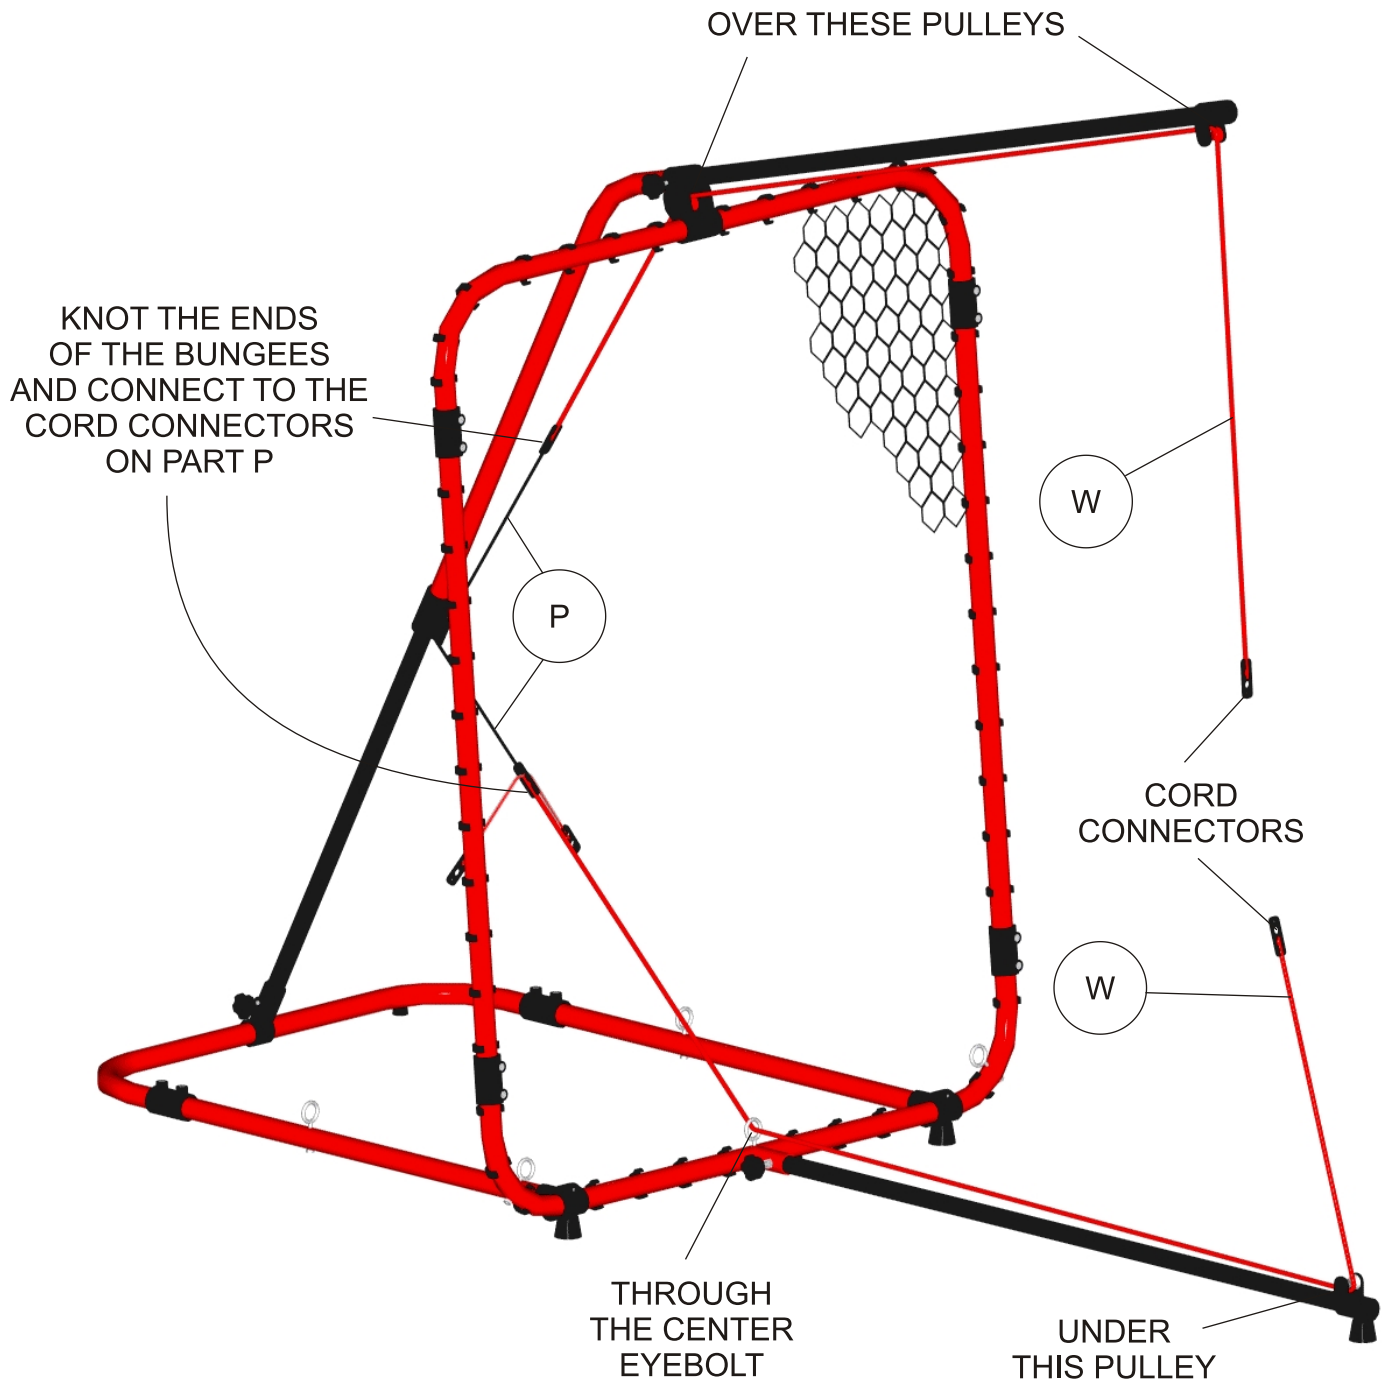



STEP 14

GET YOUR BALL ON. PART X

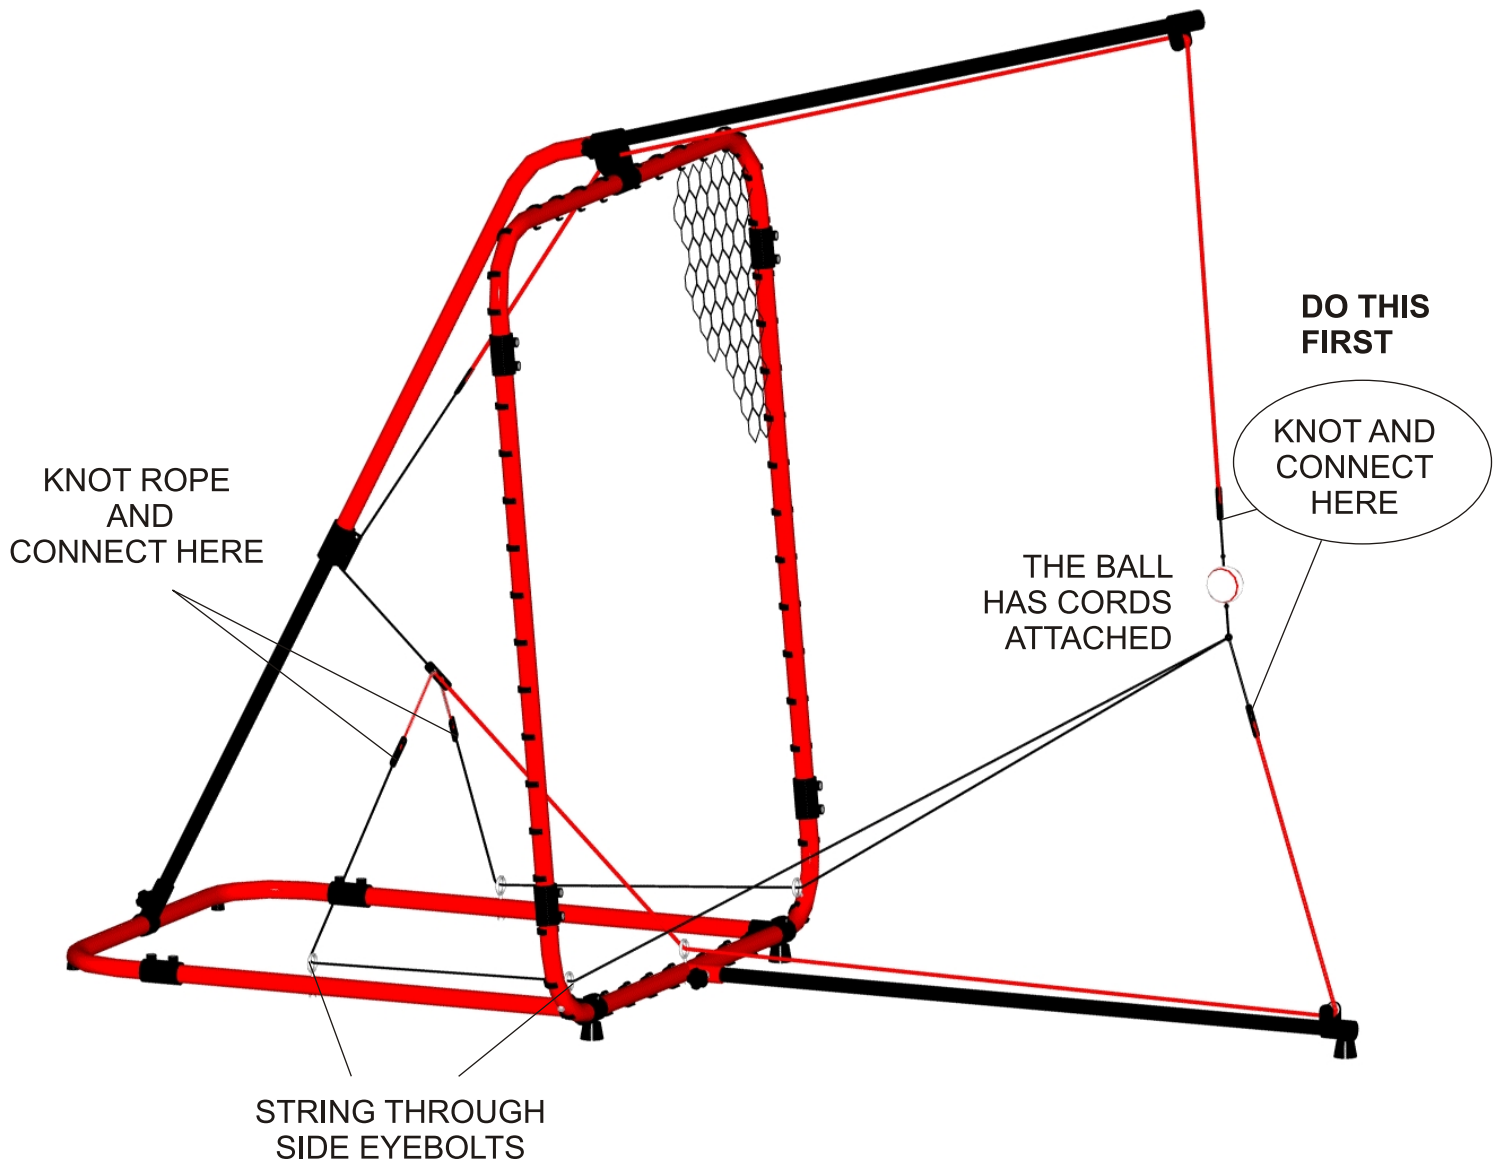



STEP 15

ATTACH THE TARGET, AND
LAY DOWN THE MAT

**HEY! BEFORE YOU HIT THE MACHINE
MAKE SURE ALL YOUR CORD CONNECTORS
ARE KNOTTED AND TIGHT.
DOUBLE-CHECK YOUR KNOBS TOO!**

