
PARTS LIST

- 1. Top Assembly
- 2. Leg-Base Assembly
- 3. 6.5' x 6.5' Bullpen Net
- 4. (11) Carabiners
- 5. Nylon Travel Bag

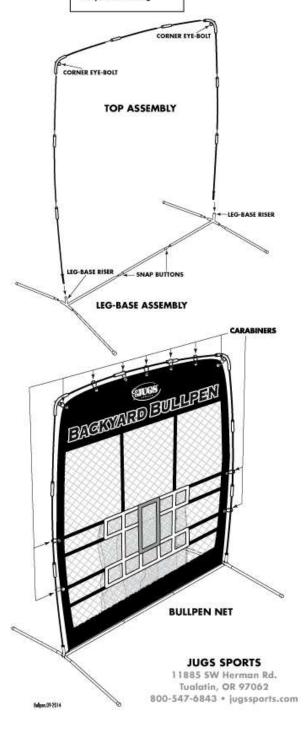



ASSEMBLY INSTRUCTIONS

1. Assemble the Leg-Base Assembly by joining parts as shown. Center piece is joined with snap buttons.







Next, attach the bottom of the Bullpen Net by stretching the bungee loop at one corner of the bottom of the Hitting Sock under and then over the top of the Leg Base Riser. Repeat on other side.







Assemble Top Assembly and insert one end of top assembly into one of the Leg Base Risers. Insert other end of top assembly into the remaining Leg Base Riser.







4. You can now finish hanging the Bullpen Net across the top of the screen by starting in one corner at the top and attaching a carabiner to the corner. Attach the remaining carabiners to the frame and finally to the other Corner Eye-Bolt.





Attach both sides of the net to the frame using the carbiners found mid-way down on each side of the lower half of the net.





 For storage, clip bottom loops on each side of the Bullpen Net to the top, corner carabiners on each side. This prevents tangling and facilitates assembly for next use.



