




Step 5:
Complete bottom frame by attaching (7) to (1) to (9) and (6) to (1) to (8).

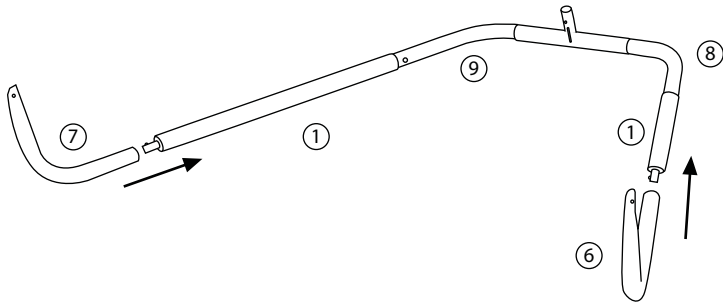


Step 6:
Assemble (11) to (10). Center (13) on (1) and attach (12) to (13).

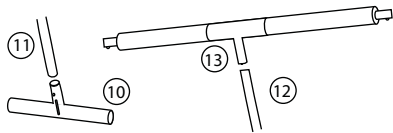

Step 7:
Line up holes on (3) and (7) and attach with butterfly screw. Repeat with (3) and (6).

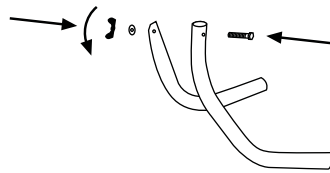

Step 8:
Tighten "Infinite Angle" adjustment system. Spread out net and find red corner markers. Use bungees to attach corners first. Then attach the remaining bungees in the following order: 4 on top, 6 on left, 4 on bottom, and 6 on right, spread evenly on each side. To attach bungees to net, hold plastic ball in place and wrap free end around net, steel frame, and finally back around plastic ball.

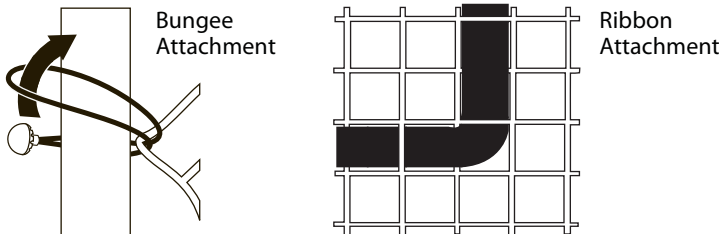

Step 9:
Attach target ribbon by weaving through net and tying off at ends.

⚠ WARNING: Use extreme caution when assembling the net to the frame. The bungee cords are under extreme tension and must be attached carefully. Eye protection is strongly recommended during assembly.

Franklin Sports Inc.
Stoughton, MA 02072
Made in China

For replacements parts call
1-781-341-5178 or 1-800-225-8649
OR visit www.franklinsports.com


Franklin[®]





ASSEMBLY INSTRUCTIONS

MLB DELUXE RETURN TRAINER

Item No. 1069

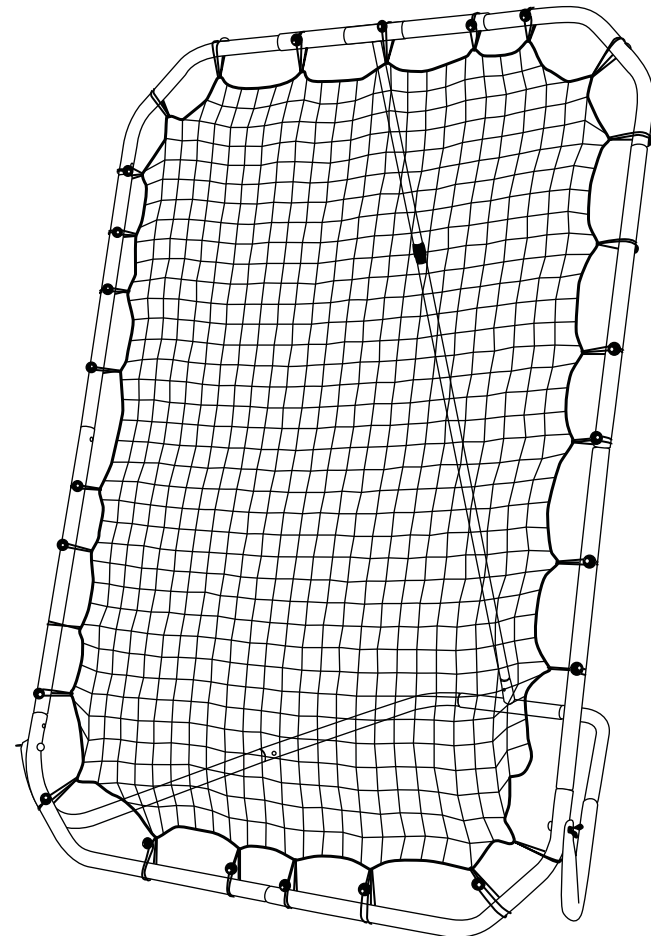

ADULT ASSEMBLY REQUIRED

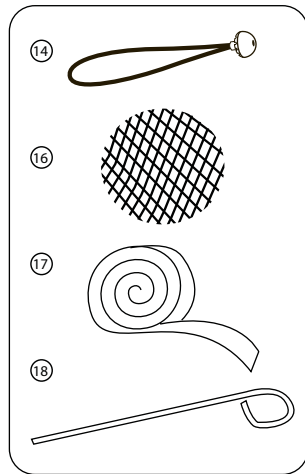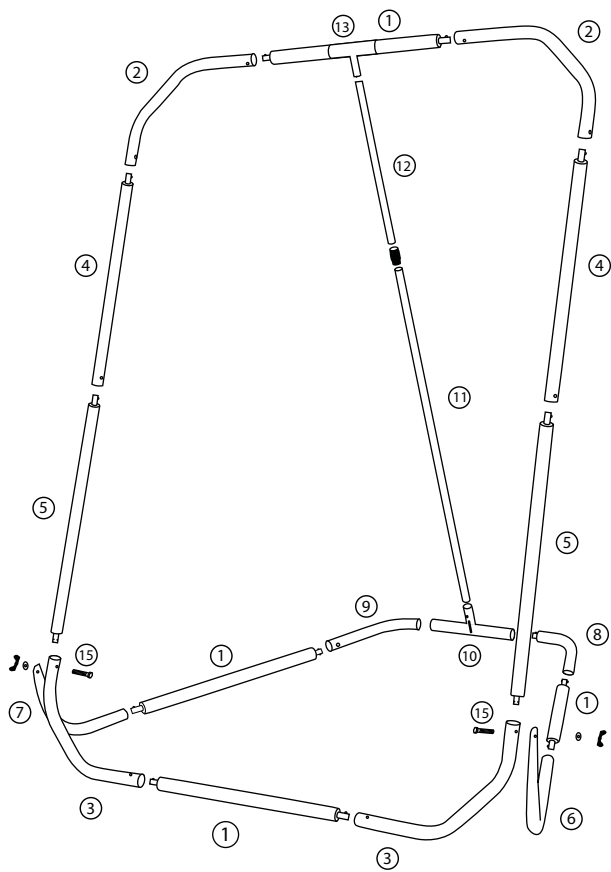


Part	Amount	Description	Replacement Parts 1069
1	4	Male-to-Male Straight Tube	1069Z1
2	2	Female-to-Female Top Elbow Tube	1069Z2
3	2	F/F Bottom Elbow Tube	1069Z3
4	2	M/F Top Straight Tube	1069Z4
5	2	M/M Bottom Straight Tube	1069Z5
6	1	Side L-Tubes (L&R)	1069Z6
7	1		
8	1	Rear L-Tubes (L&R)	1069Z7
9	1	Rear T-Joint	1069Z8
10	1		
11	1	Adjustable Tubes	1069Z9
12	1		
13	1	Top T-Joint	1069Z10
14	24	Toothed Bungees	1069Z11
15	2	Butterfly screws	1069Z12
16	1	Net	1069Z13
17	1	Target Ribbon	2778Z7
18	4	Ground Stakes	2738Z3

ASSEMBLY INSTRUCTIONS


Step 1:

Slide (13) through (1). Make "U" shape by attaching (2) on both sides of (1).

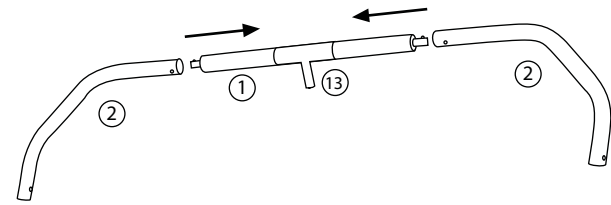


Step 2:

Make "U" by attaching (3) to both sides of another (1).

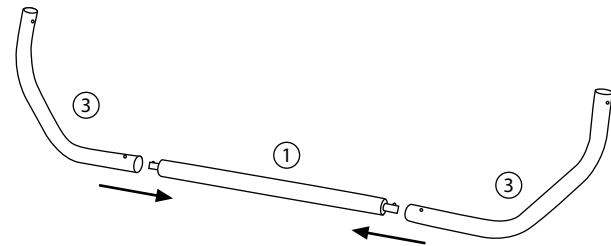

Step 3:

Combine top "U" with bottom "U" using (4) and (5). Line up two holes on bottom of (5) with two holes on (3). Set aside frame.

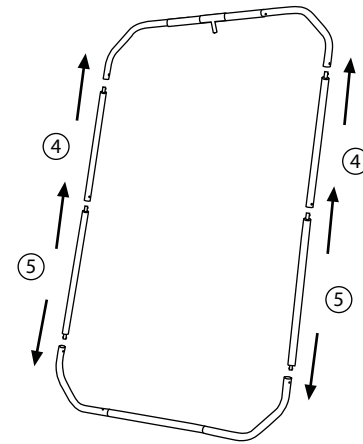

Step 4:

With (10) slot facing forward, slide (10) onto (9). Line up (9) hole with (10) slot. Attach (8) with push pin to (9) hole. Push pin will end up in (10) slot.

