

Installation Instructions for TMAR/TP15 Rails


BEFORE INSTALLATION, MAKE SURE THE WEAPON IS UNLOADED AND THE SAFETY ENGAGED.

- 1** Make sure the rifle is unloaded and the original handguards are removed properly before installation
- 2** The Tekko drop in rail system is a two-piece design, there is no gunsmithing required. The bottom section is to be installed first.

Insert the front end into the handguard cap. Then pull back on the delta ring allowing the rear section of the bottom rail system to fit in around the barrel nut. The rear should fit in snug and allow the delta ring to slide over the recessed lip to hold it in place.
- 3**
- 4** Next install the top section, front end first and then pulling back the delta ring to allow the rear section to seat in around the barrel nut.
- 5** Once both sections are installed, make sure to check the delta ring to see if it has fully seated around both the top and the bottom sections.



MISSION FIRST
T A C T I C A L

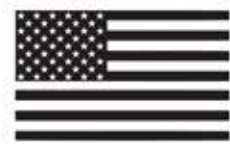

MADE IN
USA
LIFETIME WARRANTY

⚠ WARNING: OBSERVE SAFE FIREARM HANDLING PRACTICES AT ALL TIMES. FAILURE TO DO SO MAY RESULT IN BODILY INJURY OR DEATH

Mission First Tactical shall not be responsible for injury, death or damage to property resulting from improper installation, misuse or illegal use of this product.