


How to set up your Marmot Catalyst 2P/3P

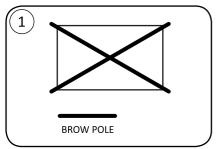


CONNECT POLES LEAVING NO SPACE BETWEEN SECTIONS AND LAY ON TENT BODY

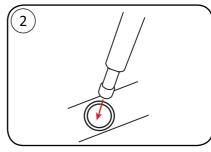


INSERT POLE TIPS INTO CORNER GROMMETS

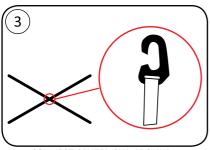


CONNECT CENTER CLIP AROUND POLE CROSSING

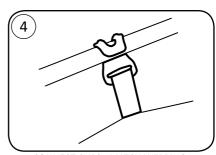

CONNECT CLIPS - MATCH WEBBING **COLOR TO POLE COLOR**

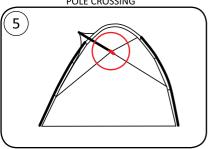

INSERT BROW POLE TIPS INTO WEBBING POCKETS

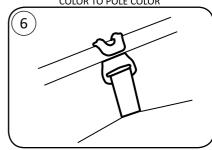


CONNECT CLIPS TO BROW POLE




PULL RAINFLY OVER BODY




NOTE RED TABS ON FRONT CORNERS CONNECT BUCKLES AND PULL TO TIGHTEN

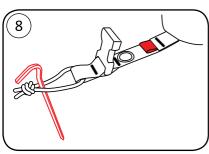

STAKE OUT CORNERS

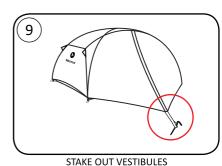

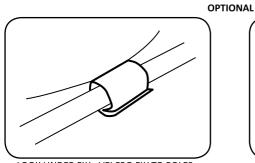

LOOK UNDER FLY - VELCRO FLY TO POLES



GUY OUT IN HIGH WIND