Roomscapes

Create a Tray with Repurposed Materials

Repurpose materials rather than sending them to the trash bin! Walk through the steps to create a unique tray for your dining room tablescape to gather around this summer.

Materials & Supplies

Rowley Products	Item #
FirmaFlex™ Bendable Fiber Board	<u>BP48</u>
Laminating Adhesive	<u>FA40</u>
12' Long Tape Measure	<u>DT12</u>
Cord Cleats	<u>SC20</u>
Fringe Adhesive	<u>FA10</u>

Other Materials

1 x 3 wood remnants Fabric remnants



Create a Tray with Repurposed Materials: Step-By-Step Instructions

Build the Tray Base:

Mark and cut the FirmaFlex[™] for the tray base.



Mark and cut the FirmaFlex™ for the tray base.

Mark and cut the 1 x 3's as the tray sides.



Check the fit of the frame once all parts are cut.









Cover the Tray Base with Fabric:


Cut a piece of fabric to cover the tray base top and the tray bottom.

Spread Laminating Adhesive FA40 to the fabric for the tray base bottom.

Place the fabric on the FirmaFlex[™] and smooth. Allow the adhesive to dry.

Repeat the process to add the fabric to the tray base top.

Trim excess fabric from the edges of the tray bottom.

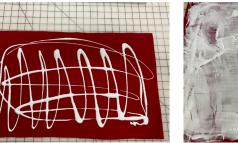





Complete the Tray Frame:

2
3
4
5
6

1

2

3

4

5

Create a frame with the 1×3 's and glue the corners.

Glue the base and the tray frame together.


Secure the base to the sides with small nails.

Paint the frame if the color is a lot different than the fabric color.

Place the frame around the tray base.

Nail the corners of the frame.

Nail the frame to the FirmaFlex[™] base.

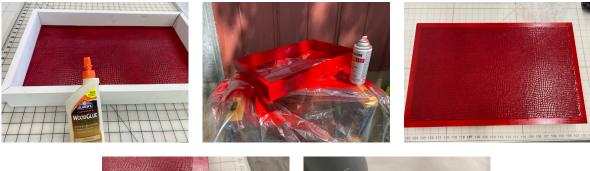





Cover the Tray Frame with Fabric:



3

4

3


Cut a strip of fabric to go around the perimeter of the frame plus about $\frac{1}{2}$ " for overlap.

The strip will be deep enough to wrap under the tray 1/2", up the outside of the frame, over the top of the frame, and on the inside of the frame and stop at the top of the tray base on the inside.

Working one side at a time, apply adhesive to the fabric and adhere to the tray frame.

At the last corner, cut excess fabric away.

Wrap the fabric to the tray bottom, fold the corners and miter.

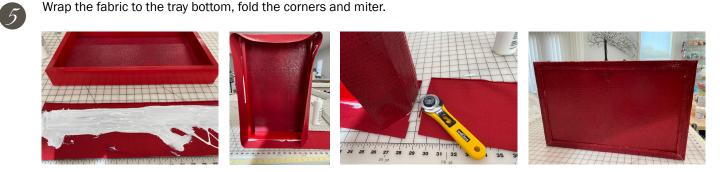

Complete the Tray:

Clip the fabric at the top corners to the outside edges of the tray frame.

Fold to the inside of the frame. Mark and remove excess fabric.

Apply adhesive to the fabric. Adhere the fabric to the inside edges of the tray.

Add the cord cleat handles to complete the tray.

