

Duvet Cover with Mitered Banded Edges

Learn to create a duvet cover with mitered banded edges and welt cord, from our Serene Bedroom.

Materials & Supplies

Rowley Products

Waxed Silamide Skeins

Item

[TWS23/](#)

R-TEX Polyester Duvet Insert, Queen

[DU73](#)

R-TEX Cotton Welt Cord

[WCC2/S](#)

R-TEX Sew-On Hook

[HT75/W](#)

R-TEX Sew-On Loop

[LT75/W](#)





Duvet Cover: Step-By-Step Instructions

Duvet Cover with Mitered Banded Edges & Welt Cord

This duvet cover has subtle details that make a difference.

- Self welt separates the duvet cover body and the self banding edge with mitered corners.
- The duvet cover is reversible for versatility.
- For a proper fitting duvet cover, measure the duvet insert.
- If necessary, a flange may be added to the duvet cover to properly fit the bed.

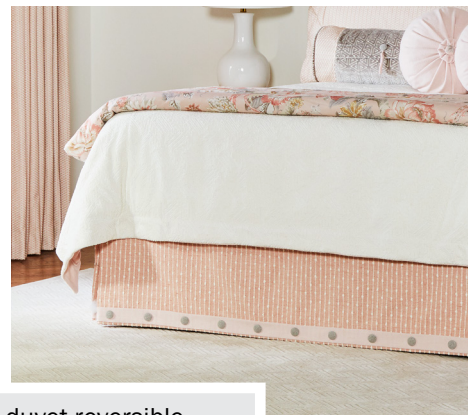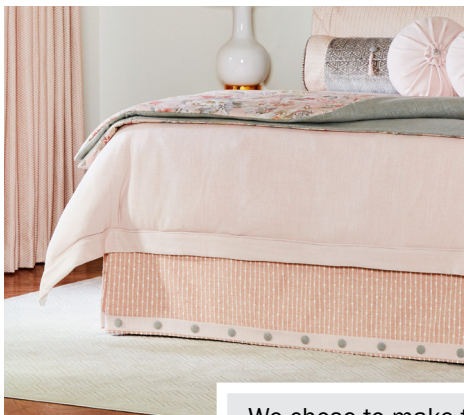

We chose to make this duvet reversible between pink and white.

- 1 Measure the duvet insert.
- 2 Cut the Face Fabric (FF) and the reverse fabric to fit the cover, adding Seam Allowances (SA).



- 3 Seam the widths together.
- 4 Serge the seams for a clean finish.




- 5 Press the seams to one side.
- 6 Trim excess fabric after joining the widths together if necessary.



Make Welt Cord & Prepare the Bands

- 7 Cut strips to make enough welt cord to go around three sides of the duvet cover body.
- 8 For a 3" banding, cut 4" strips of fabric long enough for the sides and foot of the duvet cover body.

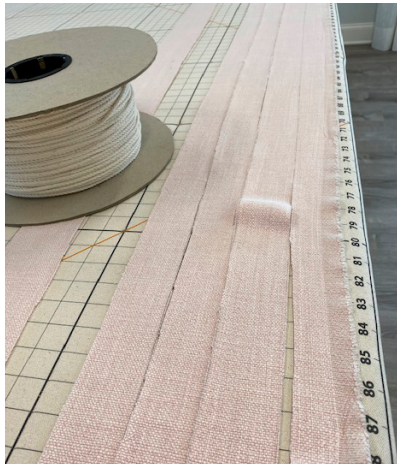

- 9 Place the strips on the table and press in the mitered corners.
- 10 Pin and stitch the mitered corners, starting at the outer corner and stopping $\frac{1}{2}$ " from the inside corner.



- 11 Press the seam open. Clip the seam.



Sew the Welt & Mitered Bands to the Duvet Cover Body

- 12 Pin and stitch the welt cord to three sides of the duvet cover, leaving the top without welt cord.
- 13 Pin and stitch the mitered bands to three sides of the duvet cover.
- 14 Press the seams towards the bands.
- 15 Mark for placement of the snap tape to correspond with the snaps on the duvet insert. Stitch in place.



Sew the Welt & Mitered Bands to the Duvet Cover Body

- 16 Place the duvet cover top and bottom, right sides together. Pin, and stitch around three sides.
- 17 Clip away any bulk at the place where the welt and banding fabrics meet the duvet body.



- 18 Stitch around three sides of the duvet cover.
- 19 Turn right sides out and press the outer edges of the duvet cover.



- 20 Cut enough hook and loop sections you need for the closure.
- 21 Press the top edge to the inside of the duvet cover.
- 22 Pin the hook and loop sections to the inside edge.
- 23 Stitch in place.



Top Stitch Around the Flange

- 24 Pin the duvet cover around the flange to secure the top and bottom layer together.
- 25 Using a zipper foot, stitch between the welt cord and the flange.



26 Turn the duvet cover inside out and place on the table with the side with the snap tape facing up.

27 Place the duvet insert on the cover, matching up snaps. Snap in place.

28 Turn the duvet cover right sides out and close the Hook & Loop closures.



Change the look of
your room by making
the duvet reversible!