




230 Meek Rd

Gastonia, NC 28056

1-800-343-4542, FAX 1-800-554-0407

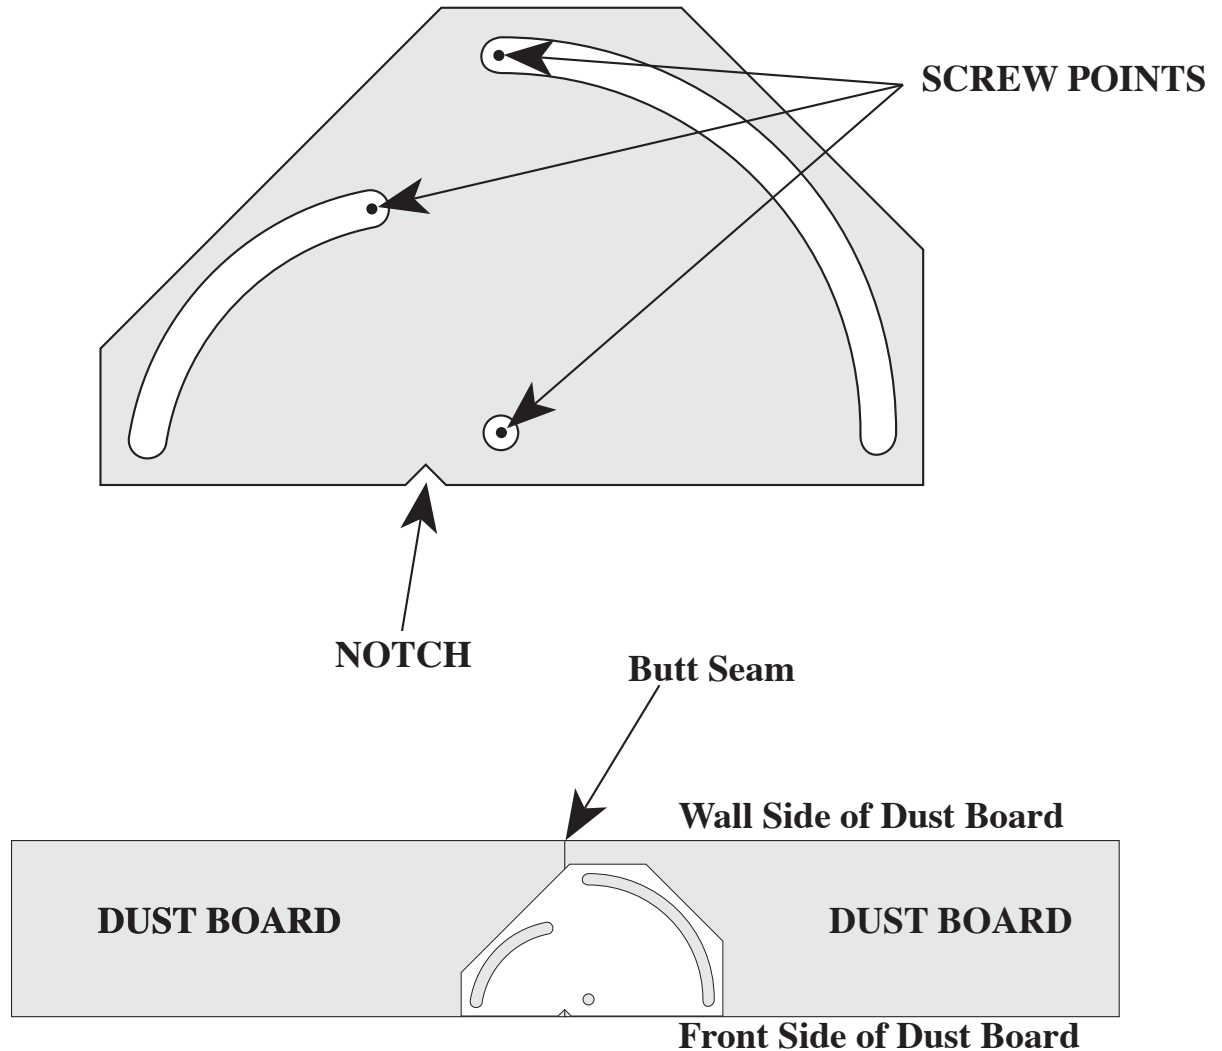

STEP 1: Butt the two ends of the dust boards together.

STEP 2: Position the plate so that the butt seam is centered in the notch. (Mounting the plates to the underside of the dustboard will make it easier for the installer to tighten later.)

STEP 3: Mark & pre-drill screw points. Run screws through plate and into the wood. (#8 Screws are recommended.)

Note: Do not tighten the screws completely to allow pivoting of dust boards for transportation or fitting of dust board to bay window. When completely installed tighten screws.

Updated on 2/20/08