

Heavy Duty Grommet Tool Instructions


Your tool comes with four pieces that attach to it. Two are for cutting the hole in the fabric and two are for setting the grommet.

IMPORTANT !!! Do not mix the hole cutters with the grommet setters. Using one of the cutters with one of the setters in the tool can damage cutting dies. You can identify the parts as follows:

The Hole Cutters




Does not have a hole on its face.

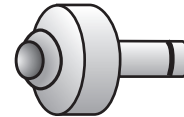


Has a hole completely through it.

The Grommet Setters

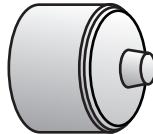

Has a raised piece on its face.

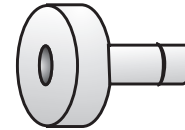

Has a hole that does not go completely through.

To Cut Hole:

Attach hole cutter pieces to tool. Bring handles together, unscrewing bolt at end of handle as necessary to allow handles to come all the way together without any tension or "spring".


Keeping handles together, tighten bolt finger tight. Now allow handles to spread slightly in your hand and tighten the bolt approximately one complete turn. You want the handles to come all the way together and at the same time have a strong "spring action".

After setting the tension properly, place fabric between hole cutter pieces and bring handles together tight and hold together, while rotating fabric to make sure hole is completely cut.

Now release the handles and remove the fabric.

To Set Grommets:

Attach grommet setting pieces to tool. Follow procedure above for setting tension. Place base of grommet through hole in fabric and place washer on opposite side. Bring handles together and form grommet. Note the following:

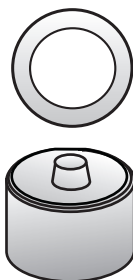

This grommet setting piece goes against the washer.



This grommet setting piece goes against the **Base** of the grommet.