

Project How-To Guide

Roll-Top Cornice

By Holly Bucciarelli, Holly's Custom Window Coverings






Tools needed




Mark top edge for kerfing



I used Rowley's rotary cutter set at first click

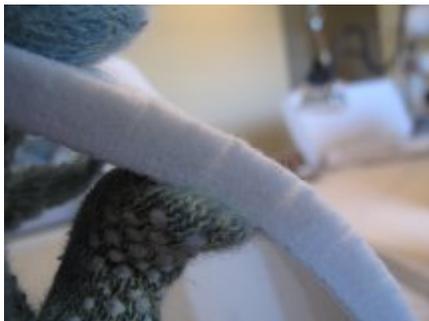

Cut part way through along lines across width
(Close-up of kerfing done to create curved top)

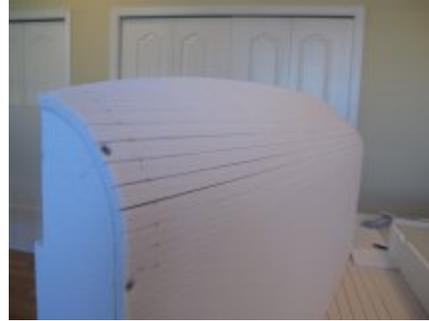

Assemble to shaped cornice "legs"



Steam, steam, steam... Support or brace, maintaining desired shape while it cools and dries.



Manipulate and let cool



The FirmaFlex holds its shape after it has cooled and dried.



Apply padding and interlining



Cover with face fabric



Cover ends



Finished

