


No-Sew, Shaped Tieback


Materials and Supplies:

Fabric
 Pattern Making Paper – DYC18/20 or DYC18/10
 OutBlack® Lining - LN24/P or LN25/P
 Wide Width Buckram - BN420/20 or BN420/100
 Iron-On Adhesive Web - FA30/10 or FA30/50
 Silicone Release Paper - FA31/10 or FA31/50
 Fringe Adhesive -FA10 or FA20
 Gimp Trim - G20S
 Brass Tieback Rings - TBR1
 Scissors – CU22-CU28
 Steam Iron


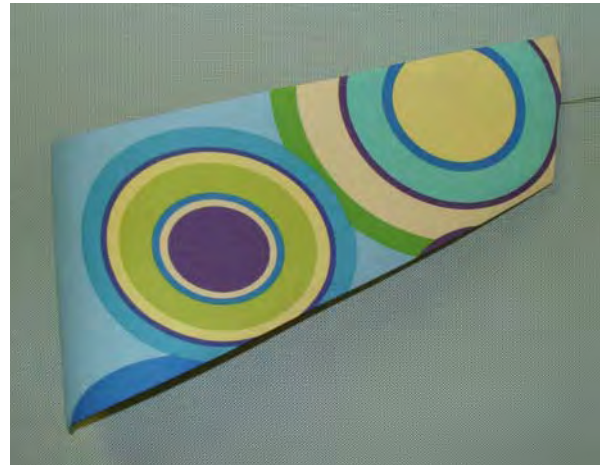


Step-by-Step:

1. Draw tieback pattern using Pattern Making Paper (pattern provided). Cut tieback shape out of fabric, adding a ½" additional allowance around all sides.
2. Cut one piece of Outblack® lining, one piece of Buckram and two pieces of Iron-On Adhesive Web the exact size of the finished tieback.
3. Place fabric, face down on worktable and top with one piece of Iron-On Adhesive Web and Buckram centered over tieback, leaving ½" of fabric showing all the way around. Photo 1. Place Silicone Release Paper over the tieback, shiny side down and iron using steam to melt adhesive.
4. Cover with the second piece of Iron-On Adhesive Web and top with lining, face up. Photo 2. Place Silicone Release Paper over the tieback and iron using steam.

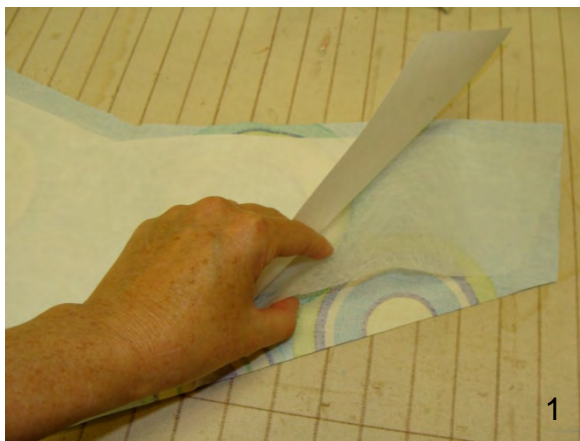

5. Press fabric allowance neatly to the reverse side of the tieback, clipping if needed around curves and corners. Photo 3.
6. Using Fringe Adhesive, secure fabric allowance to the lining. Photo 4.
7. Cover the raw edges of face material on back of tieback with Gimp Trim using Fringe Adhesive. Photo 5.
8. When the adhesive is dry the tieback is ready to install. Photo 6.
9. Add a brass tie back ring to each end of the tieback and secure to the wall or window trim with a tenter-hook or cup-hook.

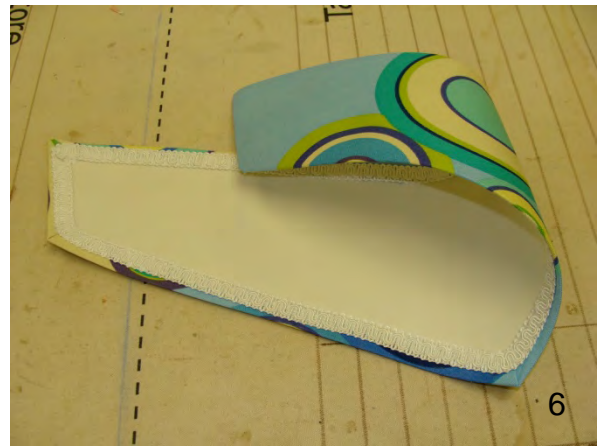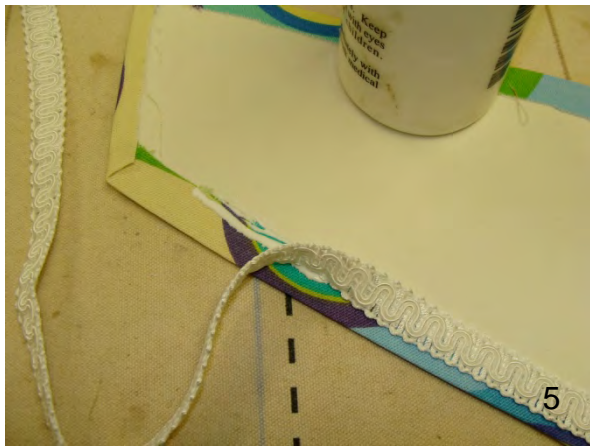

Tie Back Pattern

Using Pattern Making Paper enlarge so each square = 1".

Pattern is for a 22" Long Tieback.

For a longer tieback lengthen pattern in the center.

