

Back Banded Duvet Cover

Duvet covers are a great way to freshen up a bedroom and can be relatively fast to fabricate. Easily add visual interest to a bedroom project with our custom duvet with welt cord detail.



Materials & Supplies

Rowley Products

- R-TEX Polyester Welt Cord
- W&I Manchester Sateen Lining
- W&I Hampton Cotton Interlining
- R-TEX Down Duvet Insert - Queen
- Glass Head Straight Pins
- Straight Edge Rulers
- Pen Style Chalk Markers
- Scissors
- Curved Needle
- A&E Upholstery Thread

Item

- [WCP2/](#)
- [LNW40/](#)
- [LNW10/](#)
- [DU33](#)
- [TP49](#)
- [MR26](#)
- [WW13](#)
- [CU22](#)
- [TP75](#)
- [TU6K/](#)

Back Banded Duvet Cover: Step-By-Step Instructions

Our Queen duvet finished at 95" FL x 90" FW. The side pieces are pattern matched with inset welt cord. Covered welt runs the sides and the bottom as well. It has a banded back and is stuffed with a custom-sized Down insert.

Cutting the Three Face Layers:

- 1 Cut two widths to 98" long, matching patterns.
- 2 Split the second width up the middle for a total of three face pieces.
- 3 Cut two lengths of interlining at 98".
 - A. Or cut one length of 108" wide interlining.

- 4 Join together keeping the middle seam.
- 5 Cut two lengths of interlining at 98".
A. Or cut one length of 108" wide interlining.
- 6 Cut and make enough covered welt cord to run around the duvet plus two lengths.



Putting the Face Together:

- 1 On the center face piece, glue-baste, then sew on a row of covered welt to each long side.
- 2 Match side pieces to center and sew to complete the top layer of the face.



- 3 On the table, layer lining (face down), interlining (face up) and then face fabric (face up).
- 4 Straighten all layers to release any wrinkles.



5 Pin the three layers together by stabbing straight into the table.

6 Using a curved needle with a running stitch, secure all three layers together sewing in the ditch of the welt cord only.



7 Carefully measure for FL + SA x FW + SA. Mark.

8 Cut on marks.

9 Pin edges carefully.




10 At the ends of the welt cord, remove 1/2" of the cord from the casing.

11 Round off the two bottom corners.

12 Glue-baste then sew on a row of welt cord running around the sides and bottom only.

A. Be sure to start and stop with 1/2" of the welt cord removed from the casing.

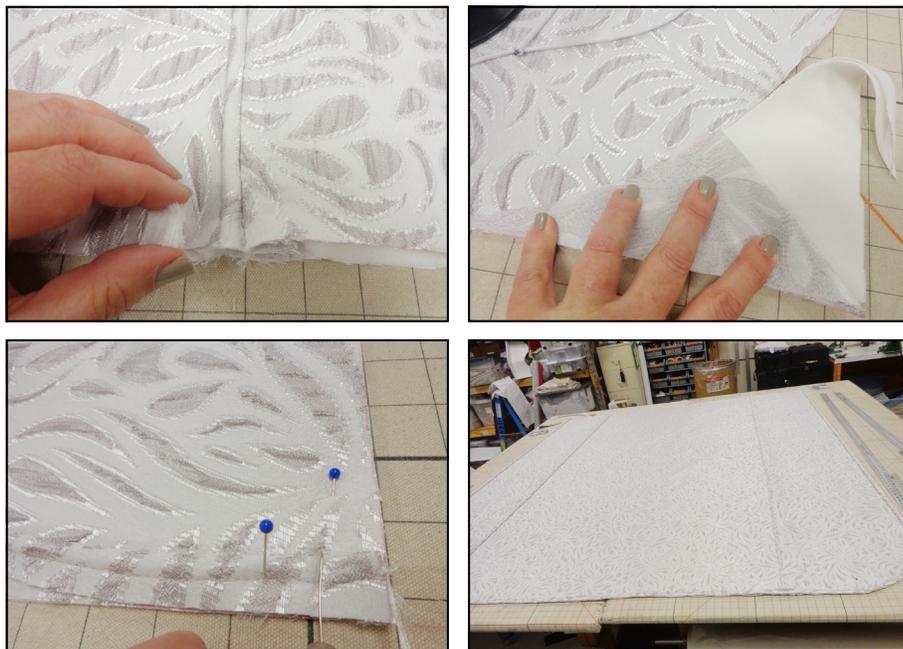

Making the Banded Back:

- 1 Cut, sew and prepare the back fabric, slightly larger and longer than needed.
- 2 Lay back fabric on table, face up.
- 3 Lay top layers on top of back fabric, face down.
- 4 Trim to size, but do not round off bottom corners on the back.



- 5 Remove top layers and set aside for now.
- 6 Cut three bands the length needed+ a few inches x 7".
- 7 On each long side, turn under 1/2" and press.
- 8 Lay bands on sides and bottom of back, overlapping the bottom on top of the side pieces.
- 9 Fold in a 45° angle at the bottom corners.
- 10 Press well.
- 11 Pin well.
- 12 At the machine, top-stitch along the folded edges and the angles to secure bands to back.
 - A. Trim to shape.



Finishing the Duvet:

- 1 Lay face layers over banded back, right sides together.
- 2 Adjust as needed.
- 3 Pin well.
- 4 Sew around sides and bottom and a few inches into the top on each side.
- 5 Trim away excess fabric at the rounded corners.
- 6 Lay duvet insert on top of duvet and match snap placement.
- 7 Sew on snaps.
- 8 Snap duvet insert to duvet cover.
- 9 Turn right sides out.
- 10 Hand close top.

