



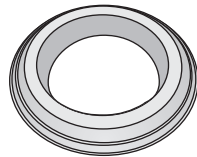
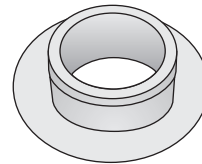
800-343-4542

230 Meek Road
Gastonia, NC 28054

Fax 800-554-0407

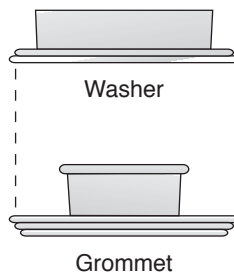
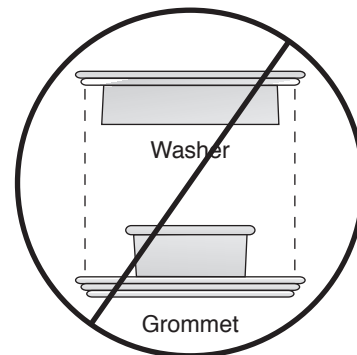
Rowley Company Polypropylene Snap Grommets are designed to fit together as shown in the diagram below. The washer must be snapped on the grommet correctly in order to ensure a snug fit around the fabric. Snapping the washer on the grommet incorrectly will make the installation difficult and result in a loose fit around the fabric.

Step 1: Identify the washer and grommet parts.

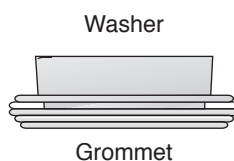
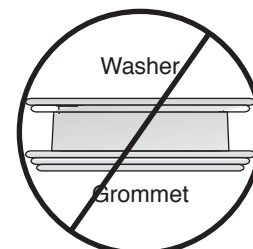
Washer**Grommet**

Step 2: Look at the washer and grommet from the side as outlined below. Press the washer onto the grommet following the diagram **Correct Installation Side View**.

Note: If you are having difficulty snapping the washer and grommet together, position a block of wood on top of the washer/grommet assembly and tap with a hammer.

Correct Installation Side View**Incorrect Installation Side View**

Step 3: Your washer/grommet assembly should now appear as shown in the **Correct Assembled View** diagram below.

Correct Assembled View**Incorrect Assembled View**

Note: Snap Grommets can be pryed apart using a flat head screw driver. Discard any used washers and grommets. Plastic washers and grommets are one time use only.