


# Suggested uses for Iron-On Bonding Tape

(Can be used when covering most welt cords)

*With fabric tab for use when making pillows, top treatments, bedspreads, etc.*

- Cut fabric on the bias.
- Lay the welt cording in the center of fabric.
- Peel release paper off (FT37) iron-on bonding tape.
- Place iron-on bonding tape beside welt cord.
- Fold fabric over and iron, with heat and steam setting.

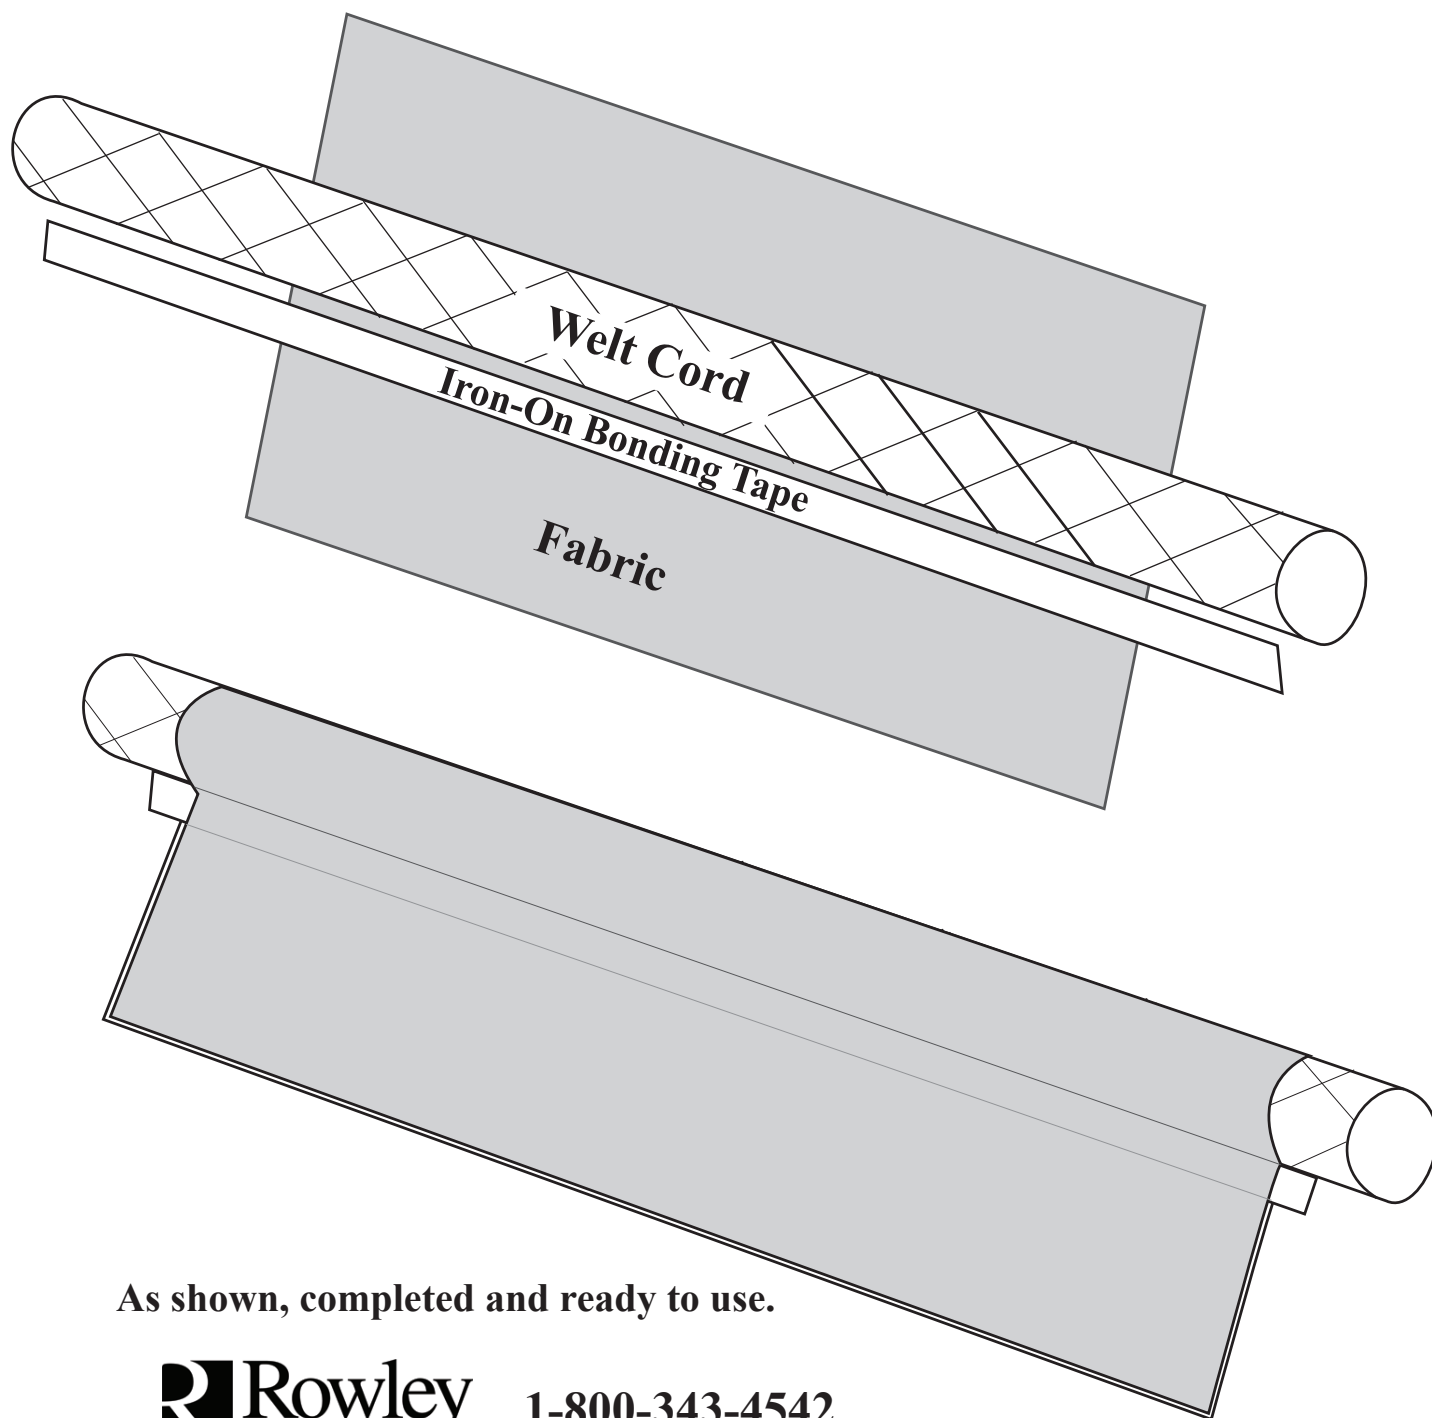

As shown, completed and ready to use.

*Without fabric tab for use when making tie backs, top treatments, braids etc.*

For small diameter welt cord use narrow width iron-on bonding tape.  
For large diameter welt cord use wider width iron-on bonding tape.

