

# THE FINIAL COMPANY™ SOMFY® HEAVY DUTY TRAVERSE SPLICE ASSEMBLY INSTRUCTIONS

Please read all instructions before starting

## INTRODUCTION:

TFC™ Somfy® Heavy Duty Traverse Systems are used to electronically control the drapery using a Drapery Motor and Remote Control. By using a Remote Control or the TaHoma Gateway + App via a smartphone or tablet, the operator can open and close the drapery smoothly and precisely.


The maximum fascia and track width for this system is 36" spliced. The minimum track width for this system is 37".

## SPLICE ASSEMBLY:


Step 1. Carefully unbox your system, leaving all the packaging materials in place. If a second person is available to help, it will make the re-assemble process faster and easier.

NOTE: The system was packaged with foam, shrink wrap and other packing materials to ensure the belt, glides and other components stay in place during shipment.

Step 2. Remove the packaging material from the Pulley that is not attached to the Track. Ensure the Drive Belt stays in the Track when removing the packing material. If required, position the Drive Belt back in the Track.

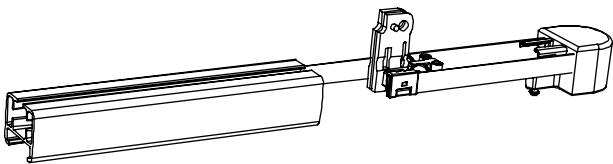


Step 3. Remove the packaging material from the Master Carrier Body half or Track Splice section. This order will change based off your Track size. Ensure the Drive Belt stays in the Track when removing the packing material. If required, position the Drive Belt back in the Track.

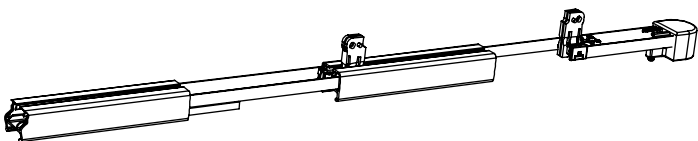


Step 4. Remove the remaining packaging material from the Track Splice sections and Glides. Ensure the Glides stay in the Track when removing the packing material. If required position the Glides back in the Track.

Ensure the Drive Belt stays in the Track when removing the packing material. If required, position the Drive Belt back in the Track.

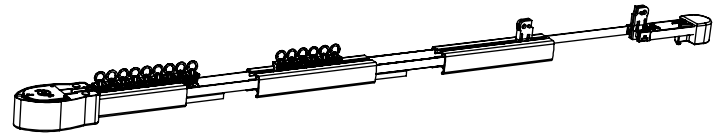


Step 5. Bring the Track section together by pushing the two sections together, while making sure that the Glides, Master Carrier Body and Drive Belt stay in the Track.

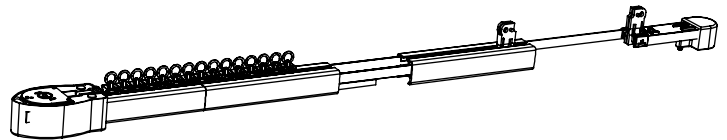

NOTE: When pushing the Track sections together, the Drive Belt slack needs to be removed by pulling the Drive Belt section at the loose Pulley away the system.


Step 6. Install the last Track section by pushing the last two sections together, while making sure that the Glides, Master Carrier Body and Drive Belt stay in the Track.

Tighten the 4 fasteners.

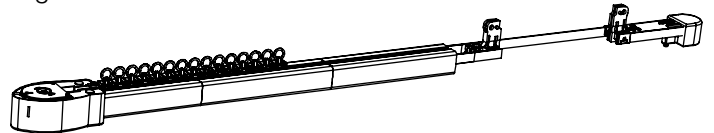


Step 7. Install the Return Pulley by pushing the Master Carrier Body half into the Track. Place the Return Pulley on the Track.


Bring both Master Carrier Body halves together and insert Master Carrier center metal clip.

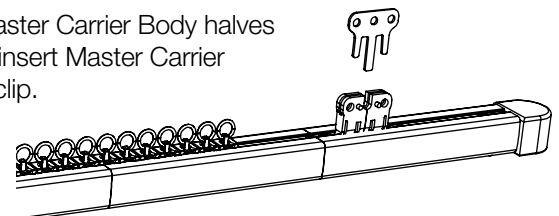


Step 8. Add the Master Carrier Arm to Master Carrier Body.

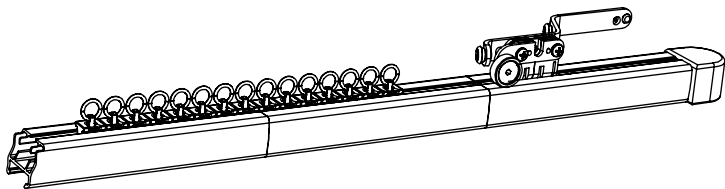

Step 9. Your system is ready to be installed.

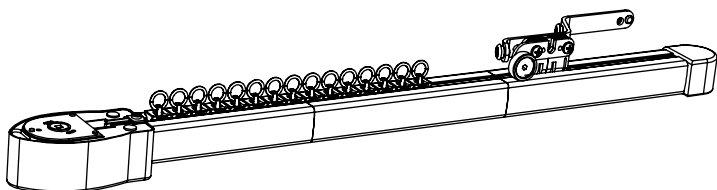


NOTE: Pinch Pleat Glides can be added or removed with the Drive Pulley installed.

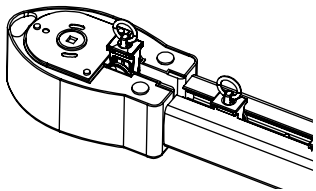


PINCH PLEAT

NOTE: Ripplefold Glides can only be removed with the Drive Pulley installed.

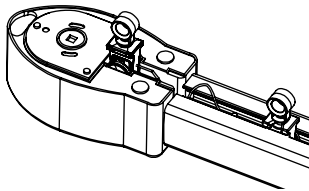


RIPPLEFOLD

Install the End Stops.

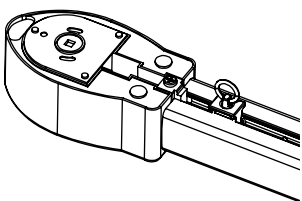

PINCH PLEAT

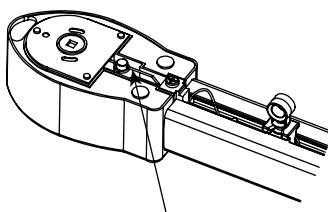


RIPPLEFOLD: Place the cord & attachment tab under the End Stop and tighten the fastener.

### Troubleshooting:

Belt slipping – A popping or grinding sound maybe heard when system is running for the first time.

Step 1. Loosen screw

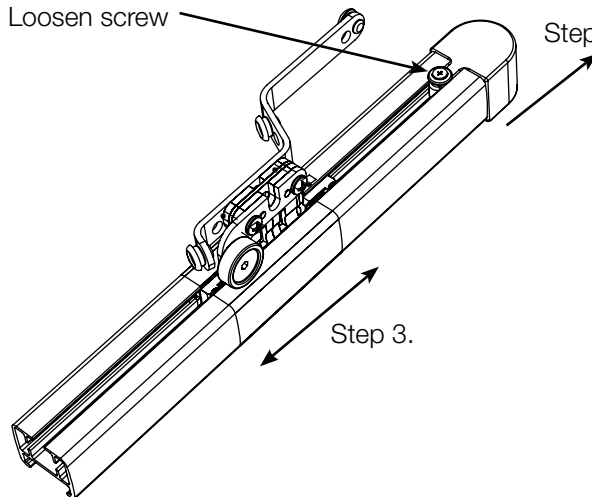

Step 2. Gently pull end pulley forward.

Step 3. Move the master carrier back & forward. If master carrier moves freely, tighten all screws. Attach motor.

NOTE: If the master carrier does not move freely, loosen both end pulleys on the drapery system. Repeat Step 3.

If the system is still having issues, please contact customer service.