

GRACO) Size 4 Me ® Buckle Replacement Guide


©2013 Graco PD246350A 5/13

To Remove Existing Harness Tongues and Buckle and Attach Replacement Buckle







Squeeze handle and pull up on headrest to highest position.

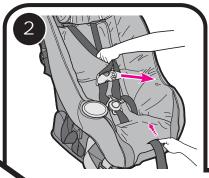

To loosen straps, lift lever and pull harness straps.

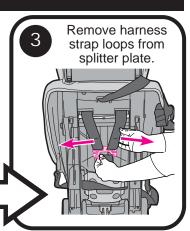


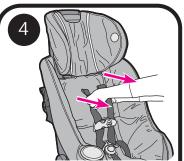

Pull harness straps through seat back and seat pad.



Remove chest clip. DO NOT DISCARD the chest clip.

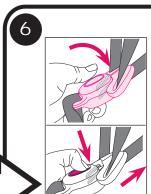

Unbuckle harness by tilting top of buckle down, press top of red button, and pull tongues out of buckle.



Remove and discard tongues.



Slide NEW buckle onto harness straps.

MAKE sure not to twist straps.




Re-attach chest clip

MAKE sure not to
twist straps.




Re-insert straps through slots in seat pad and seat back. See carseat owner's manual for proper height setting for your child.

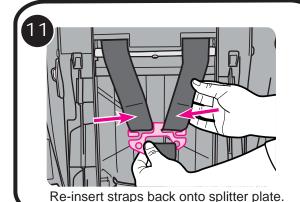



Turn page over to finish the rest of the assembly Steps 12 to 20 for the buckle replacement.




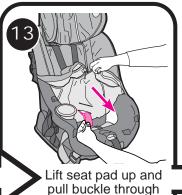


crotch slot.

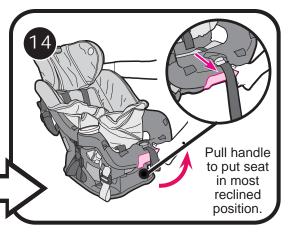


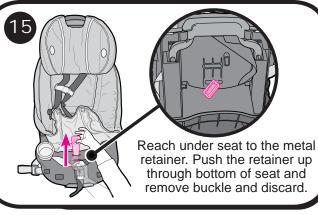


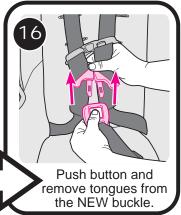

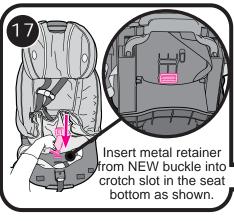




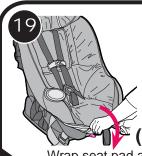



Wrap seat pad around edge of seat and re-attach 2 clips (a) and pull adjustment strap through slot in front of seat pad (b). Tuck seat pad around the recline handle.

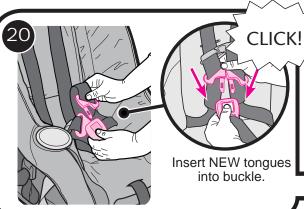



FINAL CHECK:

- Tug on the buckle to be sure it is properly secured in the bottom of the seat and does not come out.
- MAKE SURE the harness straps are not twisted.
- Make sure the chest clip is properly threaded as shown in Step 9.

Any questions please contact us at:

Graco Children's Products 3 Glenlake Parkway Atlanta, GA 30328 1-800-345-4109 www.gracobaby.com