




CONTENDER[™] 65/ADMIRAL 65

CONVERTIBLE CAR SEAT

Read This Instruction Manual

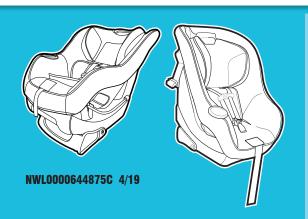

Do not install or use this child restraint until you read and understand the instructions in this manual.

FAILURE TO PROPERLY USE THIS CHILD RESTRAINT INCREASES THE RISK OF SERIOUS INJURY OR DEATH IN A SUDDEN STOP OR CRASH.

1 Important

Pages 6-23

- 1-A A Quick Guide to Your Manual
- 1-B Welcome to the Graco Family
- 1-C Right Mode of Use
- 1-D Before You Begin

Register This Car Seat If You Need Help Certification Car Seat's Useful Life Vehicle Seat Protection Warm Weather Use

1-E Safety Warnings

2 Features

Pages 24-29

2-A Car Seat Features

3 Rear-Facing Use

Pages 30-44

- 3-A Rear-Facing
- 3-B Install Rear-Facing with LATCH Strap
- 3-C Installing With Vehicle Seat Belt

4 Forward-Facing Use

Pages 45-58

- 4-A Forward-Facing
- 4-B Install Forward-Facing with LATCH Strap
- 4-C Installing With Vehicle Seat Belt

5 Securing Child

Pages 59-66

5-A Securing Child 5-Point Harness

6 Accessories

Pages 67-68

6-A Accessories

7 Moving LATCH

Pages 69-71

7-A Moving the LATCH Strap

8 Additional Information

Pages 72-82

- 8-A How to Remove LATCH and Tether
- 8-B Choosing Vehicle Seat Location
- 8-C Unsafe Vehicle Seat Locations
- 8-D Vehicle Seat Belts

9 Care & Cleaning

Pages 83-86

- 9-A Cleaning Seat Pad
- 9-B Cleaning Buckle
- 9-C Cleaning Harness and LATCH



1-A A Quick Guide to Your Manual

This car seat is for children: *Rear-Facing:* 5-40 lb (2.2-18 kg) Forward Facing: 22-65 lb (10-30 kg)

• Children less than 22 lb (10 kg) **MUST** use this car seat rear-facing. Review section 1-C for more information.

Get to Know Your Car Seat

Review section 2-A to see all of the features of this infant car seat.

What Seating Location Should I Use?

The best seating location for this infant car seat is one that:

- Is recommended by your vehicle owner's manual, and
 Results in a secure installation of this car seat.

Some vehicles have specific requirements for where the car seat can be installed, so be sure to check your vehicle owner's manual for available seating positions, if any.

Review section 8-B, 8-C of this manual AND your vehicle owner's manual.

According to accident statistics, the safest place for your child in any vehicle is the back seat. The center of the back seat can be the safest during a possible side impact.



Which Installation Method Should I Use?

This car seat can be installed in your vehicle using either the vehicle seat belt **OR** the LATCH system. Both are equally safe to use. DO NOT USE BOTH AT THE SAME TIME.


Vehicle Seat Belt: Review section 8 and your vehicle owner's manual to learn how to install your car seat with the vehicle seat belts.

LATCH: The LATCH system allows you to securely attach your safety seat in your car without using the vehicle seat belt and possibly to get a better fit. All 2003 and newer model year vehicles are required to have a LATCH system, although some manufacturers began including LATCH earlier. Some vehicle owner manuals use the term ISOFIX to identify the LATCH system.

What is LATCH?

LATCH consists of lower anchors and top tether anchors, which are built-in to your vehicle, and connecting hooks that are built-in to your car seat. Lower anchors are used INSTEAD of the vehicle's seat belt to secure the child seat to the vehicle. Top tethers are used IN ADDITION to the lower anchors OR the vehicle's seat belt to secure a forward-facing car seat to the vehicle.

Review your vehicle's owner manual for exact location and use.

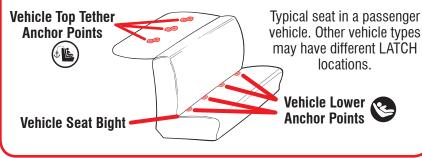

When Installing Rear-Facing & Forward-Facing


LATCH System

LATCH consists of two lower anchors, which are built-in to your vehicle, and connecting hooks that are built-in your car seat.

Review section 3-B & 4-B of this manual AND your vehicle owner's manual.






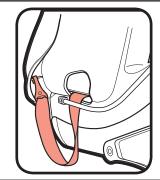

Vehicle Seat Belt

There are two types of vehicle seat belts that can be used. Lap/Shoulder Seat Belt or Lap Only Seat Belt.

Review section 3-C & 4-C of this manual AND your vehicle owner's manual.





Does Your Car Seat Fit Your Child Correctly?

To make sure your child is secured properly, review section 3 and 4 to understand all of the actions you need to take to properly adjust the car seat to fit your child.


For Rear-Facing, You Need to Adjust:

Harness Height, Rear-Facing (A)
Harness straps at or just below the child's shoulders and top of head must be 1" (2.5 cm) below the headrest adjustment lever (B). Review section 5.

Buckle Position (C)

The correct slot is the one that is closest to your child without being underneath them. Review section 5.

Harness Tightness (D)If your fingers slide off the harness straps without pinching the straps, it is tight enough. Review section 5.

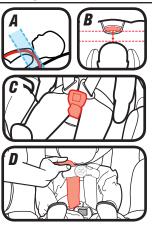

For Forward-Facing, You Need to Adjust:

Harness Height, Forward-Facing (A)


Harness straps at or just above the child's shoulders and top of child's ears below top of headrest **(B)**. Review section 5.



The correct slot is the one that is closest to your child without being underneath them. Review section 5.

Harness Tightness (D)

If your fingers slide off the harness straps without pinching the straps, it is tight enough. Review section 5.

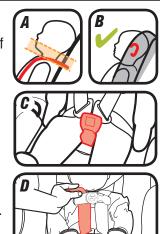



Rear-Facing Installation

Car Seat Does Not Move More than 1" (2.5 cm) at the Belt Path (A)

Review section 3

Check level indicator (B)

Review section 3

Harness Straps at or Just Below Child's Shoulders (C)


Review section 5

Chest Clip Even With Armpits (D)Review section 5


Cannot Pinch Harness Straps at the Shoulder (E)

Review section 5











Forward-Facing Installation

Use the top tether strap when using forward-facing (A)

When used properly, the top tether helps reduce injury in a sudden stop or crash.

Review section 4

Car Seat Does Not Move More than 1" (2.5 cm) at the Belt Path (B)

Review section 4

Harness Straps at or Just Above Child's Shoulders (C)


Review section 5

Chest Clip Even With Armpits (D)

Review section 5

Cannot Pinch Harness Straps at the Shoulder (E)

Review section 5

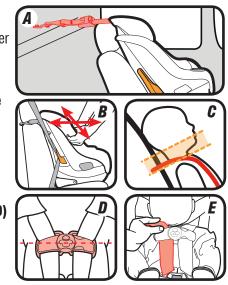



1-B Welcome to the Graco Family!

Your child's safety depends on you. No car seat can guarantee protection from injury in every situation, but proper use helps reduce the risk of serious injury or death.

Even if this car seat seems easy to figure out on your own, you must follow the detailed instructions in this instruction manual to ensure the steps below are performed correctly.

1-C Right Mode of Use

5 lb	22 lb	40 lb	65 lb
(2.2 kg)	(10 kg)	(18 kg)	(30 kg)

Rear-Facing with 5-Point Harness*

5-22 lb (2.2-10 kg) less than 1 year old **MUST** be rear-facing.

22-40 lb (10-18 kg) **SHOULD** be rear-facing.

Forward-Facing with 5-Point Harness*

22-40 lb (10-18 kg) can sit upright unassisted **CAN** be forward-facing.

40-65 lb (18-30 kg) **MUST** be forward-facing.

^{*} Check your state laws and the AAP/NHTSA recommendations. See page 21.



1-D Before You Begin

Register This Child Restraint

Please fill out the prepaid registration postcard attached to the harness and mail it in today or register online at www.gracobaby.com/carseatregistration.

Child restraints could be recalled for safety reasons. You must register this restraint to be reached in a recall. Send your name, address, and the restraint's model number and manufacturing date to:

Graco Children's Products, Inc.
Attn: Customer Service
P.O. Box 169, Elverson, PA 19520-9901
or call 1-800-345-4109
or register online at
www.gracobaby.com/carseatregistration

For recall information, call the U.S. Government's Vehicle Safety Hotline at 1-888-327-4236 (TTY: 1–800–424–9153), or go to http://www.NHTSA.gov.

For future reference or if you change addresses, record the model name, model number, date of manufacture and purchase date of this car seat on the below. You can find this information either on the registration card if you still have it or on the date label located on the back of the car seat.

Model Name	
Model Number	
Date of Manufacture	
Date of Purchase	

If You Need Help

In the U.S.A, please contact our Customer Service Department with any questions you may have concerning parts, use, or maintenance. When you contact us, please have your product's model number and date of manufacture ready so that we may help you efficiently. These numbers can be found on a sticker on the back side of your car seat.

For additional resources or to get your car seat checked by a child passenger safety technician, please visit the following web sites:

www.nhtsa.gov • www.seatcheck.org • www.safekids.org



Certification

This child restraint meets or exceeds all applicable requirements of Federal motor vehicle safety standard 213 for use in motor vehicles.



This child seat is certified for use in aircraft. Use only on foward-facing aircraft seats. Follow the instructions for vehicle installation. For rear-facing installation, see section 3-C and 8-D Lap Belt Installation. For forward-facing installation, see section 4-C and 8-D Lap Belt Installation, but do not use top tether.

Contact the airline for their specific polices.

Car Seat's Useful Life

STOP using this car seat and throw it away 7 years after the date of manufacture. Look for this sticker on back of the car seat.

Graco Children's Products Inc. advises against loaning or passing along a car seat unless you know the complete history of the product. We also advise against purchasing a car seat second hand.

Vehicle Seat Protection

Protect vehicle seat. Use a car seat mat, towel, or thin blanket under and behind car seat.

Warm Weather Use

Car seat parts can get very hot in the sun or warm weather. To avoid burns, always check before putting child in car seat.

1-E Safety Warnings

No car seat can guarantee protection from injury in every situation, but proper use helps reduce the risk of serious injury or death. READ THIS MANUAL CAREFULLY.

AWARNING!

Failure to follow these instructions and child restraint's labels can result in child striking the vehicle's interior during a sudden stop or crash.





! NEVER PLACE THIS CHILD RESTRAINT REAR-FACING IN A VEHICLE SEATING LOCATION THAT HAS AN ACTIVE FRONT AIR BAG.

If an air bag inflates, it can hit the child and car seat with great force and cause serious injury or death to your child.

- ! Review your vehicle owner's manual for more information about air bags and car seat use.
- ! If your vehicle does not have a back seat, review your vehicle owner's manual.

- ! Children are safer riding rear-facing and should ride rearfacing as long as possible, until they reach the maximum rearfacing height or weight rating for their car seat. Then children should ride forward-facing, using the built-in harness system for as long as possible until they reach the maximum forwardfacing weight or height for their car seat. Be sure to check your local and state laws, as well AAP and NHTSA recommendations, for car seat usage.*
- ! Choose the correct mode of use for the car seat depending on your child's size. Infants less than 22 lb (10 kg) MUST use this car seat rear-facing.
- ! Select a suitable location for the car seat in your vehicle.
- ! Secure car seat with a vehicle seat belt or LATCH that is properly routed as shown in this manual.

^{*} Graco supports the American Academy of Pediatrics and National Highway Traffic Safety Administration's Car Seat Guidelines. Visit www.gracobaby.com/en-US/safety for information on car seat usage recommendations.

- ! Vehicle seat belt system MUST hold car seat securely. Not all vehicle seat belts can be used with a car seat.
- ! If vehicle seat belt does not hold car seat securely, read "Vehicle Seat Belts" section 8-D and your vehicle owner's manual.
- ! Always secure car seat with LATCH or a vehicle seat belt, even when unoccupied. In a crash, an unsecured car seat can injure passengers.
- ! If car seat is in a crash, it must be replaced. DO NOT use it again! A crash can cause unseen damage and using it again could result in serious injury or death.
- ! DO NOT use car seat if it is damaged or missing parts.
- ! DO NOT use accessories or parts other than those provided by Graco except for a thin towel or mat to protect your vehicle seat or rolled towels or pool noodles to help get your car seat level. Their use could alter the performance of the car seat.
- ! DO NOT remove LATCH system from car seat. If using vehicle seat belt to secure car seat, LATCH connectors must be stored.


- ! Never leave child unattended, even when sleeping. Child may become tangled in harness straps and suffocate or strangle.
- ! Rear-facing car seat must be properly leveled:
 - Too reclined can result in injury or ejection.
 - Too upright can result in bréathing difficulties.



- ! Never attach two LATCH connectors to one vehicle lower anchor point unless specifically allowed by the vehicle manufacturer.
- ! Do not use both the vehicle belt and LATCH belts at the same time when using the car seat rear or forward facing.


Note: Preterm or low birth weight infants may be at special risk in a vehicle or aircraft. According to the AAP, these infants may suffer breathing issues if improperly reclined in a car seat. When rear-facing, use the corrected age for preemies. Graco advises that you have your physician or hospital staff evaluate your infant and recommend the proper car seat or car bed before you and your infant leave the hospital.

2-A Car Seat Features

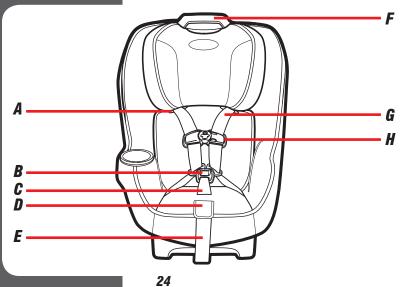




- A Harness Slots
- **B** Harness Buckle
- C Buckle Strap
- D Harness Release Lever (Under Flap)
- E Harness Adjustment Strap
- F Headrest/ Harness Adjustment Handle
- **G** Harness Straps
- H Chest Clip

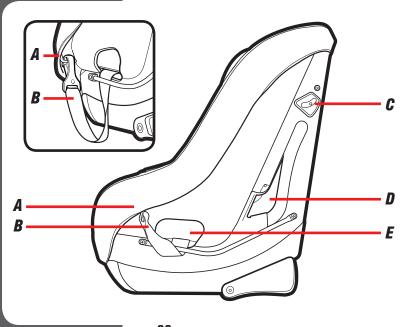

- A LATCH Storage Bar
- **B LATCH Strap (stored)**
- **C** Level Indicator
- **D** Forward-Facing Belt Path
- E Rear-Facing Belt Path

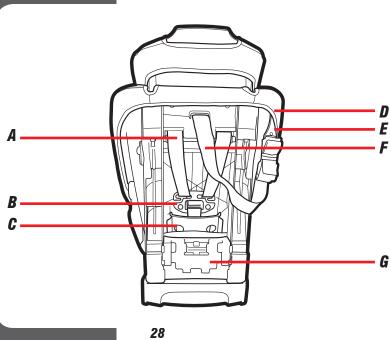

- A Harness Straps
- **B** Splitter Plate
- **C** Harness Cover Plate
- **D** Tether Storage Bar
- E Tether Hook
- F Tether Strap
- **G** Instruction Manual Storage

3-A Rear-Facing



LATCH Strap



Vehicle Seat Lap/ Shoulder Belt

Rear-Facing:

5-40 lb (2.2-18 kg) and whose head is at least 1 inch (2.5 cm) below the top of the car seat

- Infants who weigh less than 22 lb (10 kg)
 MUST be rear-facing.
- Place car seat rear-facing in the vehicle back seat.
- Make sure LATCH strap or vehicle seat belt is routed through the rear-facing belt path marked with a blue label.
- Install this car seat tightly in your vehicle. Car seat **should not move** at the rear-facing belt path more than 1 inch (2.5 cm) from side to side, front to back.
- Check recline level making sure the ball is within the blue area.

30



3 Rear Facing

- Harness straps need to be even with or just below the top of child's shoulders and chest clip is at armpit level.
- Children are safer riding rear-facing and should ride rear-facing as long as possible, until they reach maximum rear-facing height or weight rating for their car seat. Then children should ride forward-facing, using the built-in harness system for as long as possible until they reach the maximum forward-facing weight or height for their car seat. Be sure to check local and state laws, as well as AAP and NHTSA recommendations, for car seat usage.

AWARNING!



NEVER place this child restraint rear-facing in a vehicle seating location that has an active front air bag.




Vehicle Seat Lap Belt



3 Rear

How to Read the Level Indicator:

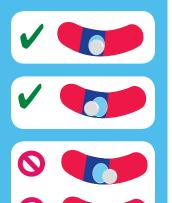

Use corrected age for preemies.

- If the ball is entirely in light blue, the restraint is level for infants 0+ months in age.
- If the ball is in light blue and dark blue, the restraint is level for a child 3+ months in age.
- If the ball is in **RED**, child restraint is **NOT** level. You must adjust your recline position.



3 Rear Facing

3-B Install Rear-Facing with LATCH Strap

Review your vehicle's owner manual for LATCH location and use.

1. Store Top Tether Strap

Attach tether hook to the plastic bar on either side of the car seat.

2. Remove LATCH Strap from Storage Location











3. Make Sure LATCH Strap is in the Rear-Facing Belt Path Marked With a Blue Label

If it is not, see section 7-A to move LATCH strap.

4. Recline the Car Seat

Flip recline foot under car seat for rear facing use.





5. Place Car Seat Rear-Facing in Back Seat of the Vehicle

Place rear-facing in vehicle seat and center the car seat between the lower LATCH anchors. The bottom of the car seat should sit as flat as possible on the vehicle seat.

6. Extend the LATCH Strap

For easier installation, extend the LATCH strap to its maximum length by pressing the grey button and pulling on the strap.







7. Check the Level Indicator


Vehicle **MUST** be on level ground. **Ball must be completely in the blue zone**. Readjust if needed.

For infants 3 months and under, the **ball must completely cover** the light blue circle.

If needed, rolled towels may be placed under the car seat at the vehicle seat crease, until the ball is completely in the blue zone.

8. Attach LATCH Connectors to Vehicle's Lower LATCH Anchors.

LATCH strap should lie flat and not be twisted.



9. Tighten the LATCH Strap

Press down firmly in the center of the car seat while tightening the LATCH strap. You may need to tighten through the rear-facing belt path as shown.



10. Test For Tightness


Grab the sides of the seat where the LATCH strap is and slide the car seat side-to-side and front-to-back.

If the seat moves less than 1inch (2.5 cm), it is tight enough.







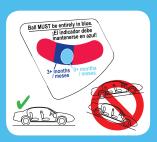



11. Check the Level Indicator

Vehicle **MUST** be on level ground. Ball **must** be completely in the blue zone. Readjust if needed.

For infants 3 months and under, the **ball** must completely cover the light blue circle.

If needed, rolled towels may be placed under the car seat at the vehicle seat crease, until the ball is completely in the blue zone.

See section 5-A to secure your child. Recheck the level indicator with child in seat.

12. To Remove LATCH Strap From Vehicle See section 8-A.



Is Everything Correct?

Car Seat Does Not Move More than 1 inch (2.5 cm) at the Belt Path

Level Indicator's Ball in the Blue Zone and Vehicle on Level Ground



Harness Straps at or Just Below the Child's Shoulders.

Review section 5

Chest Clip Even With ArmpitsReview section 5

Cannot Pinch Harness Straps at the Shoulder

Review section 5
















3 Rear Facing

3-C Installing Rear-Facing With Vehicle Seat Belt





Attach tether hook and LATCH connectors to the plastic bars as shown.

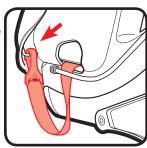



3 Rear Facing



2. Recline the Car Seat

Flip recline foot under car seat for rear facing use.



3. Place Car Seat Rear-Facing in Back Seat of the Vehicle

Place rear-facing in vehicle seat. The bottom of the car seat should sit as flat as possible on the vehicle seat.

4. Check the Level Indicator

Vehicle **MUST** be on level ground. Ball **must be completely in the blue zone**. Readjust if needed.

For infants 3 months and under, the **ball must completely cover** the light blue circle.

If needed, rolled towels may be placed under the car seat at the vehicle seat crease, until the ball is completely in the blue zone.







Review your vehicle's owner manual for vehicle seat belt use



5. Route the Vehicle Seat Belt

Thread vehicle seat belt through the rearfacing belt path (marked with a blue label) and out the other side. Buckle it. The seat belt should lie as flat as possible and not be twisted.

Note: It may be easier to route the vehicle seat belt by lifting seat pad up to expose the belt path.

Make sure the vehicle seat belt is in front of the buckle strap when the buckle is in the inner-most position, and in behind when in the outler-most position.

6. Lock Vehicle Seat Belt

In most vehicles today, slowly pull the shoulder belt all the way out and then let it go back in. You will hear a clicking sound. Slowly pull out on the belt and it should be locked. If not, review your car's owner manual and section 8-D.

42

7. Tighten the Vehicle Seat Belt

Press down firmly in the center of the car seat. Pull on the shoulder belt to tighten while feeding the slack back in the retractor.

8. Test For Tightness

Grab the sides of the seat where the vehicle seat belt is and slide the car seat side-to-side and front-to-back.

If the seat moves less than 1 inch (2.5 cm), it is tight enough.

9. Check the Level Indicator

Vehicle **MUST** be on level ground. Ball **must be completely in the blue zone**. Readjust if needed

For infants 3 months and under, the **ball must completely cover** the light blue circle.

If needed, rolled towels may be placed under the car seat at the vehicle seat crease, until the ball is completely in the blue zone.



Is Everything Correct?













Car Seat Does Not Move More than 1 inch (2.5 cm) at the Belt Path

Level Indicator's Ball in the Blue Zone and Vehicle on Level Ground



Harness Straps at or Just Below the Child's Shoulders.

Review section 5

Chest Clip Even With Armpits

Review section 5

Cannot Pinch Harness Straps at the Shoulder

Review section 5

4-A Forward-Facing

Forward-Facing: 22-65 lb (10-30 kg) 49" (125 cm) or less

- Place car seat forward-facing in the vehicle back seat.
- Make sure LATCH strap or vehicle seat belt is routed through the forward-facing belt path marked with a orange label.
- Install this car seat tightly in your vehicle. Car seat **should not move** at the forward-facing belt path more than 1 inch (2.5 cm) from side to side, front to back.
- Harness straps need to be even with or just above the top of child's shoulders and chest clip is at armpit level.



LATCH Strap
Do not install by this
method for a child
weighing more than
45 lb (20 kg)





Vehicle Lap/Shoulder Seat Belt



Vehicle Seat Lap Belt

 Children are safer riding rear-facing and should ride rear-facing as long as possible, until they reach the maximum rear-facing height or weight rating for their car seat. Then children should ride forward-facing, using the built-in harness system for as long as possible until they reach the maximum forward-facing weight or height rating for their car seat. Be sure to check your local and state laws, as well as AAP and NHTSA recommendations, for car seat usage.

4-B Install Forward-Facing with LATCH Strap

Review your vehicle's owner manual for LATCH location and use.

- 1. Remove LATCH Strap from Storage Location
- 2. Make Sure LATCH Strap is in the Forward-Facing Belt Path Marked with Orange Label

If it is not, see section 7-A to move LATCH strap.

3. Flip recline foot out for forward facing use.














4. Remove Top Tether Strap from Storage Location

Unhook tether and lay it in the seat.

5. Extend the LATCH Strap.


For easier installation, extend the LATCH strap to its maximum length by pressing the grey button and pull out on the strap.

6. Place Car Seat Forward-Facing inBack Seat of the Vehicle

Place forward-facing in vehicle seat. The bottom of the seat should sit as flat as possible on the vehicle seat.


7. Attach LATCH Connector to Vehicle's Lower LATCH Anchors.

LATCH strap should not be twisted.







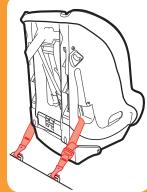









8. Tighten the LATCH Strap

Press down firmly in the center of the car seat while tightening the LATCH strap.

9. Attach Top Tether Strap

Extend the top tether pressing the grey button and pulling out on the strap and attach.



Consult vehicle's owner manual for specific location.

10. Tighten Top Tether Strap

Remove all the slack.

Grab the sides of the seat where the LATCH strap is and slide the car seat side-to-side and front-to-back.

If the seat moves less than 1 inch (2.5 cm), it is tight enough.

See section 5-A to secure your child.

12. To Remove LATCH Strap From Vehicle

See section 8-A.









Is Everything Correct?

4 Forward Facing









Car Seat Does Not Move More than 1 inch (2.5 cm) at the Belt Path

Harness Straps at or Just Above the Child's Shoulders.

Review section 5

Chest Clip Even With Armpits

Review section 5

Cannot Pinch Harness Straps at the Shoulder

Review section 5

4-C Installing With Vehicle Seat Belt

1. Store LATCH Strap

Attach LATCH connectors to the plastic bars as shown.


2. Adjust child restraint to Upright position.

Flip recline foot out for forward facing use.







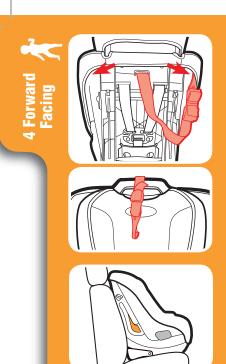

3. Unhook Top Tether Strap From Storage location and Lay it in the Seat

4. Place Car Seat Forward-Facing in Back Seat of the Vehicle

Place forward-facing in vehicle seat. The bottom of the seat should sit as flat as possible on the vehicle seat.

Review your vehicle's owner manual for vehicle seat belt use

5. Route the Vehicle Seat Belt


Thread vehicle seat belt through the forwardfacing belt path (marked with a orange label) and out the other side. Buckle it. The seat belt should lie as flat as possible and not be twisted.



In most vehicles today, slowly pull the shoulder belt all the way out and then let it go back in. You will hear a clicking sound. Slowly pull out on the belt and it should be locked. If not, review your car's owner manual and section 8-D.





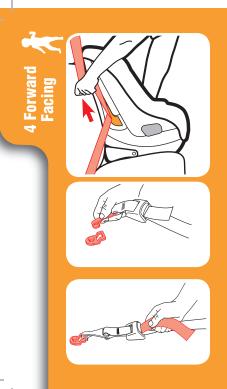

7. Tighten the Vehicle Seat Belt

Press down firmly in the center of the car seat. Pull on the shoulder belt to tighten while feeding the slack back in the retractor.

8. Attach Top Tether Strap

Extend the top tether by pressing the grey button and pulling out on the strap and attach. Consult vehicle's owner.



attach. Consult vehicle's owner manual for specific location.

9. Tighten the Tether Strap

Push the car seat back while tightening the tether strap to remove all the slack.

10. Test For Tightness

Grab the sides of the seat where the vehicle seat belt is and slide the car seat side-to-side and front-to-back.

If the seat moves less than 1 inch (2.5 cm), it is tight enough.

See section 5-A to secure your child.








Is Everything Correct?

4 Forward Facing



Car Seat Does Not Move More than 1 inch (2.5 cm) at the Belt Path

Harness Straps at or Just Above the Child's Shoulders.

Review section 5

Chest Clip Even With Armpits

Review section 5

Cannot Pinch Harness Straps at the Shoulder

Review section 5

AWARNING!

WARNING! In cold weather, do not put snowsuits or bulky garments on your child when placing them in the car seat. Bulky clothing can prevent the harness straps from being tightened properly. To keep child warm, buckle your child in the car seat and place a blanket around the child or place the child's coat on backwards after buckling in.




5-A Securing Child 5-point Harness


1. Loosen Harness Straps

Push down on the harness release lever while pulling out on the harness straps at the chest clip.

Unbuckle the chest clip and the buckle strap. Place harness straps off to the sides












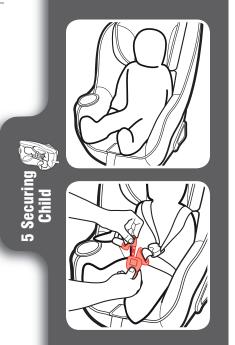

2. Place Your Child in the Seat

Make sure their back is flat against the car seat back.

Avoid bulky or heavy clothing when it is cold out. Doing so will prevent the harness straps from being tighten properly. If needed, place a blanket over the child after you have secured the child.

3. Place Harness Straps Over Child's Shoulders and Buckle

You will hear a "click" when buckle tongues are securely attached. Pull up on each buckle tongue to make sure it is securely attached.

4. Be Sure the Harness Straps Are at the **Proper Height**

Rear-Facing: Harness straps should be at or just below the child's shoulders. Top of head MUST be at least 1 inch (2.5 cm) below the handle.

Forward-Facing: Harness straps should be at or just above the child's shoulders. Top of child's ears **below** top of car seat.

To Raise or Lower Headrest/Harness Height

Squeeze the adjustment handle and move headrest for the proper harness height.







Rear-Facing






Forward-Facing









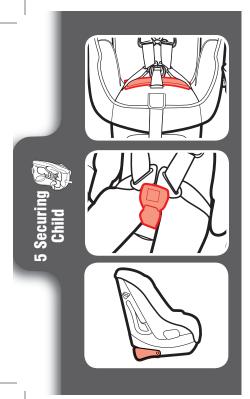

When head support is in lowest position, always pull flap forward as shown.


5. Check the Buckle Position


The correct slot is the one that is closest to your child without being underneath them.

To adjust, recline flip foot must be in forward-facing position.

From bottom of car seat, rotate metal retainer to side in order to push it through slot easier.

Pull buckle strap from child restraint as shown.

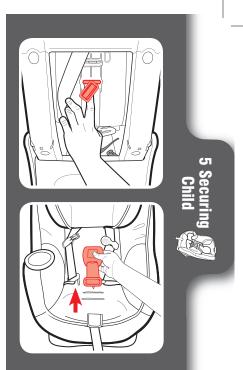

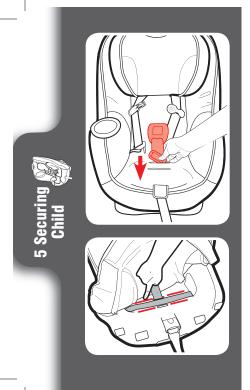

Insert buckle strap into desired slot.

Pull up on buckle strap to be sure it is secure.


When changing buckle strap location LATCH belt must pass between the LATCH belt lines as shown.


6. Buckle the Chest Clip

You will hear a "click" when the chest clip is securely buckled.

7. Pull All the Slack Out From Around the Waist

Pull up on the harness strap while pushing the chest clip down. Do this to both sides.

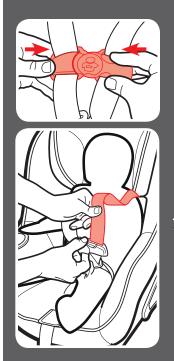

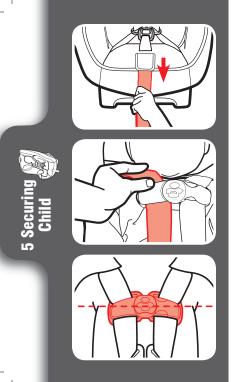

8. Tighten the Harness by Pulling the Harness Adjustment Strap

A snug harness should not allow any slack. It lies in a relatively straight line without sagging. It does not press on the child's flesh or push the child's body into an unnatural position.

When you are not able to pinch any of the harness webbing at your child's shoulder, the harness is tight enough.


9. Raise the Chest Clip to Child's Armpit Level

66

6-A Accessories (on select models)

Harness Covers

Make sure that harness covers do not interfere with placement of the chest clip at armpit level.

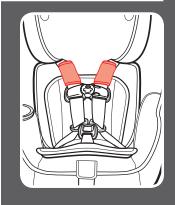



Body Support


Only use body support in rear-facing mode. Body support must be used if shoulders are below the lowest harness setting.


Never allow body support to bunch or fold behind child.

7-A Moving the LATCH Strap

1. For Ease of Moving the LATCH Strap

- A. Unclip The Seat Pad From The Front Of The Child Restraint.
- B. Pull the LATCH strap out of the belt path opening, so that the LATCH connectors end up on the same side of the child restraint.

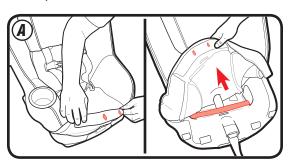

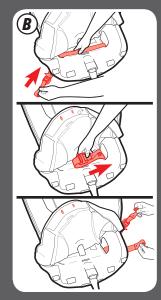





2. Slide Entire LATCH Strap Along Bar to Correct Belt Path Opening

Rear-Facing: Slide LATCH strap down to the blue label.

Forward-Facing: slide the LATCH strap up to the orange label.

3. Feed the LATCH Connector with the Adjuster Closest to it Through the Chosen Belt Path






Rear-Facing: Make sure the LATCH strap is routed behind the buckle strap, is flat and is not twisted.







Forward-Facing: Make sure the strap is flat and not twisted.


4. Replace the seat pad fabric on the front of the child restraint.

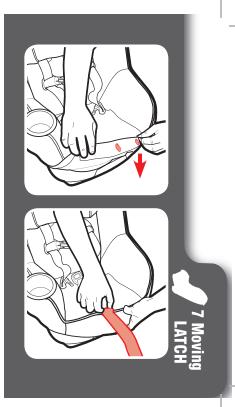

8-A How to Remove LATCH and Tether







LATCH

Push gray button in while pulling on LATCH strap to loosen. Press in on the hook's spring. Push hook in, lift hook up, twist and pull out away from anchor point.







72

Top Tether Strap

To remove, press the grey button and pull out on the strap to release the tension. Press in on the hook's spring. Push tether hook in, then lift up and pull away from tether anchor.

8-B Choosing Vehicle Seat Location

Review your vehicle owner's manual for seating locations.

The best seating location for this car seat is one that:

- · Is recommended by your vehicle owner's manual, and
- · Results in a secure installation of this car seat

According to accident statistics, the safest place for your child in any vehicle is the back seat. The center of the back seat can be the safest during a possible side impact.



Some vehicles have specific requirements for where the car seat can be installed, so be sure to check your vehicle owner's manual for available seating positions, if any.



In the event there is no available back seat and / or you have no other option than to place a child other than an infant in a rear-facing car seat in a front passenger seating position, the National Highway Traffic Safety Administration (NHTSA) recommends that you take the following steps:

- Ensure the child is properly restrained according to their age and size
- Move the seat as far back as possible
- Make sure the child is not leaning out of position, such as leaning forward into the deployment path of the air bag
- Set the air bag ON-OFF switch, if available, to the OFF position
- · Move the seat as far back as possible

8-C Unsafe Vehicle Seat Locations

Never install this car seat in any of the following vehicle seating locations:





Rear-facing or side-facing vehicle seats



Rear-facing with an active front air bag

8-D Vehicle Seat Belts

Review your vehicle owner's manual for vehicle seat belt use

This car seat can be installed using a vehicle seat belt. To do this, you will need to change the seat belt to a locked mode for use with car seats. With some vehicle seat belts, this is done with the latchplate; with other vehicle seat belts, this is done with the retractor.

Vehicle Seat Belt Terms



Retractor

A device that winds up the unused vehicle seat belt. It is often hidden inside the panels on the walls of the vehicle or in the vehicle seatback.

Latch Plate

The male end of the seat belt with the silver tongue.

Seat Bight

The crease where the vehicle seat back and seat bottom meet.



Identify Your Seat Belt Type

There are two different types of vehicle seat belts that can be used with this car seat:



Lap/Shoulder Belt

3 connections points. Can be used in all car seats modes of use.



Lap Belt Only 2 connection points. Can ONLY be used in harness mode.

The following types of vehicle seat belts **CANNOT** be used safely with this car seat:



Lap Belt with Motorized Shoulder Belt



Lap Belt or Shoulder Belt Mounted on Door Belts Forward of the Seat Bight



Some vehicles you may not get a secure fit. Read both your vehicle and car seat manuals.

Lap/Shoulder Belt Installation - Rear-Facing/Forward Facing Modes

Always review your vehicle owner's manual for specific information about your vehicle seat belts.

There are three types of retractors: **ELR (Emergency Locking Retractor)**, **ALR (Automatic Locking Retractor)**, and **Switchable (ELR switch to ALR)**. To determine your type of retractor, follow these steps:

- 1. **Slowly** pull the belt out about halfway and stop.
- 2. Let the belt retract back several inches.
- 3. Try to **slowly** pull the belt out more. If the belt cannot be pulled any further, it is **ALR**. If it can be pulled further, go to the next step.
- 4. **Slowly** pull the belt all the way out, and then allow it to retract several inches.
- 5. Try to pull the belt all the way out again. If it cannot be pulled out, it is **Switchable**. If it can still be pulled out freely, it is **ELR**.

Note: Most vehicles manufactured after 1996 will have Switchable retractors in the back seat. If you have any questions about your retractor type, consult your vehicle owner's manual or call Graco for assistance.



How to Lock Your Lap and Shoulder Vehicle Seat Belt



Sliding Latch Plate and Switchable Retractor

A latchplate that slides freely on the belt webbing and cannot, by itself, hold the belt snug around a car seat. When installing the car seat, route the vehicle seat belt through the proper belt path and buckle it in. **Slowly pull the shoulder belt all the way out to switch it to locking mode.** Then, as you pull the vehicle seat belt tight, feed all the slack back into the retractor.

Grab the sides of the seat at the belt path and slide the seat side-to-side and front-to-back. The seat should not move more than 1 inch (2.5 cm).

Note: With the vehicle seat belt in this locking mode, all the tension is upwards in the shoulder belt. This may start to tilt your car seat sideways. If this happens, use a locking clip instead of this switching the retractor. See Sliding Latch Plate and ELR Retractor.

Locking Latchplate and ELR Retractor


A latchplate that holds the lap belt snug after it has been adjusted; contains a metal bar on the underside of the hardware that "locks" the belt in position.

When installing the car seat, route the vehicle seat belt through the proper belt path and buckle it in. Then, pull upwards on the shoulder belt so that the lap belt gets tight around the car seat.

Grab the sides of the seat at the belt path and slide the seat side-to-side and front-to-back. The seat should not move more than 1 inch (2.5 cm).





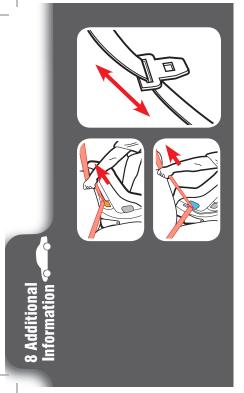

Sliding Latch Plate and ALR Retractor

A latchplate that slides freely on the belt webbing and cannot, by itself, hold the belt snug around a car seat.

Slowly pull the shoulder belt all the way out. Route the vehicle seat belt through the proper belt path and buckle it in. Then, as you pull the vehicle seat belt tight, feed all the slack back into the retractor.

Grab the sides of the seat at the belt path and slide the seat side-to-side and front-to-back. The seat should not move more than 1 inch (2.5 cm).

Sliding Latch Plate and ELR Retractor

A latchplate that slides freely on the belt webbing and cannot, by itself, hold the belt snug around a car seat.


With this retractor, you will need to use the locking clip to lock the vehicle seat belt.

To obtain a locking clip call 1-800-345-4109.

Route the vehicle seat belt through the proper belt path and buckle it in. Pull the vehicle seat belt tight. While pushing down on seat, pinch the two straps together behind the buckle tongue. Unbuckle the belt without allowing it to slip.

Attach locking clip to lap and shoulder belts as shown.

Rebuckle belt. Check that lap belt does not move by pulling hard. If belt loosens or lengthens, repeat procedure.

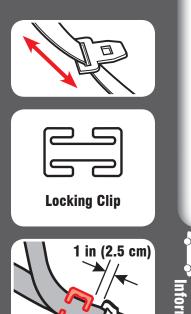

Lap Belt Installation

Always review your vehicle owner's manual for specific information about your vehicle seat belts.



Grab the sides of the seat at the belt path and slide the seat side-to-side and front-to-back. The seat should not move more than 1 inch (2.5 cm).



Locking Latch Plate and No Retractor

When installing the car seat, route the lap seat belt through the proper path and buckle it in. Then, pull upwards on the tail of the belt so that the lap belt gets tight around the car seat.

Sewn On Latch Plate and ALR


Slowly pull the lap belt all the way out. Route the vehicle seat lap belt through the proper belt path and buckle it in. Then, pull the lap belt tight while feeding all the slack back into the retractor.



9-A Cleaning Seat Pad

Clean with a damp sponge using mild soap and cool water. Refer to seat pad care tag for washing instructions.

- Make sure harness straps are loose, remove both harness strap loops from splitter plate on back of child restraint and pull through front of pad. Open chest clip, release tongues from buckle.
- 2. Remove the elastic straps from the hooks on back of seat as shown.

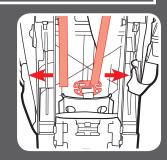











3. Remove Seat Pad from Shell by Pushing Harness Straps and Buckle Strap Through Seat Pad.

4. Remove head support cover by pulling the tab out from behind the head support foam and then peel the cover off the head support.

9-B Cleaning Buckle

Recline the car seat and locate the metal retainer. Rotate the metal retainer up through the shell and pad. From the front, pull the buckle strap out.

To clean buckle, place in a cup of warm water and gently agitate the buckle. Press the red button several times while in the water.

DO NOT SUBMERGE THE BUCKLE STRAP. DO NOT USE SOAPS, HOUSEHOLD DETERGENTS or LUBRICANTS.

Shake out excess water and allow to air dry. Repeat steps as needed until it fastens with a click. Re-insert the buckle into the same slot it was removed. Pull up on buckle strap to make sure it is secured.







WARNING! Inspect and clean buckle from time to time to remove any objects or debris that could prevent latching.



9-C Cleaning Harness and LATCH

Surface wash only with mild soap and damp cloth. **DO NOT IMMERSE THE HARNESS STRAPS or LATCH STRAP IN WATER** Doing so may weaken the straps.

If harness straps or LATCH strap are frayed or heavily soiled, contact Customer Service at www.gracobaby.com or 1-800-345-4109.

NOTES:

Replacement Parts

To purchase parts or accessories in the United States, please contact us at the following:

www.gracobaby.com or 1-800-345-4109



Store instruction manual behind the tab with the instruction book icon as shown.