INSTALLATION INSTRUCTIONS
RUBBERMAID LID ORGANIZER (1H45)

1. Remove packaging from the product and take plastic track out of plastic bag
2. Wipe installation surface in cabinet
3. Remove protective paper from adhesive strip on track and place track at least 3 inches from cabinet side wall and 4.5 inches from the front of the cabinet.
4. Allow 4 hours for adhesive to cure
5. Slide lid organizer onto track
6. Place small cap into opening at the back of organizer to secure organizer from sliding off track

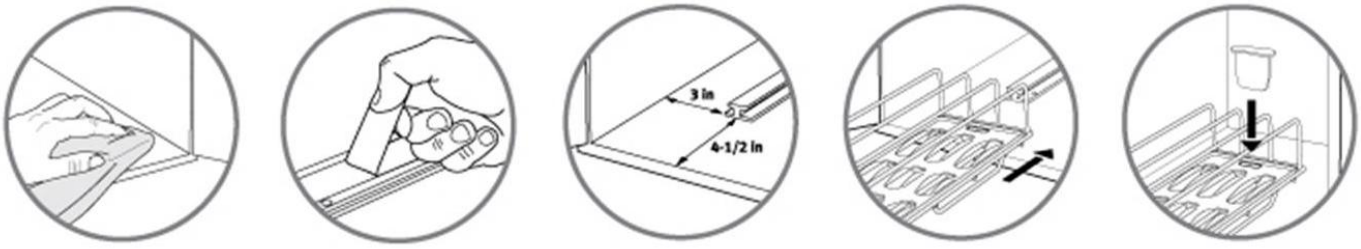

Note: If needed, use screws included to secure track to cabinet. Use #5/64 drill bit. DO NOT remove adhesion strip when using screws.