

# GRACO<sup>®</sup>

CHILDREN'S PRODUCTS INC.

To check if your SnugRide Infant Car Seat is affected, follow the steps below. Once completed with the inspection, and hooks, "U"-bars, and pins are present and secure, you can continue to use the car seat. If you find that you do not have hooks, "U"-bars, or pins, DO NOT use the base and call Graco at 1-800-345-4109 to receive a new seat or base.

**FOLLOW THESE INSTRUCTIONS TO DETERMINE IF YOUR SNUGRIDE CAR SEAT IS AFFECTED.**


PLEASE NOTE: All affected model numbers listed may also begin with the letter "A".

**STEP 1.**

Determine which base you have from the models listed below:

If you ordered a base through Graco Customer Service, your model number may not appear in the list below. You **MUST** proceed through all the steps to make sure your SnugRide is not affected.



**BASE WITH HINGED FOOT:**

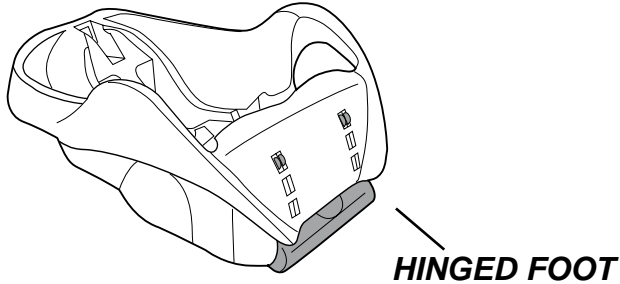

**MODELS AFFECTED:**

- |         |         |
|---------|---------|
| 841203  | 8472YL  |
| 8412T02 | 8474HAB |
| 8471UVB | 8474MEL |
| 8472BLW | 8476VIN |
| 8472BRN | 8477HAV |
| 8472CYP | 8477JAM |
| 8472GMP | 8477NGS |
| 8472MAD | 8478SAR |

**BASE WITH TURN-KNOB ADJUSTMENT FOOT OR FLAT BASE:**

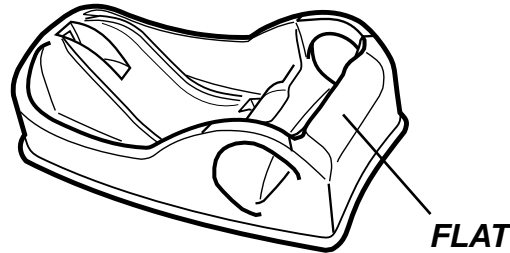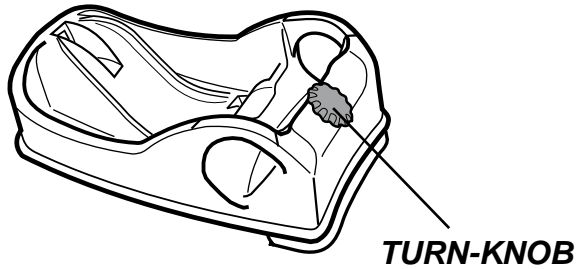


**MODELS AFFECTED:**

- |         |         |         |
|---------|---------|---------|
| 7493G9  | 8457F3  | 8458B7  |
| 7493RS  | 8457GP  | 8458D8  |
| 7497HL  | 8457IND | 8458FKB |
| 7497SY  | 8457MA  | 8458HE  |
| 7499LK  | 8457MV  | 8458HH  |
| 7499N2  | 8457RG  | 8458KY  |
| 841101  | 8457TMJ | 8458N5  |
| 841102  | 8457TMP | 8459VL  |
| 841103  | 8457YL  | 8460LV  |
| 8457D5  | 8458A5  | 8462HAV |
| 8457DVB | 8458AE  | 8462JAM |

**STEP 2.**

Check that metal "U"-bars are on the underside of the car seat.

**IF "U"-BARS ARE MISSING , DO NOT USE THIS CAR SEAT WITH A BASE. PLEASE CALL 1-800-345-4109 TO RECEIVE A REPLACEMENT CAR SEAT AND INSTRUCTIONS ON HOW TO RETURN YOUR CAR SEAT TO GRACO.**

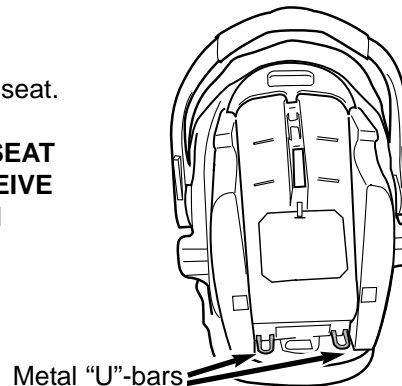



### STEP 3.

#### FOR MODELS WITH HINGED FOOT:

remove the foot from the base as shown. Press in on the adjustment buttons so that the foot is fully extended. **Then**, lift up on the lip of the base and pull the foot out.

#### FOR MODELS WITH TURN-KNOB OR FLAT BASE, proceed to STEP 4.

Removing the foot will expose the metal pins and hooks for inspection.

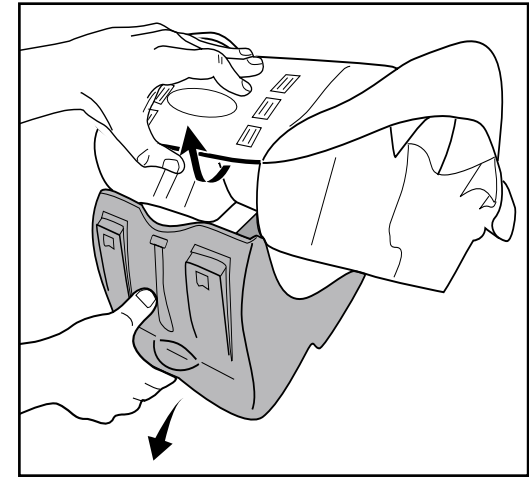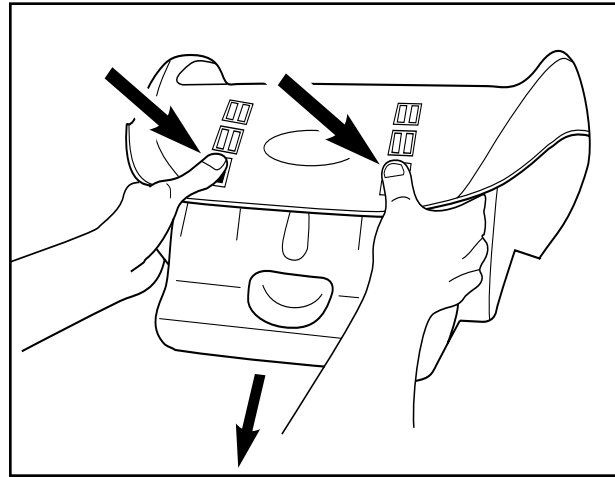


### STEP 4.

#### APPLIES TO ALL BASES:



Turn base over and locate the metal pins and hooks as shown. If no pins or hooks are missing, continue on to STEP 5.

**HOWEVER,  
IF ANY PIN OR HOOK IS MISSING,  
DO NOT USE THIS BASE. PLEASE  
CALL 1-800-345-4109 TO RECEIVE  
A REPLACEMENT BASE AND  
INSTRUCTIONS ON HOW TO  
RETURN YOUR BASE TO GRACO.  
YOU CAN CONTINUE TO USE YOUR  
CAR SEAT, WITHOUT THE BASE.**

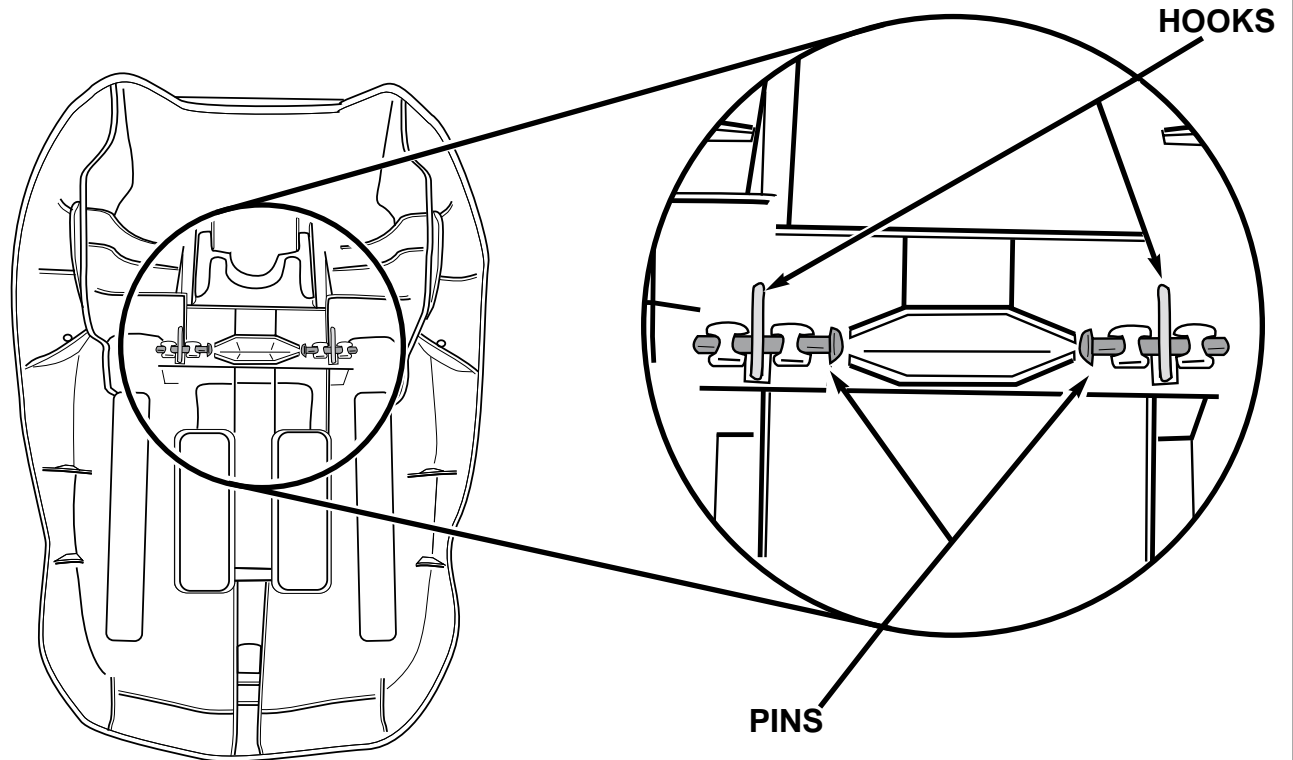

### STEP 5.




**CHECK** to make sure that the metal pins are in place. If pins are not in place, press pins in place as shown.

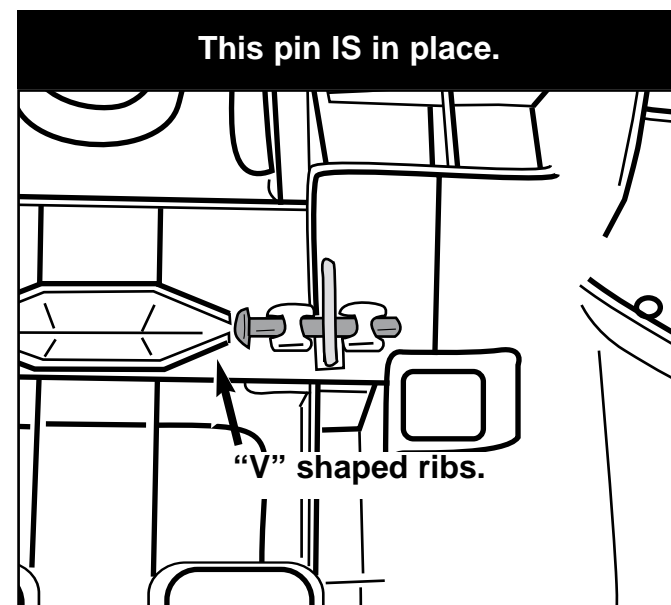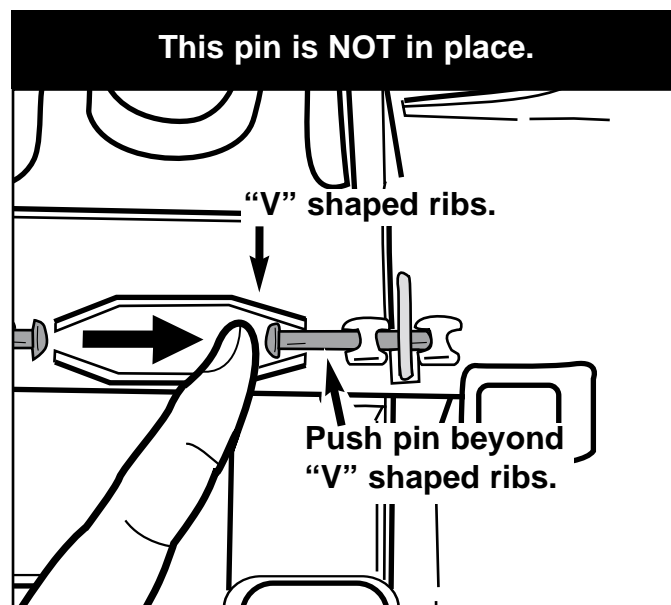

### STEP 6.

#### HINGED FOOT MODELS:

Reattach foot to base as shown, then press tabs in to allow foot to slide into base.

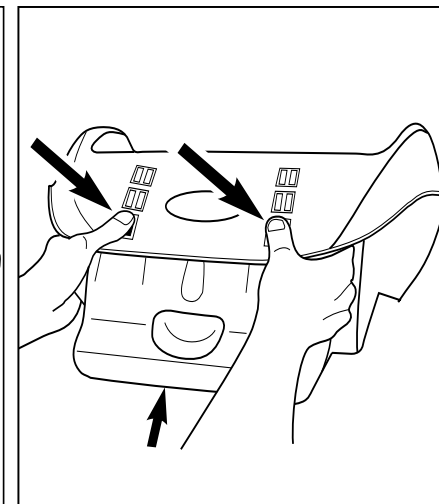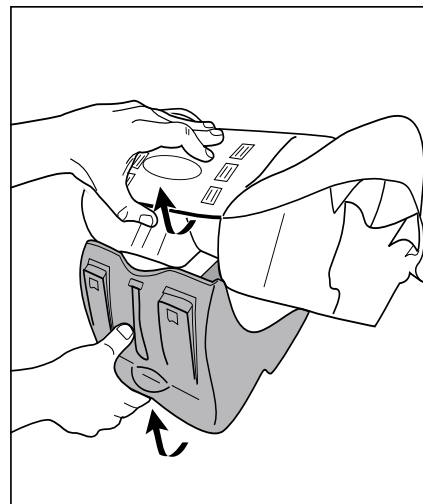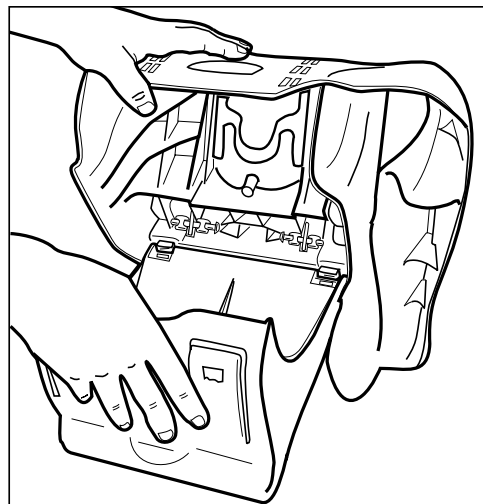

### STEP 7.

After inspection is complete and metal pins, hooks and "U"-bars are present and secure, you may continue to use the car seat and base.

If you do not understand these instructions or require additional assistance, please call 1-800-345-4109.