



ASSEMBLY INSTRUCTIONS

UltraHD 4-Door Locker Cabinet, Model No. 20297(B), 20298(B), 20299(B), 20290(B)

Blue

Granite

White


Graphite


15in. W X 18 in. D X 37.6 in. H (73.9 in. H when stacked)
38.1cm W x 45.7 D cm x 95.5cm H (187.7 cm H when stacked)

ULTRAGUARD®

FINGERPRINT RESISTANT SURFACES
AND INCREASED DURABILITY


Reference page 8 for special care
and maintenance of stainless steel

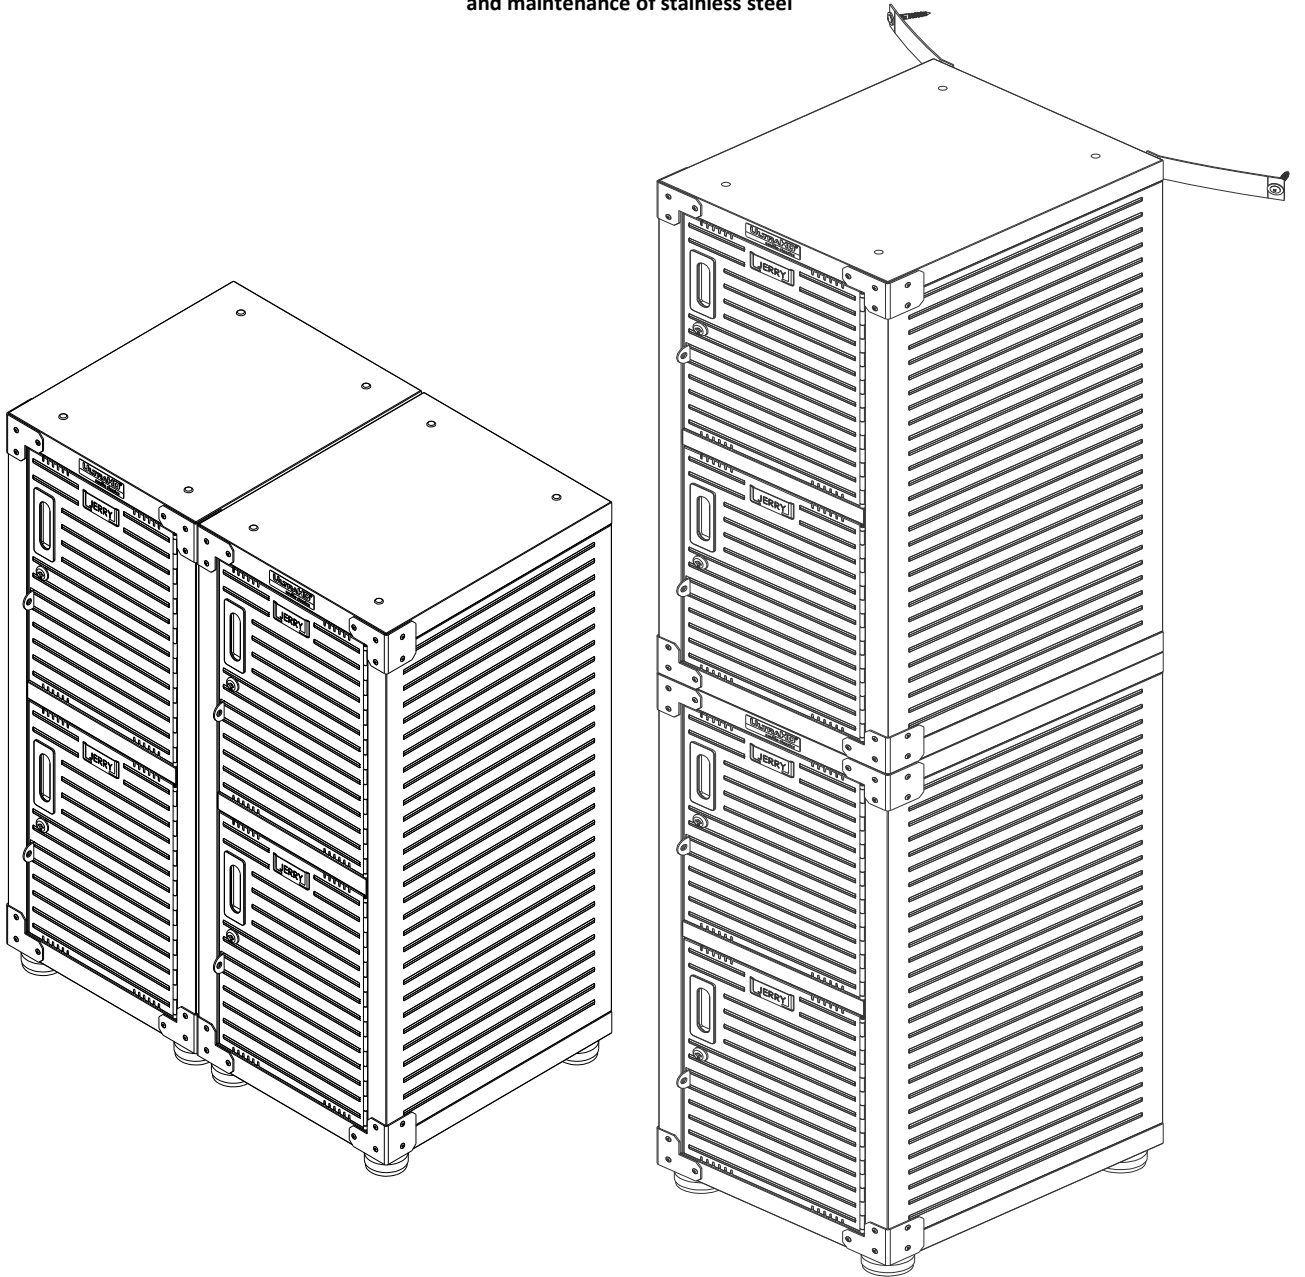

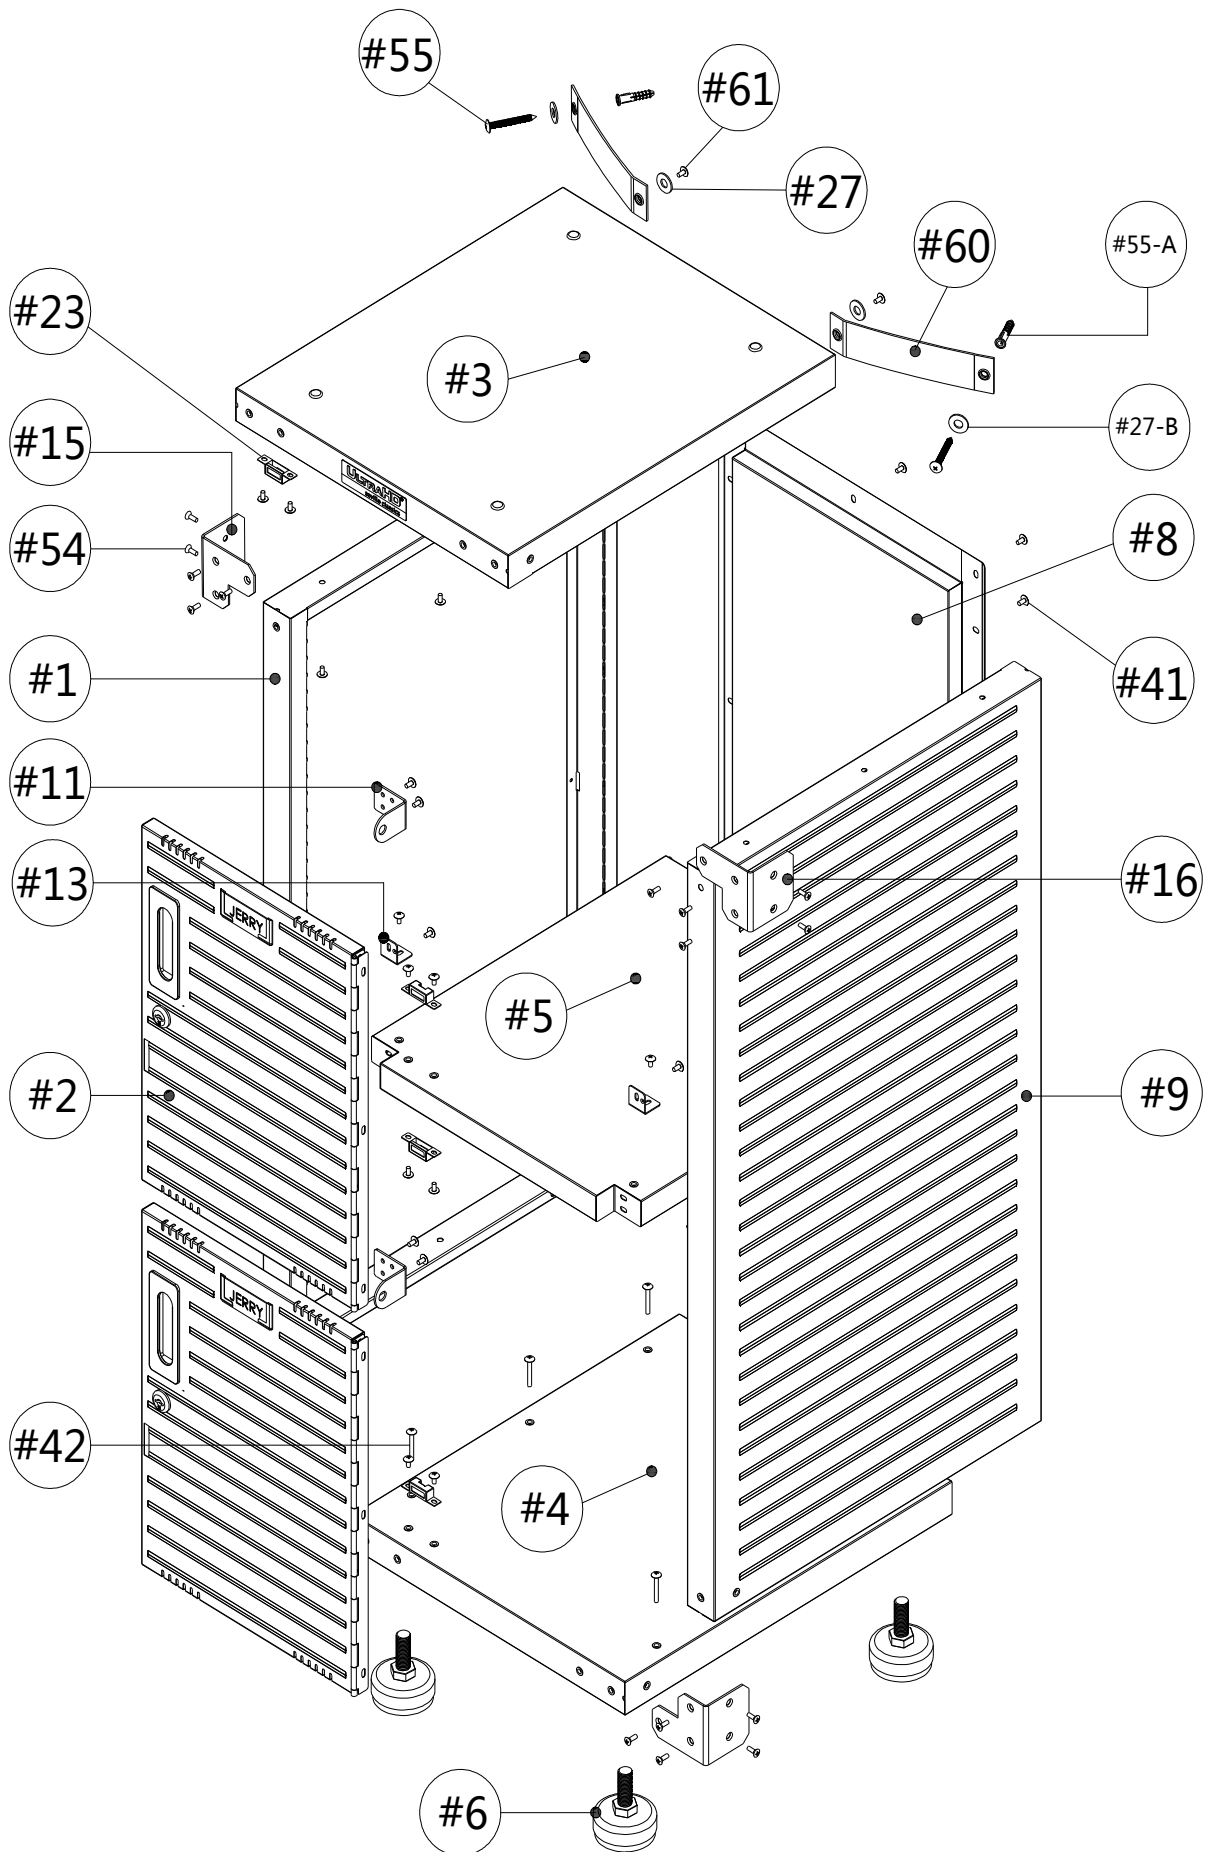


PARTS LIST


Please check the parts carefully according to the parts list. If you are missing any parts, please contact our customer service department. (please refer to page 9) .

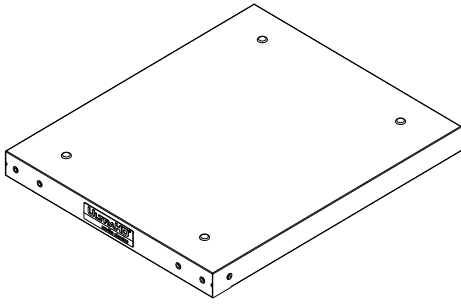


(#3) Top Panel x 2PCS

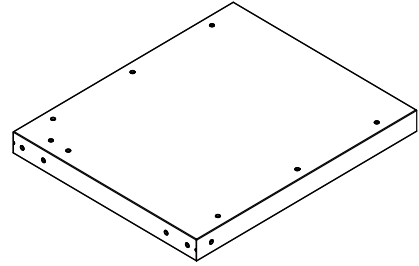


(#4) Bottom Panel x 2 PCS

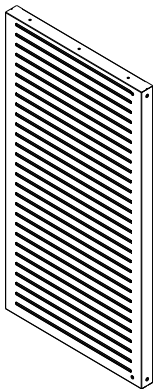


(#1) Left Side Panel x 2 PCS

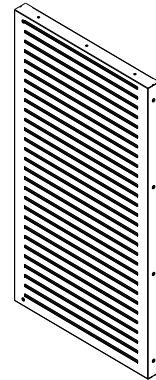


(#9) Right Side Panel x 2 PCS

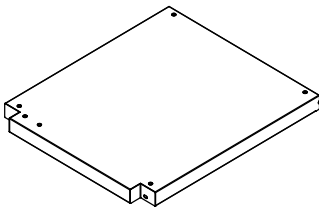


(#5) Middle Shelf x 2 PCS



(#8) Back Panel x 2 PCS

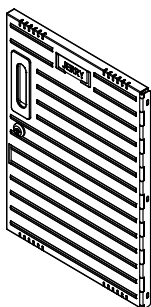











(#2) Door Panel x 4 PCS

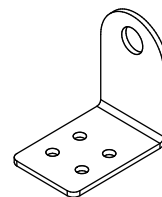

(#11) Lock Plate x 4 PCS









PARTS LIST

Please check the parts carefully according to the parts list. If you are missing any parts, please contact our customer service department. (please refer to page 9) .

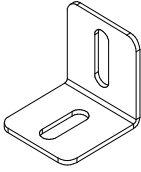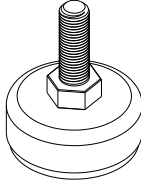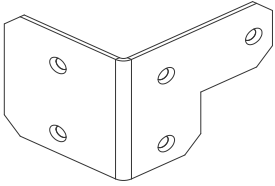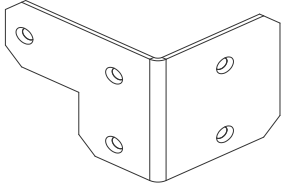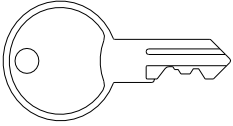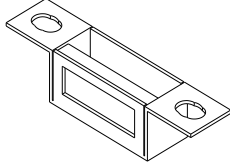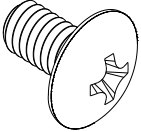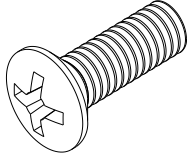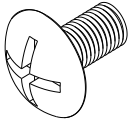	
(#13) Middle Shelf Bracket x 4 PCS	(#6) Leveling Feet x 8 PCS
	
(#15) Corner Protection-A x 4 PCS	(#16) Corner Protection -B x 4 PCS
	
(#22) Key x 8 PCS	(#23) Magnet x 8 PCS
	
(#41) Screw F (M4 x 8L) x 88 PCS	(#54) Screw N (M4 x 10L) x 40 PCS
	
(#42) Screw G (M4 x 25L) x 12 PCS	(#61) Screw O (M4 x 12L) x 4 PCS

PARTS LIST


Please check the parts carefully according to the parts list. If you are missing any parts, please contact our customer service department. (please refer to page 9) .

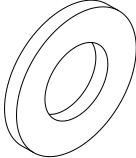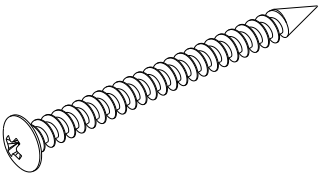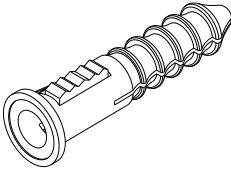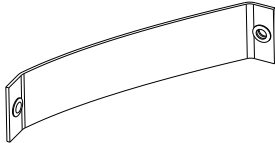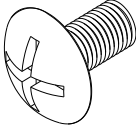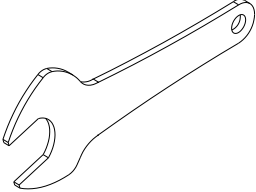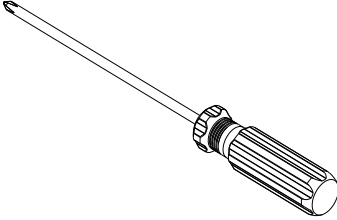	
#27-B) WASHER (M8) x 4 PCS	#27) WASHER (M4) x 4 PCS
	
#55) Screw M (M6 x 50L) x 4 PCS	#55-A) Wall Anchor x 4 PCS
	
#60) Mounting Strap x 4 PCS	#50) SCREW I (M6 x 15L) x 4 PCS
	
#25) Wrench x 1 PC	#21) Screw Driver x 1 PC
	
#62) Name Card x 4 PCS	

UltraHD 4-Door Locker Cabinet, Model No. 20297(B), 20298(B), 20299(B), 20290(B)




*NOTE: We recommend using TWO people to assemble the cabinet.

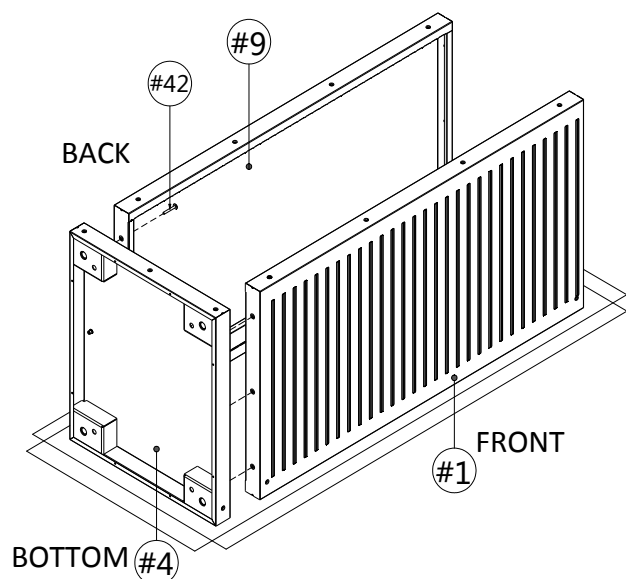

Step 1. Install (#4) Bottom Panel, (#1) Left Side Panel and (#9) Right Side Panel

Place the (#4) Bottom Panel to (#1) Left Side Panel and (#9) Right Side Panel, line up screw holes, use 6 pcs of (#42) Screw G (M4 x 25L) and (#21) Screw Driver to tighten.

Note : Before tightening screws, make sure all parts are completely flush with the surface .

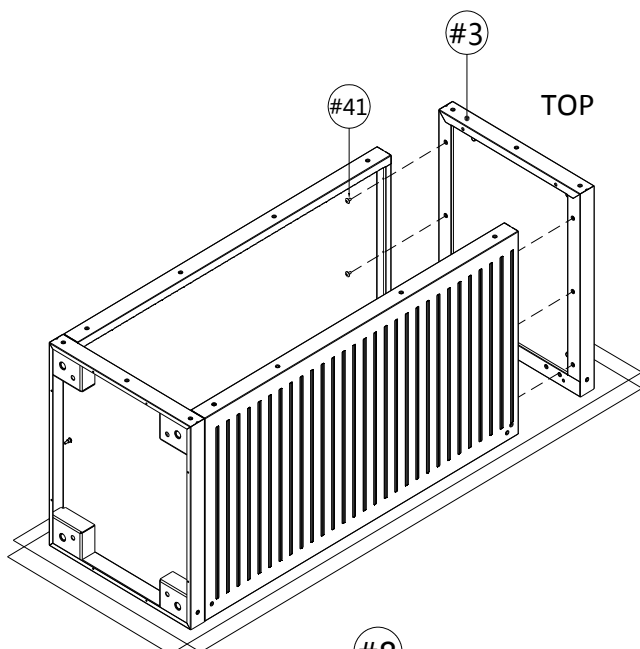


Step 2. Install (#3) Top Panel

1. Place the (#3) Top Panel to (#1) Left Side Panel, line up screw holes, use 3 pcs of (#41) Screw F (M4 x 8L) to tighten.

2. Place the (#9) Right Side Panel to (#3) Top Panel, line up screw holes, use 3 pcs of (#41) Screw F (M4 x 8L) to tighten.

Note : Before tightening screws, make sure all parts are completely flush with the surface.

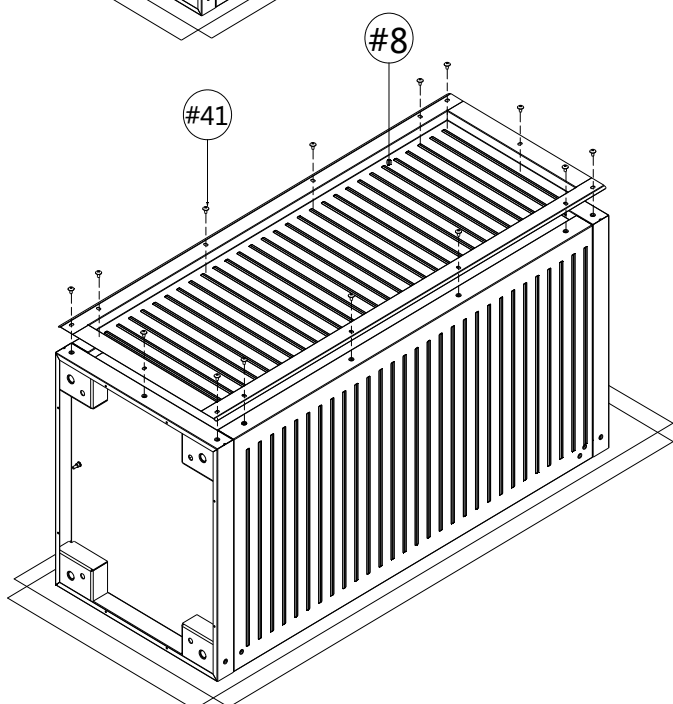

Step 3. Install (#8) Back Panel


Align (#8) Back Panel with the back of box, line up screw holes, use 14 pcs of (#41) Screw F (M4 x 8L) to tighten.

Note: Do not fully tighten any of the screws until all screws are partially screwed in first.

UltraHD 4-Door Locker Cabinet, Model No. 20297(B), 20298(B), 20299(B), 20290(B)




*NOTE: We recommend using TWO people to assemble the cabinet.

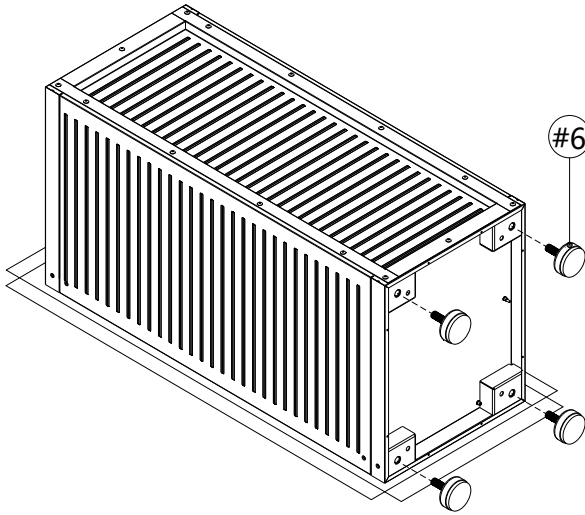

Step 4. Install (#6) Leveling Feet


Install Leveling Feet (#6) into the largest corner holes of the Bottom Panel (#4). Use Wrench (#25) to tighten.

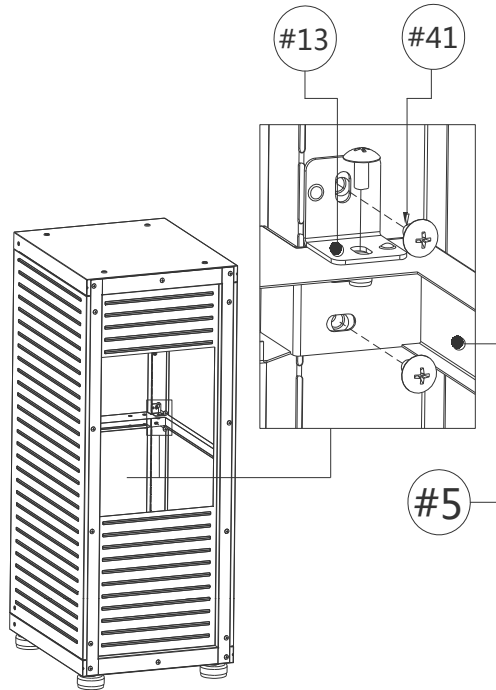

Step 5. Install (#5) Middle Shelf

Insert a Middle Shelf (#5) into the slots on the Side Panels. Use 6 pcs of Screw F (#41) to fasten the Middle Shelf Bracket (#13) to the front of the side panels.

Note: There is a screw hole at the bottom of the shelf as illustrated above.

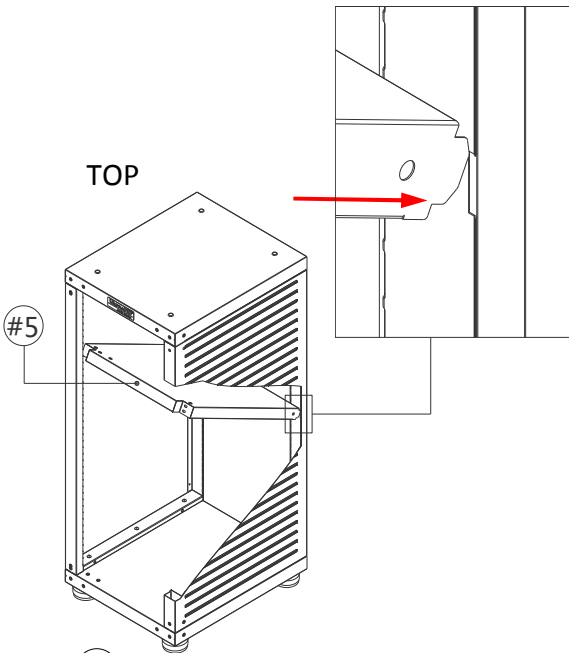


Step 6. Install (#15) & (#16) Corner Protections A & B

1). Attach (#15) Corner Protection A on Left upper and Right Bottom Corner of the cabinet, use 10pcs of (#54) Screw N (M4X10L) to tighten.

2). Attach (#16) Corner Protection B on Right upper and Left Bottom Corner of the cabinet, use 10pcs of (#54) Screw N (M4X10L) to tighten.

Note: Do not fully tighten any of the screws until all screws are partially screwed in first.

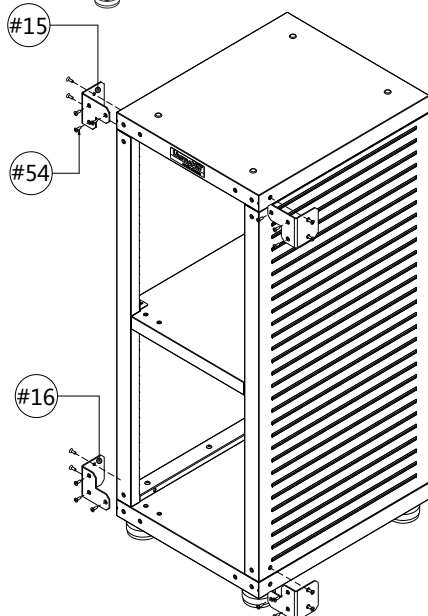

UltraHD 4-Door Locker Cabinet, Model No. 20297(B), 20298(B), 20299(B), 20290(B)




*NOTE: We recommend using TWO people to assemble the cabinet.




Step 7. Install (#11) Lock Plate

Place the 2pcs of (#11) Lock Plate on the inside front of the left side panel, line up screw holes, use 4 pcs of (#41) Screw F (M4 x 8L) to tighten. (As shown in the left picture).

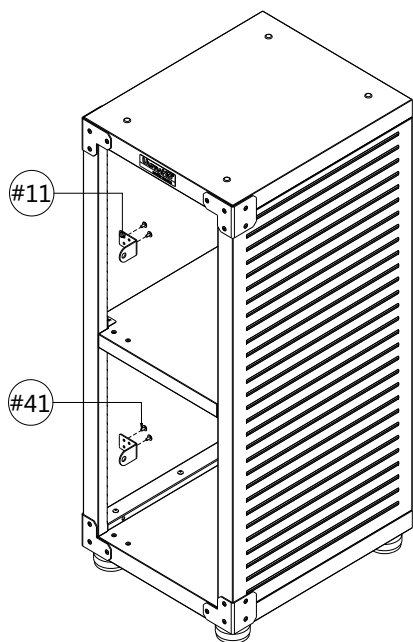

Step 8. Install (#23) Magnet

Place (#23) Magnet on (#3) Top Panel and (#4) Bottom Panel and (#5) middle shelf facing the front, use 8pcs of (#41) Screw F (M4 x 8L) to tighten.

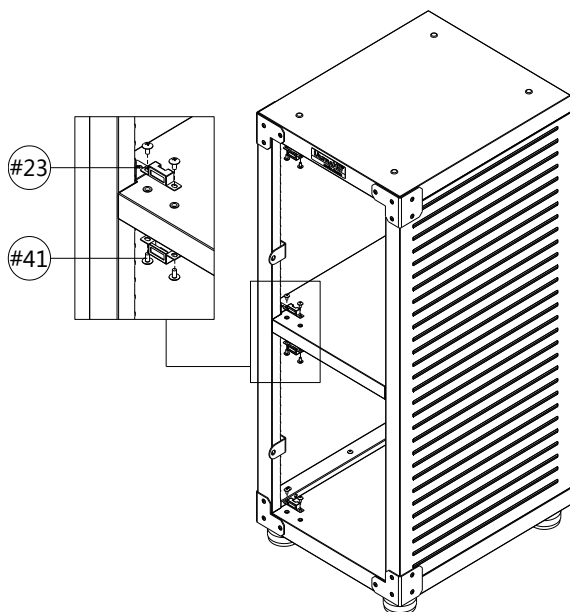


Step 9. Install (#2) Door Panel

Attach (#2) Door Panel to (#9) right panel, line up the screws holes, use 6 pcs of (#41) screw F (M4X8L) to tighten.

Repeat this step to assemble another door.

Note: There is some tolerance on the door hinge, enabling the door to be adjusted and centered in the door frame.

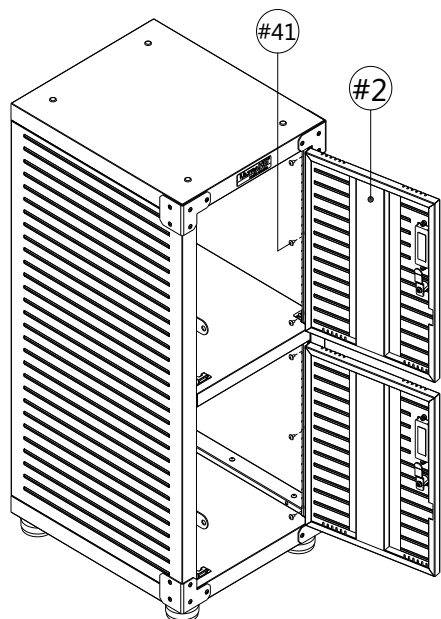


UltraHD 4-Door Locker Cabinet, Model No. 20297(B), 20298(B), 20299(B), 20290(B)



*NOTE: We recommend using TWO people to assemble the cabinet.



Step 10. Install Mounting Strap (#60)

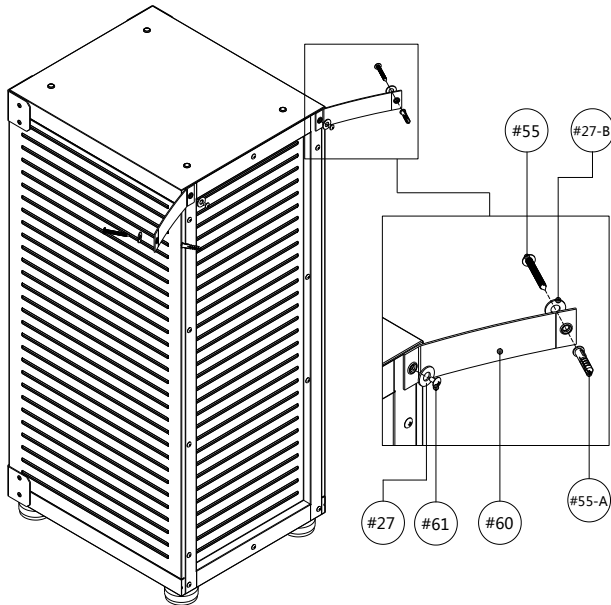

A. Remove 1 pc of Screw F (#41) from the back corner protection.

B. Attach the Mounting Strap (#60) to the back Corner Protection brackets as the left photo shows using Screw O (#61) and Washer (#27).

C. Drill a hole in the wall with a 5/16" drill bit, insert the Wall Anchor (#55-A) into the hole.

D. Attach the other end of the Mounting Strap (#60) to the wall using Screw M (#55) and Washer (#27-B).


Repeat steps A through D to install the other mounting strap.

Repeat step 1-10 to assemble another cabinet. If stacking is needed, do not install Leveling Feet in step 4.

Step 11. Stack up and down installation mode

1. Remove four rubber plugs (A) from the bottom top.

2. Align upper and bottom Cabinet, line up screw holes, use 4 pcs of (#50) screws I (M6X15L) to tighten, from top of bottom cabinet to bottom of upper cabinet .

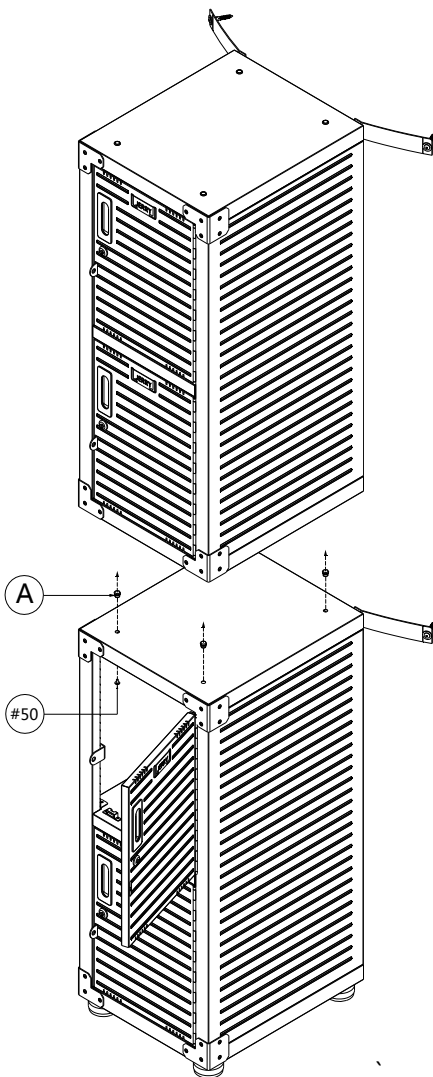

UltraHD® Stainless Steel Care Instructions

The stainless steel is protected with UltraGuard® fingerprint resistant finish. DO NOT use traditional stainless-steel cleaners. To safely manage unwanted fingerprints and prevent new stains, perform the following steps once monthly:

- Lightly wipe with warm water and clean microfiber cloth
- Always wipe in the direction of the surface grain (NEVER ACROSS)
- Wipe away excess water with dry clean cloth

CONTACT INFORMATION


If you are missing any parts, have any questions, or need additional assistance in assembly, please contact our bilingual (English and Spanish) customer service department at:




Seville Classics, Inc.
19401 Harborage Way Torrance, CA 90501 USA
Telephone: (800) 323-5565 within USA
Fax: (310) 533-3899
Hours: 9:00am - 4:30pm (Pacific Standard Time)
E-mail: support@sevilleclassics.com
Website & Online Store: www.sevilleclassics.com

*****Please visit our website or call and inquire about our additional UltraHD Line*****

UltraHD® Line

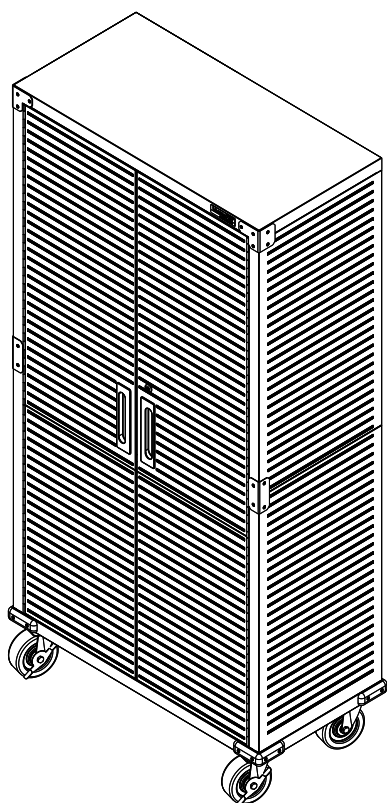


UltraHD® Tall Storage Cabinet
Model No. 16236 (Granite)
Model No. 20143 (Graphite)
Model No. 20153 (Red)
Model No. 20133 (White)

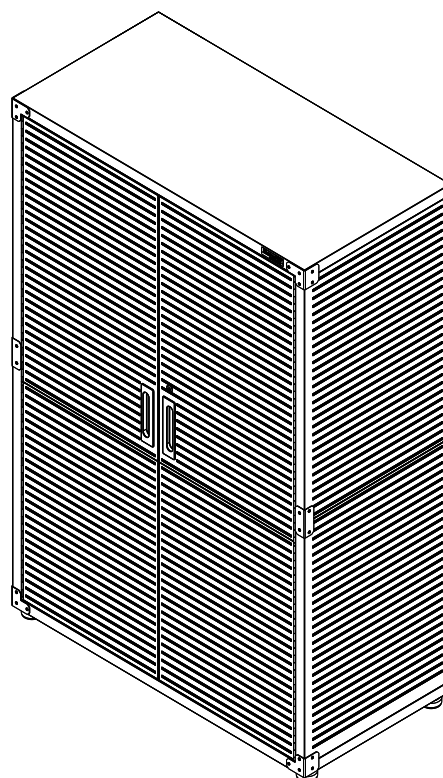


UltraHD® Mega Storage Cabinet
Model No. 16238 (Granite)
Model No. 20148 (Graphite)
Model No. 20158 (Red)


UltraHD® Line

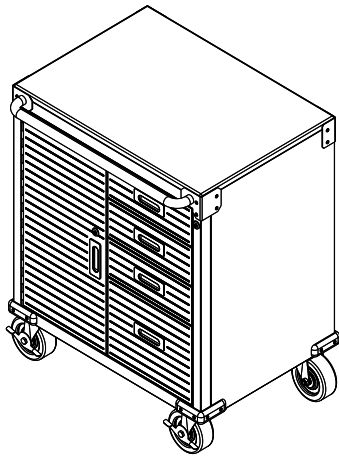


UltraHD® 4-Drawer Rolling Cabinet
Model No. 20205 (Granite)

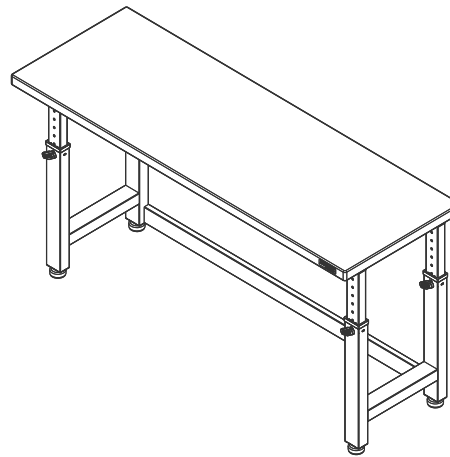


UltraHD® 6-Foot Height Adjustable Workbench
Model No. 20292 (Granite)
Model No. 20293 (Graphite)

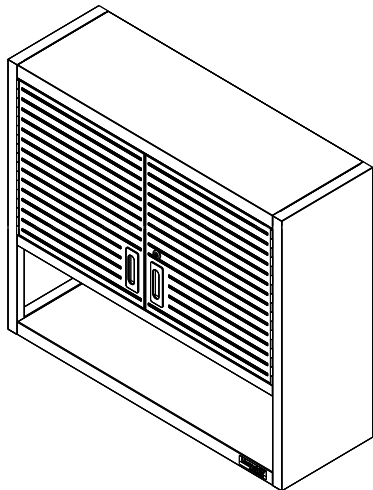


UltraHD® Wall Cabinet with Open Shelf
Model No. 20230 (Granite)
Model No. 20140 (Graphite)
Model No. 20150 (Red)

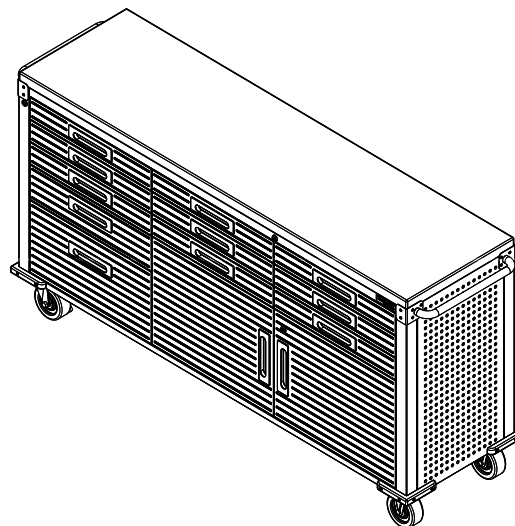

UltraHD® 2-Door Rolling Workbench
Model No. 20262 (Granite)
Model No. 20142 (Graphite)
Model No. 20152 (Red)

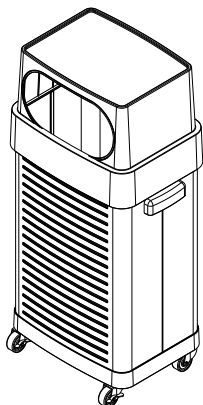

UltraHD® Rolling Trash Bin
Model No. 20215

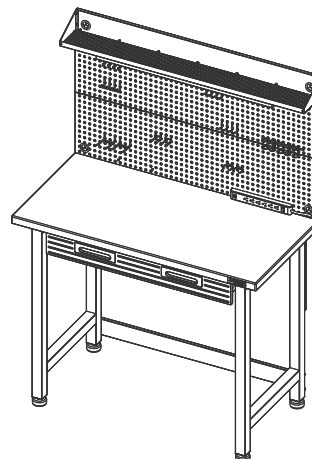

UltraHD® Lighted Workcenter
Model No. 20247 (Granite)
Model No. 20246 (Graphite)
Model No. 20157 (Red)