



JETKART 2.0

- MANUAL -

TABLE OF CONTENTS

Introduction	3
In the Box	4
Assembly	5
Attaching to Hoverboard	6
Getting On	7
How to Ride	8
Safety Warnings	9
Warranty	10
Product Registration	11

INTRODUCTION

This manual will tell you all you need to know about your new JetKart 2.0, from what's in the box and how to put it all together, to how use it safely. Please read it carefully before your first ride. The more you know about riding safely, the better to avoid collisions, falls, loss of control, and other events that might cause injury. Remember, you're the one responsible for how you use the JetKart 2.0.

Also, before you get going be sure to check for damaged wheels, loose parts, and anything else you think might be a problem. If something doesn't look right to you, please contact Jetson Customer Support at 1-888-976-9904, or email customerservice@jetsonbike.com.

Jetson and our authorized dealers can't be held liable for injury or damage caused by riding the JetKart 2.0. The rider is responsible for the consequences of ignoring warnings and improper operation of the JetKart 2.0.

If you want to return this product for any reason, be sure to first call or email us before taking it back to the store.

IN THE BOX



x10 Bolts x10 Nuts x10 Washers








ASSEMBLY

Assembly should take approximately 15 minutes.


1. Place the Tire Bracket over the matching holes on the Foot Rest Frame.

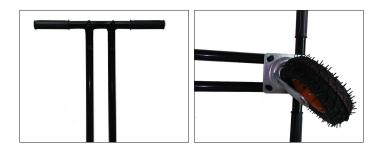

2. Thread a large bolt and washer through each hole in the Tire Bracket, and attach a nut to the other side. Attach the Tire to the Foot Rest Frame by tightening the nut using the included Wrench and Allen Key.



3. Slide the Left Joystick onto the Seat Frame. Insert a large bolt and washer through, and tighten using a nut and the included Wrench and Allen key. Repeat on the right side with the Right Joystick.

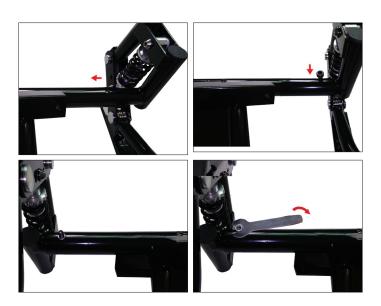

4. Line the holes of the Seat up with the corresponding holes in the Seat Frame. Attach the Seat to the Seat Frame using four small bolts and the included Allen Key.







5. Insert the Foot Rest Frame tubes into the Seat Frame tubes. Attach the Foot Rest Frame to the Seat Frame by fastening the clamps.





6. Place the JetKart 2.0 parallel to the hoverboard, resting the adjustable brackets on the top pads of the hoverboard. We highly recommend loosening the brackets before placing them on the hoverboard. Once the brackets are gripped to the hoverboard, please tighten the nut using the included wrench.





7. Hook one end of the velcro strap to the front of the bracket at the base. Then pull the strap underneath the hoverboard and attach the other end of the velcro strap to the back of the bracket at the base. Pull the strap ensuring it is as tight and secure around the hoverboard as possible. Repeat this step with the other bracket, making sure that both velcro straps are securely connected to the brackets and snug around the bottom of the hoverboard.







GETTING ON THE JETKART 2.0

- 1. Before taking your seat, make sure your hoverboard is charged. Then place it on a leveled surface, facing up and turned off.
- 2. Carefully lower yourself into the seat. Then place your feet, first one then the other, on the footrests. That way your weight can balance out the JetKart 2.0 and keep you from falling backwards.
- 3. Once you're seated, look down and make sure the hoverboard is horizontal and facing up. After you've followed all these steps, you can turn on the hoverboard. (Please note: if the hoverboard is not horizontal, and you turn on the device, it will go forward or backwards instantly upon turning on.)

HOW TO RIDE THE JETKART 2.0

- 1. Slowly push down on both handlebars to move forward.
- 2. Push down on the right handlebar to turn left, and push down on the left handlebar to turn right.
- 3. Apply more force pushing the handlebars down to accelerate, and pull the handlebars up to slow down.









Remember, when first using your JetKart 2.0 be sure to start slow and put very light pressure on the handle bars. Applying more pressure on the handle bars will make the JetKart 2.0 accelerate more rapidly.

SAFETY WARNINGS

- Children, the elderly, and pregnant women should not use the JetKart 2.0.
- Do not ride after drinking or taking prescription medication.
- Do not carry items when riding.
- Prior to each ride, inspect each part of the JetKart 2.0 that you're using to ensure it has been maintained correctly and is functioning properly.
- Always give way to pedestrians.
- Always comply with local traffic laws and regulations. Remember, the JetKart 2.0 is a motor vehicle, and is treated as such by local law enforcement. You can and will be arrested for drunk driving. Many cities have restrictions on where you can drive motor vehicles, as well as additional restrictions on driving non-automobiles on streets and highways.
- Be alert to things in front and far away from you.
- Make sure your feet are always placed securely on the foot rests.
- The JetKart 2.0 cannot be ridden by two or more people. Only one person can ride at a time.
- A rider may not weigh less than 45 lbs. The JetKart 2.0 is unable to operate properly with such a rider, especially on downhill terrain where the driver will be unable to reduce speed or stop safely.
- When you ride the JetKart 2.0 along with other hoverboard users, always keep a safe distance to avoid a collision.
- When turning, be sure to maintain your balance.
- Do not allow distractions when riding, such as answering the phone or engaging in any other activities.
- Do not ride in the dark.
- Avoid riding in the rain or on smooth surfaces such as snow, ice, and slippery floors.
- Do not ride on roads with obstacles (such as twigs, litter, small stones, etc.).
- Avoid riding in narrow spaces or on steep slopes.
- Avoid riding around flammable gas, steam, liquid, or dust that could cause fire.

CALIFORNIA WARNING

This product contains chemicals, including lead, which are known to the state of California to cause cancer, birth defects, and other medical conditions.

MODIFICATIONS

Do not attempt to disassemble, modify, repair, or replace the JetKart 2.0 unit or any components of the unit. This will void any warranty, and can lead to malfunctions which may cause injury.

ADDITIONAL OPERATION CAUTIONS

Do not lift the JetKart 2.0 off the ground while it is in operation and the wheels are in motion. This can result in freely spinning wheels, which may cause injury to yourself or others nearby. Do not jump on or off the JetKart 2.0, and do not jump while using it. Always keep your feet firmly planted on the JetKart foot rests while in operation. Always check battery charge of hoverboard before use. Do not ride when battery is low.

LIMITED 1 YEAR WARRANTY

TO QUALIFY FOR WARRANTY SERVICE:

- 1. You must present a copy of the sales receipt from an approved retail partner within 90 days of purchase.
- 2. This product cannot be used for rental or commercial use.
- 3. This product cannot be used for competition.

LIMITATIONS OF LIABILITY

- This Limited 1 Year Warranty is non-transferable after the product's initial sale.
- No unapproved modifications can be made to the product, its performance or otherwise, in order for this Limited 1 Year Warranty to remain in effect.
- No reimbursement is provided for towing, loss of time, loss of use, inconvenience, incidental or consequential damages.
- Warranty is void if weather related water damage is determined. Owner is responsible for storage and protection from weather.
- Jetson® makes no warranty with respect to products or trade accessories not made by Jetson®, including, but not limited to, motors, tires, wheels, and batteries, such products or trade accessories, such items being subject to the original manufacturer's warranty, if any.
- This Limited 1 Year Warranty does not cover minor surface blemishes, rips, tears, or other cosmetic damages due to normal use, or other intentional or unintentional damage to the product.
- This Limited 1 Year Warranty will not cover any damage which results from the application of improper cleaners, solvents or chemicals to the product, water damage, smoke or soot, or from exposure to saltwater, sea breeze or salt.
- This Limited 1 Year Warranty will not cover any damage which results from aging, such as fading of paint, deterioration of plated surfaces, deterioration of rubber or plastics, or rusting.
- This Limited 1 Year Warranty does not cover improper repair or misdiagnoses of problems.
- This Limited 1 Year Warranty only covers parts due to manufacturer defect.
- Damage due to misuse or neglect, use other than as specified in the Owner's Manual, or use under abnormal conditions are not covered by this Limited 1 Year Warranty.

OWNER'S WARRANTY RESPONSIBILITIES

As the device's owner, you are responsible for the performance of the required maintenance. You may be denied a warranty claim solely because of your failure to ensure the performance of all scheduled maintenance. As the owner, you should be aware that you may be denied your warranty coverage if your device or a part has failed due to abuse, neglect, improper maintenance, or unapproved modifications. For any issue regarding your Jetson® product, call toll free 1-(888) 976-9904, or email customerservice@jetsonbike.com.

PRODUCT REGISTRATION

Please complete and mail this card within 10 days of purchase.	
Name:	
Age:	
Address:	
City, State, Zip:	
Email:	
Home Phone:	_ Work Phone:
Purchase Date:	Purchased From:
Serial Number:	
Gender: Occupation:	
Is this your first Jetson product?	
Other similar product owned before:	
How did you hear about the Jet Kart 2.0? _	

Attention: Product Registration Jetson Electric Bikes 1 Rewe Street Brooklyn, NY 11211

Complete this form and mail it to:





JETKART 2.0