




Assembly Instructions & User's Manual
Replacement Mat for /JUMP ZONE & AGame 12ft Trampoline
166050

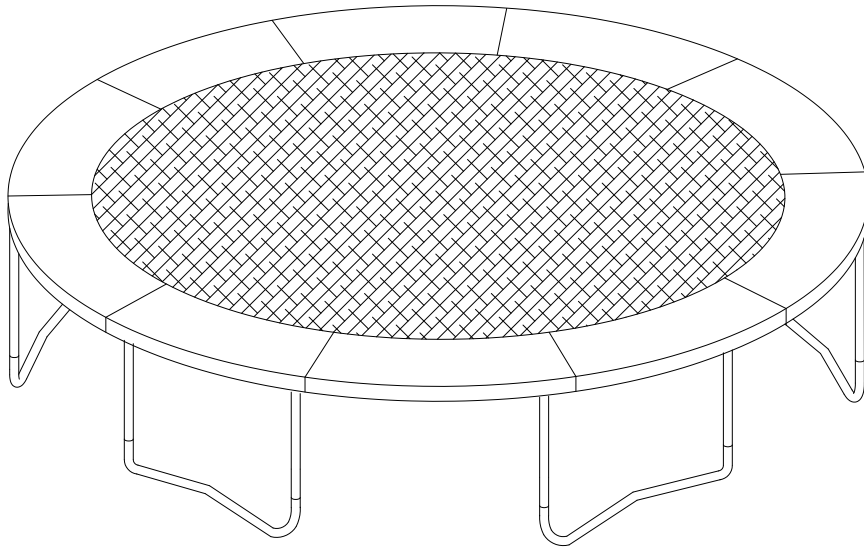

Please keep this instruction manual for future reference

⚠ WARNING

YOU MUST THOROUGHLY READ AND UNDERSTAND INSTRUCTIONS IN THIS MANUAL BEFORE ASSEMBLING AND USING THIS TRAMPOLINE MAT.

SAVE THIS MANUAL FOR FUTURE REFERENCE.

MAXIMUM WEIGHT OF THE USER SHALL NOT EXCEED 220LBS/100KGS.

DO NOT ALLOW CHILDREN TO USE UNLESS SUPERVISED BY AN ADULT.

DO NOT ALLOW MORE THAN ONE PERSON ON THE TRAMPOLINE AT A TIME.

ADULT SUPERVISION IS RECOMMENDED AT ALL TIMES

THIS MAT WAS DESIGNED TO FIT THE 12 FT TRAMPOLINE (157665/163035).

DO NOT USE WITH OTHER TRAMPOLINE BRANDS. USING THIS MAT WITH OTHER TRAMPOLINE BRANDS MAY RESULT IN INJURY OR DEATH.

For Customer Service, please call [1-866-370-2131](tel:1-866-370-2131) or visit www.sportspowerltd.net

Monday – Friday 9:00 AM – 5:00 PM Eastern Time

Sportspower Ltd.

Level 20, Parkview Centre, 7 Lau Li Street, Causeway Bay, Hong Kong

Table of Contents

Warnings.....	2
Tools and Parts.....	3
Assembly Instructions.....	4
Care and Maintenance.....	7
Warranty Information.....	8

Note: Before beginning assembly of product, make sure all parts are present. Compare parts with package content list and hardware contents. If any part is missing or damaged do not attempt to assemble the unit. Contact customer service for replacement parts.

Warnings

ASSEMBLY AND INSTALLATION INSTRUCTION



WARNING

PLEASE READ THE ENTIRE INSTRUCTION BOOKLET BEFORE YOU ASSEMBLE OR USE THIS TRAMPOLINE MAT.



WARNING

If you do not follow these guidelines, you increase the risk of someone getting injured.

Always inspect the trampoline before each use for worn, abused or missing parts. A number of conditions could arise that may increase your chances of getting injured. Please be aware of:

- Punctures, frays, tears, or holes worn in the bed or frame padding;
- Damaged, missing, or insecurely attached frame pad.

IF YOU FIND ANY OF THE PREVIOUS CONDITIONS, OR ANYTHING ELSE THAT YOU FEEL COULD CAUSE HARM TO ANY USER, THE TRAMPOLINE SHOULD BE DISASSEMBLED OR SECURED FROM USE UNTIL THE CONDITION(S) HAS BEEN RESOLVED.

USE INSTRUCTION



WARNING

You should always mount and dismount properly in order to avoid injury. To mount properly, you should place your hand on the frame and either step or roll up onto the frame, over the springs, and onto the trampoline mat. You should always remember to place your hands onto the frame while mounting or dismounting. Do not step directly onto the frame pad or grasp the frame pad. To dismount properly, move over to the side of the trampoline and place your hand onto the frame as a support and step from the mat to the ground. Smaller children should be assisted when mounting and dismounting the trampoline.



TRAMPOLINE PLACEMENT

For safe use of the trampoline, please be aware of the following when selecting a place for your trampoline:

- Make sure it is placed on a level surface
- The area is well-lit
- There are no obstructions beneath, above, or around the trampoline

If you do not follow these guidelines, you increase the risk of someone getting injured.

Parts List

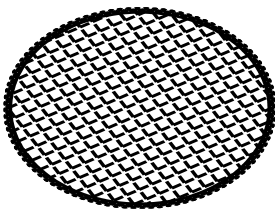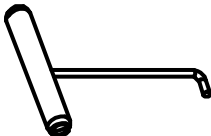Key Number	Description	Picture	Quantity
1	Trampoline Mat, stitched with Triangle-Rings		1
9	Spring Loading Tool		1

Assembly Instructions

WARNING


When attaching the springs, do not place your hands, arms, legs or any other body part close to the connector points (i.e. joints connecting the steel tubes). The connector points can become pinch points as the trampoline springs tighten up. Wear heavy duty working gloves to protect your hands from injuries during installation by the springs and protective goggles to avoid injuries to the eyes. Be steady when installing the springs as it can rebound and fly off if you inadvertently let go when not hooked properly. Make sure no children are playing nearby when installing the trampoline.

NOTE: Start Point 1 above a leg socket and in front of the mat warning label for ease of spring counting. The warning label should be positioned where the netting entrance is intended so it will be visible as the user enters the trampoline.

Step 1 – Spring Assembly (Springs not included)

- To install the springs, hook one end of the Spring (#7) into the triangle-ring on the Mat (#1), then pull the other end with the Spring Loading Tool (#9) underhand and latch it into the corresponding hole on the frame. Tap on the spring with the handle of the Spring Loading Tool to make sure it is securely latched.
- There are a total of 72 springs, For even distribution of spring tension and ease of assembly, the springs must always be installed on opposite sides of the mat in an alternating manner, i.e. 1, then 37, followed by 19 and 55 as shown below.


Hint: The number of triangle-rings sewn onto the Mat is equal to the number of holes on the frame. If you notice that you have miscounted a hole or triangle-ring, remove and reinstall the springs as necessary while maintaining an even distribution of tension as explained above.

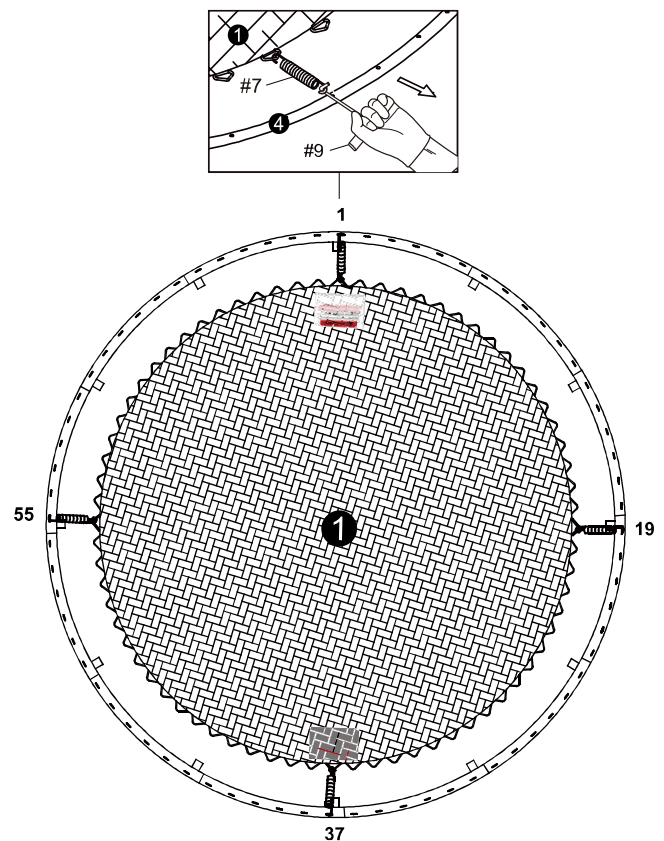

Assembly Instructions


Step 2

Continue to attach springs in the same manner. For even distribution of tension and ease of assembly, the springs must be placed on opposite sides of the mat in an alternating manner, i.e. 10 then 46, 28 then 64, etc. In addition to the previously installed springs, you should now have springs at 10, 28, 46 and 64 as shown.

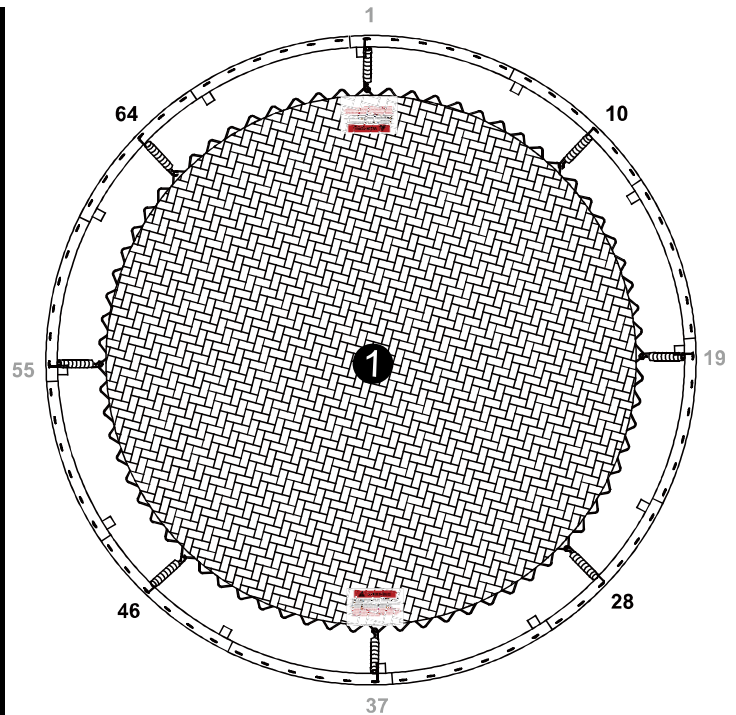


Step 3

Continue to attach springs in the same manner. For even distribution of tension and ease of assembly, the springs must be placed on opposite sides of the mat in an alternating manner, i.e. 5 then 41, 14 then 50, 23 then 59, 32 then 68, etc. In addition to the previously installed springs, you should now have springs at 5, 14, 23, 32, 41, 50, 59 and 68 as shown.

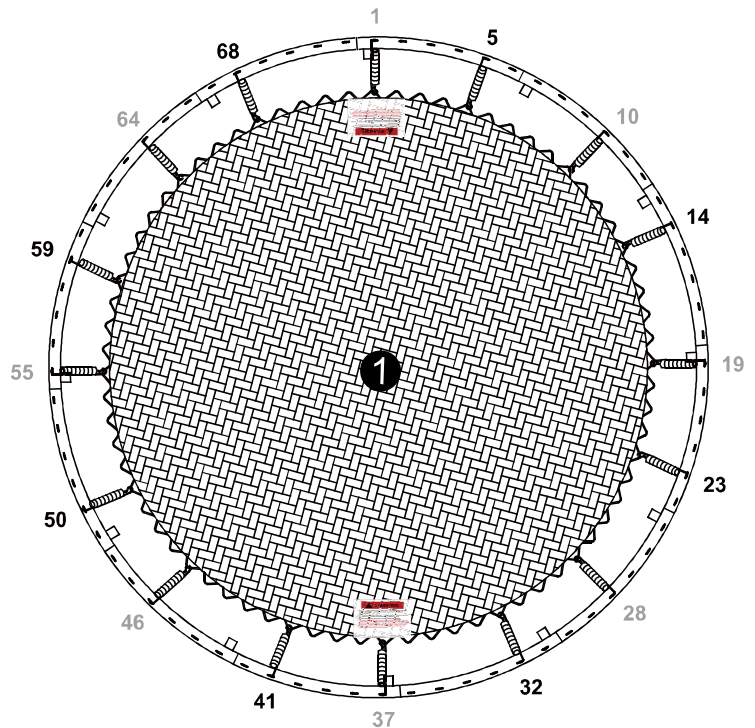

Step 4

Continue to attach the remaining springs in the same manner as the previous step, i.e. the springs must be placed on opposite sides of the mat in an alternating manner to ensure even distribution of tension.

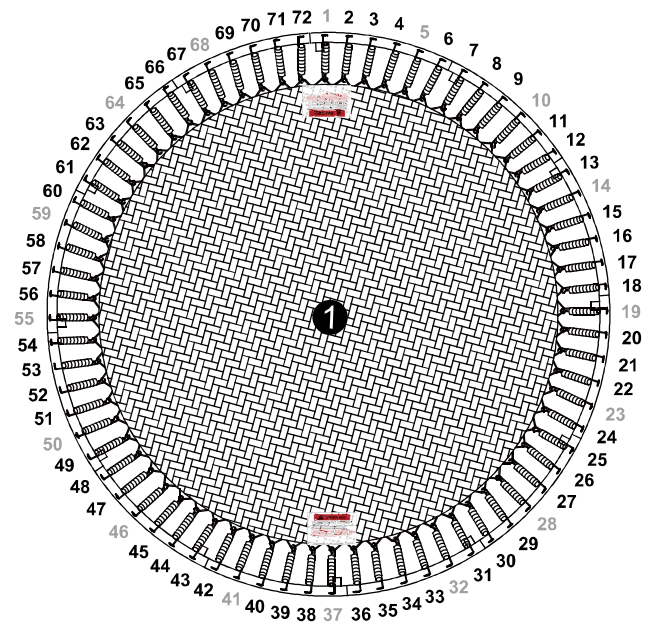

IMPORTANT NOTICE: Do not use trampoline if even one spring or triangle-ring is damaged or missing.

CARE AND MAINTENANCE

This trampoline mat was designed and manufactured with quality materials and craftsmanship. Any type of sharp or pointed objects should be kept off the trampoline mat at all times.

Please be aware that the following could present potential hazards:

JUMPING MAT

- Punctures, frays, tears or holes worn in the jumping mat.
- Deterioration in the stitching of the jumping mat.
- Sagging jumping mat.
- Snow on the jumping mat will stretch springs.
- Jumping beds must be kept free of dirt particles and sand.
- Clean bed surface with cold water but do not use soaps, detergents or chemical cleaners.
- Mat can be damaged by belts with large buckles or pants with rivets. Mat is not resistant to scratching.
- Shoes should not be worn while using the trampoline. Wear a gymnastic slipper or jump barefoot.
- The mat and safety pad are not fire retardant. Keep trampoline away from fire, sparks and fireworks.
- Sun can deteriorate the mat fabric and stitching.

WINTER

In areas where there is ice and snow, it is recommended that the trampoline be disassembled and stored for the winter.



WARNING!!

IF YOU FIND ANY OF THE PREVIOUS CONDITIONS, OR ANYTHING ELSE THAT YOU FEEL COULD CAUSE HARM TO ANY USER, THE TRAMPOLINE SHOULD BE DISASSEMBLED OR SECURED FROM USE UNTIL THE CONDITION(S) HAS BEEN RESOLVED.

PLEASE READ ENTIRE INSTRUCTION BOOKLET BEFORE YOU USE THIS TRAMPOLINE MAT.

SPORTSPOWER LTD. warrants its trampoline mat to be free from defects in material and workmanship under normal use and service conditions. The mat is warranted for ninety (90) days after the date of purchase.

All warranty coverage extends only to the original retail purchaser from the date of purchase. SPORTSPOWER'S obligation under this Warranty is limited to replacing at SPORTSPOWER'S option. All products for which a warranty claim is made must be received by SPORTSPOWER'S authorized service center, freight prepaid, and accompanied by sufficient proof of purchase. All returns must be preauthorized by SPORTSPOWER. Preauthorization may be obtained by calling SPORTSPOWER Customer Hot Line at **1-866-370-2131**. This Warranty does not extend to any product or damage to a product caused by or attributable to freight damage, abuse, misuses, improper or abnormal usage, or repairs not provided by a SPORTSPOWER authorized service center, or to products used for commercial or rental purposes. No other Warranty beyond that specifically set forth above is authorized by SPORTSPOWER.

SPORTSPOWER IS NOT RESPONSIBLE OR LIABLE FOR INDIRECT, SPECIAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THE PRODUCT OR OTHER DAMAGES WITH RESPECT TO ANY ECONOMIC LOSS, LOSS OF PROPERTY, LOSS OF REVENUE OR PROFITS, LOSS OF ENJOYMENT OR USE, COST OF REMOVAL, INSTALLATION OR OTHER CONSEQUENTIAL DAMAGES. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES. ACCORDINGLY, THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

THE WARRANTY EXTENDED HEREUNDER IS IN LIEU OF ALL OTHER WARRANTIES AND ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE IS LIMITED IN ITS SCOPE AND DURATION TO THE TERMS SET FORTH HEREIN. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS. ACCORDINGLY, THE ABOVE LIMITATION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE. THIS WARRANTY IS VALID ONLY IN THE UNITED STATES.

For Customer Service, please call [1-866-370-2131](tel:1-866-370-2131) or visit www.sportspowerltd.net

Monday – Friday 9:00 AM – 5:00 PM Eastern Time

Sportspower Ltd.

Level 20, Parkview Centre, 7 Lau Li Street, Causeway Bay, Hong Kong